This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

+ *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.

+ *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.

+ *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.

+ *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at `http://books.google.com/`

Gov 3119.07

Harvard College Library

Transferred from
Social Ethics Library

MUNICIPAL IMPROVEMENTS.

A MANUAL

OF THE

METHODS, UTILITY, AND COST OF PUBLIC IMPROVEMENTS,

FOR THE

MUNICIPAL OFFICER.

BY

W. F. GOODHUE,

CIVIL ENGINEER.

THIRD EDITION, REVISED AND ENLARGED.

FIRST THOUSAND.

NEW YORK:

JOHN WILEY & SONS.

LONDON: CHAPMAN & HALL, LIMITED.

1907

Gov 3119.07

26 July 1907
Harvard University.
Dept. of Social Ethics.

Harvard College Library
Sep. 24, 1915
Transferred from
Social Ethics Library

COPYRIGHT, 1893,
BY
W. F. GOODHUE.

ROBERT DRUMMOND, PRINTER, NEW YORK.

To my Friend

The Honorable Frederick Schuette,—

A Merchant of Manitowoc, Wis.; twice successively
elected to the Mayoralty of that City;
an earnest, judicious Advocate of Municipal Improvements,
which are essential to public prosperity;
economical and progressive in the discharge of
his administrative duties,—
This work is respectfully dedicated by
The Author.

PREFACE TO THE THIRD EDITION.

THE essence of practical politics is a businesslike management of municipal affairs, and this idea has come to the fore with an amazing strength in the last half decade.

To bring this work into line with these better conditions the author believed it desirable to embody the results of his experience and observations in municipal work, and also to revise the chapters which appeared in the first edition.

This has been done, and there are now thirty chapters in the book, seven more than appeared in the first edition. The chapter on Street Surfaces has been entirely rewritten; it now treats more in detail of different kinds of pavements and is in harmony with the best practice concerning these improvements.

The new chapters on Elevated Traffic *vs.* Subways, Civil-service Appointments, and Municipal Ownership are offered, not for controversial reasons, but as "notes by the wayside" on the forward march of these great and growing essentials of modern urban life.

The favorable reception this work has hitherto received by municipal officers and others who are interested in improved conditions in localities where homes are the environment of business life and activity is of itself very gratifying to

THE AUTHOR.

MILWAUKEE, WIS., June 23, 1900.

PREFACE.

THE writer of this work has avoided to a certain extent the use of technical words and phrases, also mathematical tables and formulæ, because it is intended for the non-professional reader.

Once in every year throughout our broad land there are chosen, from among the citizens of every city and town, a number of councillors who will sit in the council chamber and assist the chief magistrate in the government of the municipality which they represent. The members of the council are perhaps familiar with the general plan and scope of the various public improvements contemplated during their administration, but of the details of the work proposed they are uninformed. It is in the nature of things that this should be so; their education and training have been in other work and its rewards. Yet, being men of affairs, they will not hesitate to seek such information regarding any proposed improvements as will enable them to discharge their official duties in a manner that will be commended by their constituents.

If the contents of this book can assist the prudent,

conscientious magistrate or councillor to secure, in a judicious and economical way, those improvements which are essential to the welfare and prosperity of a municipality, the writer will believe that his aim has been good, although the arrow may fall short of the mark.

W. F. GOODHUE.

MILWAUKEE, WIS., October 13, 1892.

CONTENTS.

	PAGE
Assessment, Methods	91
Asphalt Pavements	28
Bonds	113
Bridges	85
Bridge Masonry Highway	153
Building Laws and Ordinances	103
Brick Pavements	31
Cleanliness and Health	128
Cemeteries, Public	142
Civil-service Appointments	193
Coal Weight of	97
Concrete	96
Cost of Operating Water-works	68
Cost of Sewers	12
Culverts	117
City Hall Plans	120
Elevated Traffic *vs.* Subways	183
Fire Limits	101
Fire Streams	78
Franchises	79
Fire-re isting Construction	109
Gas Consumption	48
Grade of Sewers	98
Hydrant Pressures and Streams	78
Health and Cleanliness	128
Highway-bridge Masonry	153

PAGE
Implements for Street Work..... 44
Library A Public..... 168
Macadam Pavement..... 35
Miscellaneous Memoranda..... 95
Morgue A..... 177
Municipal Ownership..... 197
Parks, Public..... 160
Pipe, Cast-iron: Sizes and Weights..... 76
Pump Capacities for Small Cities..... 74
Sewerage Sy tems..... 1
Sewer Ventilation..... 15
Sewers, Cost of..... 12
Sidewalks..... 41
Standpipes: Static Pressures..... 71
Street Grades..... 53
Street Lighting..... 5
Street Lighting, Hours of..... 52
Street Railways..... 18
Street Sprinkling..... 23
Street Surfaces..... 26
Stone Pavements..... 39
Substances, Weight of..... 95
Walls, Thickness of..... 105
Water-pipe, Size and Weights..... 76
Water-works Systems..... 58
Wood Pavements..... 33

ILLUSTRATIONS.

Bridge Abutment, Diagram of..... 157
Burwood Cemetery, Plan of..... 146
Cellar Drainage, Diagram of..... 6
City Hall Plans..... 122, 123
Floor-section of Bridge, Part of..... 87
Interments, Form of Record of..... 151
Library Floor-plan of..... 172
Macadamized Street, Half Section of..... 37
Morgue, Floor-plan of..... 179
Standpipe Connection, Diagram of..... 66
Subsoil Water..... 131

MUNICIPAL IMPROVEMENTS.

A SEWERAGE SYSTEM.

A TOWN or city should have a sewerage system planned for its entire area, having in view at the time the work is done its prospective future population and enlarged area. It does not follow that because a plan is made for the whole city the entire system should be built at once; on the contrary, a sewerage system is never completed unless a city stops growing. When the main sewers are once built, the street sewers are put in street by street, a certain amount each year is laid, —just so much as the property owners on each street may petition for. Consequently the expenditures and growth of the sewer work of a city are almost entirely in the hands of the property owners. In fact, in some of our smaller cities the sewer work done is altogether too much in the hands of the property owner: he not only controls the laying of sewers, but dictates their course, depth, and outfall; and the result of it all is: there is a sewerage system for every two or three blocks, and

the banks of lake or stream are perforated with stinking outlets of sewers. After such work has once fairly begun in a town or city it is difficult for the council to check it; indeed it cannot be checked without causing some bitterness of feeling: the property owner resents the interference of the council with what he is pleased to term "the right of property owners to use the street." The only way to remedy this evil of private drain-laying in cities is for the council to immediately adopt the plans of a sewerage system and rigidly adhere to it in the future construction of sewers. Of course the property owners who have laid private sewers can most always be depended upon to oppose the adoption of the sewerage plans; they have taken care of their own sewage by emptying it upon a neighbor's premises, or at some place contiguous thereto, and decline to be taxed further for the benefit of this neighbor or of anybody else.

Sewers should not be built needlessly large, that is, of too great diameter: the larger the sewer the larger volume of water required to flush it. Besides, a large sewer running only one fourth full, or less, leaves a large space above the flow of sewage for the accumulation of gases, which will prevail unless the sewers are well flushed.

The sectional area of a sewer is generally rated for comparison, one diameter with another, by squaring the diameter of a pipe; as, for instance, a pipe 10 inches in diameter is (10×10 equals 100) represented by 100 square inches; a sewer 6 inches in diameter is (6×6

equals 36) represented by 36 square inches; and a rubber hose $2\frac{1}{2}$ inches in diameter is ($2\frac{1}{2} \times 2\frac{1}{2}$ equals $6\frac{1}{4}$) represented by $6\frac{1}{4}$ square inches. If you should flush a sewer 10 inches in diameter with a stream of water thrown from an ordinary fire-department hose, you would be using, relatively, $6\frac{1}{4}$ inches of water to flush 100 inches of pipe. It is not economical to lay sewer-pipe excessively large, and it is a worse economy to lay water-pipe too small in diameter; yet this is the order of construction desired in many places, when if they would reverse the conditions, i.e., smaller sewers and larger water-pipe, the service would be much better all around.

Nowadays there are two distinct systems of sewerage in use: one is known as the *combined* system, the other as the *separate* system.

The combined system requires the largest pipe, catch-basins at street corners, and pipe connections with the mains; also man-holes at street intersections, although man-holes are common to both systems; and it costs to build it about 70 per cent more than the separate system does.

The combined system is the one generally built in the largest cities; it receives and disposes of all surface (storm) water which flows in the street gutters and all the sewage from house, factory, and hotel.

The separate system has smaller pipe, because it receives no water from the street gutters; it has man-holes at the street intersections and oftener if required, but has no catch-basins and receives all the sewage

from house, factory, and hotel. The actual difference between the two systems is that the former cares for the street water of a city and the latter does not. The use of the flushing tankis common to both systems. Where the combined system is used, the storm-water, falling upon the sidewalks and streets, washes their surfaces and carries a great deal of sediment into the sewers; where the streets are paved or macadamized, there is not so much sediment taken into the sewers but what the storm-water will carry off and thus prevent choking or clogging. In our smaller cities there are few paved streets, and there is too much loose material upon the street surface, to allow the storm-water to flow into the sewers. The storm-water flowing along the gutters would carry with it not only great quantities of sediment, but straw, leaves, paper, and other refuse which would clog the sewers quite often.

It is just as well that the sewers of a city do not receive the storm-water of its streets. Looking at it from a sanitary standpoint, it is better that the storm-water be allowed to flush the street surfaces: it is the only cleansing the streets receive. If there are parts of a city where the storm-water collects in a pool for lack of drainage, a drainage-pipe can be laid especially to carry off this water; there is no necessity of taking it into the sewerage system unless the pool is located quite a remote distance from a possible outfall.

A majority of the smaller cities in this country have adopted the separate system of sewerage. Its efficiency

as a system is unquestioned, while its economical construction and the rapidity with which it can be built commend it to every city. The smallest pipe laid in a street in the combined system is twelve inches in diameter; in the separate system the smallest pipe laid is eight inches in diameter. In the combined system the increase in pipe diameters is greater, proportionately to the distance laid, than it is with the separate system. The smallest pipe which should be laid in a street, as a sewer, is eight inches in diameter. The usual size of house-drains connecting with street sewers is six inches in diameter. When establishing a grade of a sewer on a street it is quite important that the street sewer be placed deep enough in the ground to drain all the cellars on the street. To accomplish this thoroughly, the grade—i.e., bottom—of the sewer should be from two and one half to three feet below the level of the cellars; the diameter of the main sewer, whether it be large or small, making a difference in this depth of a few inches, more or less. On residence streets, where the cellars are about one half their depth above ground, the sewers need not be laid as deep in the ground as they are on the business streets, where the first floors of buildings are but a slight elevation above the street level. Yet the grades of a sewerage system will arbitrarily govern the depth at which the sewers must be laid; and if the grades, which also govern the flow of sewage, are to be maintained, to secure a perfect gravity system, then the sewers must be placed at the depths required, whether it be six or sixteen

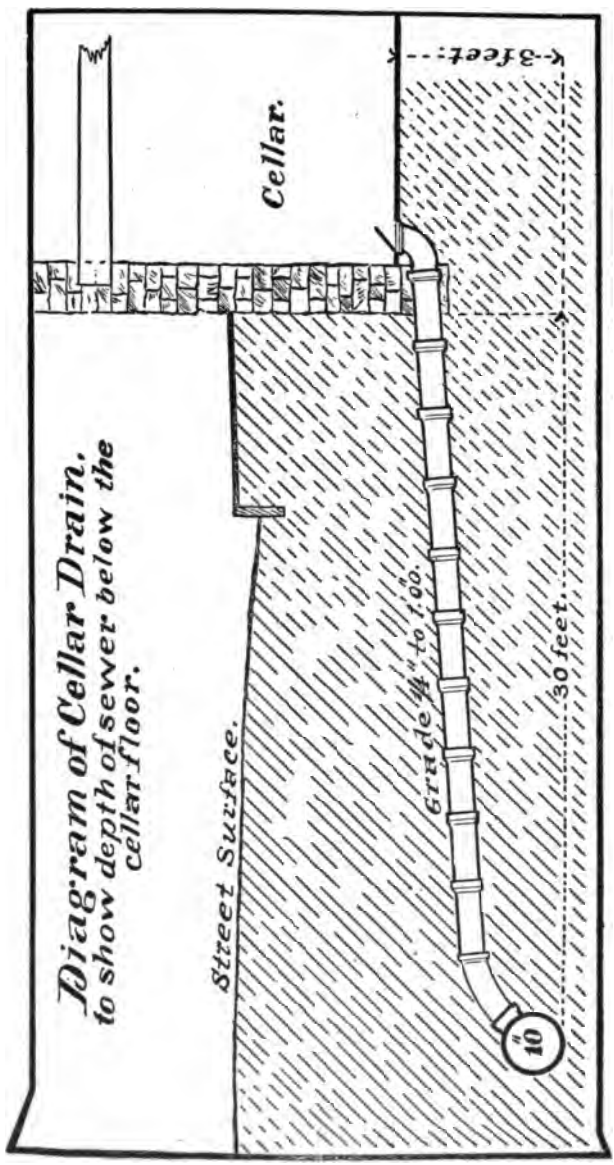
Diagram of Cellar Drain.
to show depth of sewer below the cellar floor.
Cellar.
3 feet.
Street Surface.
Grade ¼" to 1'00.
30 feet.
10"

feet below the surface of the street. The most expensive construction of a sewerage system is the main sewer and outfall, particularly so if the sewer is of brick and quite large in diameter, and the outfall is of stone and placed on an artificially-made foundation. It is for this reason that the length of the main sewer should be reduced as much as possible without danger of impairing the efficiency of the system.

When a community desires a system of sewerage planned, the disposal of the sewage is the first problem to solve, and in connection with this problem is the consideration of the topography of the area within the limits of the city, which should be carefully studied and mapped by an expert in such matters. There may be one place at which the public may desire the sewage to be emptied, yet the topographical conditions are such as to entail heavy construction expenses to concentrate the sewage discharge at that point. Sometimes the topographical survey will develop a better solution of the problem than was thought of, and less objectionable to the inhabitants than it was expected to find before the survey was made. The disposal of the sewage of a city, which means the location of the sewer outfall, is the most complex question the sanitary engineer has to encounter. Every locality gives him a new study, demands a different treatment, and calls for a wide range of experience.

The discharge of sewage into a lake, stream, or pond is often done under necessity, and it is to be deplored that it is ever done at all. The community needs the

sewers; and while it has the means to build as much of the system as will relieve its immediate needs, it has no money to provide a proper and unobjectionable method of sewage disposal. Therefore the system is built and the disposal of the sewage in an unobjectionable manner is deferred until some future time, when the accumulations at the outfall and vicinity become so intolerable that the community itself demand the abatement of the nuisance.

The location of a sewage outfall where it will discharge into living waters cannot be under any circumstances a permanent location; sooner or later all such sewage outfalls will be abated, and each and every city thus contributing to the pollution of our inland waters will be required to cleanse or otherwise purify its sewage and discharge only clean water into them. Some of the States have already prohibited such pollution, and several inland cities have been compelled to cleanse their sewage within their respective limits. As our cities grow larger and the population becomes more dense within them, the question of sewage pollution and sewage disposal will receive the attention it even now deserves, and the simplicity of its solution will perhaps cause us to wonder why it has not been solved much sooner.

The map of a sewerage system should show, when completed, the location of all sewers, with the different kinds (whether pipe or brick material) marked plainly thereon; also the grade of each line of sewer, as well as the size or diameter; it should also show the loca-

tion of the outfall or outfalls, man-holes (catch-basins, if the combined system is planned), lantern-holes, and flushing tanks. There should also accompany the map system a profile of the main and intercepting sewers, a detail drawing of outfalls, man-holes, flushing tanks, lantern-holes, respectively, with complete specifications for the performance of each and every kind of work required to be done to build the system, or any part of it, in a practical, workmanlike manner. The city or town having such plans made should also obtain, if it does not already possess it, a full and complete draft of a sewerage ordinance, from which an ordinance may be framed and adopted suitable to the requirements of the locality desiring it. The object of introducing such an ordinance is to regulate the construction and maintenance of public sewers, tapping and using the same; to provide for flushing, cleansing, and repairs; and to adopt a method of assessments whereby to raise money in an equitable manner for the payment of sewerage construction, etc. None but licensed drain-layers should be allowed to tap or make connection with the public sewers, and a record should be kept at the city hall of all such connections. The city should designate what kind and size of pipe should be used, not only for street sewers, but of all house connections laid between the street sewer and the block lines, and it should also require the use and employment of the best material and workmanship connected with the public sewers and house connections.

A sewerage system when built must be well built, otherwise it is a menace to public health; besides, if well built, the expense of repairs are reduced to a minimum.

The practice of connecting house-drains with public sewers while under construction should never be allowed. The earth in the trenches will settle and by its great weight break and detach the connections, causing much damage and expensive repairs. The newly-filled trenches should be allowed at least thirty days' time for subsidence; sixty days' time is even better. House-drains should have a grade of not less than $\frac{1}{4}$ inch to the foot. Flushing tanks that will contain about 200 gallons of water should be located at the upper end of all lines of sewers. There are several flush tanks on the market that are designed to work automatically, and give satisfaction to those using them.

When building sewers use the best material obtainable; the brick used should be well burnt, hard and smoothly formed, well laid with full mortar joint. The sewer-pipe used should be true in form and diameter and uninjured when laid; the joints well flushed and bedded in the best quality of hydraulic cement-mortar. The house connections should be of the same quality of material, and good workmanship should be the rule in all cases. Sometimes the economically inclined householder will buy culled sewer-pipe whereby to make connection with the street sewer, and expect the drain-layer to use this kind of pipe in his work. A

drain-layer who will knowingly lay such pipe should be fined heavily and also be deprived of his license.

In some cities the licensing of drain-layers and plumbers is vested solely in the chief executive of the city, permitting this officer to grant licenses and also conferring upon him authority to rescind a license whenever a holder thereof has wilfully violated the law while in the prosecution of his work. Summary examples of this kind are often beneficial to a community.

COST OF SEWERS AND APPURTENANCES.

THE cost of sewer construction varies much according to the local conditions. The freight on material is often the cause of a considerable increase of cost above the average price. The character of the earth in which the sewer is laid will sometimes almost double the cost of work. Rock, hard-pan, the prevalence of water in large quantities in the trenches, a loose sandy soil where continuous sheeting and bracing is required—all these difficulties which must be overcome are expensive factors in the cost of sewer construction.

Sewer-pipe should be paid for at a stated price per lineal foot for each size of pipe used or laid in the ground. Breakages, cracked and damaged pipe, are generally excluded from the contract and work, and are a matter of settlement between the contractor and dealer; hence it is better and more economical for a municipality to buy its sewer-pipe of the builder when it is laid in the ground than to buy it from a dealer and deliver the best of it to the sewer builder; otherwise the municipality must make the settlement with the dealer for breakages, etc. Where no troublesome and expensive obstacles are encountered the price for

building sewers of various sizes and kinds with appurtenances is as follows:

8-inch	sewer-pipe,	per	lineal	foot	laid	..	$0	50
10	"	"	"	"	"	"	0	60
12	"	"	"	"	"	"	0	70
15	"	"	"	"	"	"	1	00
18	"	"	"	"	"	"	1	20
20	"	"	"	"	"	"	1	30
24	"	"	"	"	"	"	1	60

Sections with slants or house connections are included in the foregoing prices. Catch-basins, man-holes, and flushing tanks are not included, but are extra, as follows:

Man-holes, complete, $25 to $35, according to depth.

Catch-basins, complete, $30 to $50, according to depth.

Flushing tanks (automatic) cost from $50 to $70.

Brick sewers cost about $1 per vertical foot, per lineal foot laid, measuring the extreme outside diameter of the sewer. Thus a brick sewer whose extreme outside diameter is four feet eight inches will cost $4.66 per lineal foot in place. If a concrete or timber foundation must be provided upon which to build the sewer, then this will be an additional cost.

In all cases the plans and specifications for the sewer construction should be prepared in the best manner, having a single aim to durable and permanent construction, then ask for proposals to build accordingly. If

the bids when opened are found to be too high for the amount of money provided for the work, it is an easier matter to curtail the amount of work after the bids are opened than it is to dicker with a contractor for better and more expensive work than was asked for by the plans and specifications, when they are found to be deficient in this respect.

THE VENTILATION OF SEWERS.

NO matter how thoroughly well a sewerage system has been built, there will be at times an accumulation of sewer-gas within the sewers. If the sewers are laid closely to true grades and are well flushed at short intervals of time, the accumulation of gases is largely reduced. There are many different methods suggested for ventilating sewers; none of them, however, are efficient, for the reason that the sewer-gas will not rise against the colder air above ground, but will follow warm currents of air within the sewers and branches and escape into such localities as the warm air may lead it. The temperature of most sewers is about 65 to 75 degrees (Fahrenheit), and will rarely ever be lower than 60 degrees. The tendency of movement of sewer-gas within a system is to the higher altitudes of the system and city in which it is built; therefore the householder on the hill is more liable to receive gas in his house, unless his pipes are well trapped, than is the householder in the valley.

It is always better to submerge the mouth of an outfall where it empties into a body of water; by doing so the mouth is sealed against adverse winds, which have a tendency to drive the gases through the sewer-pipe to the higher elevations of a system.

The man-holes of a sewerage system located on the

sewers at street intersections are supposed to furnish all the ventilation required for a sewerage system, but it is extremely doubtful if any sanitary engineer will claim this to to be an efficient method of ventilation. That they do allow some gas to escape is evident, but not all of it finds egress from the sewer by this means, as residents near man-holes will testify.

If man-hole covers along an entire street were all removed at the same time, and allowed to remain so for several hours, the escape of gas from that particular sewer would perhaps be greater during the time these covers are off than will ever escape through the small openings made in the covers for that purpose. It would be an unusual sight to see the sewer on a whole street ventilated in this manner. It is a common practice in many cities to trap the pipe connection of a catch-basin with the main sewer by turning the end of the pipe downwards into the catch-basin, so that the outlet is always below the level of water which remains in the bottom of it. The only reason for doing so, "that has been told," is that sewer-gas arising from the catch-basin would offend the noses of casual pedestrians were it not trapped. The casual pedestrian can run away from it if he chooses to do so; the householder cannot run away from it so easily. The sewer-gas which escapes into free air from man-hole and catch-basin leaves less to penetrate the house; therefore it is wiser and more humane to have less regard for peripatetic noses and more for the inmates of the household, by leaving the connection not trapped.

If sewers are carefully laid to grade, "straight and true as a gun-barrel," as is sometimes said of them, so that there is a constant movement of the sewage towards the outfall, there is less liability of offensive odors arising from them than if obstructions within hold the sewage in small pools. The movement of the sewage from the household sink or water-closet to the main outfall of the system should be constant and uninterrupted.

STREET-CAR LINES.

WHEN granting a franchise to a company to operate street-car lines in a town or city, care should be taken to define the gauge of the track to be laid. A gauge that is narrower than the wheel gauge of the ordinary wagon or carriage is a nuisance and should not be allowed in any city. Four feet eight and one half inches is the usual gauge of all wagons, and this should be the distance between rails of the street railway.

To determine the question of street occupancy and paving, the right of way allowed to a street-car company should be the extreme width of one car for a single track, and the extreme width of two cars standing side by side, on parallel tracks, where a double track is to be laid. This understanding of the right of way also defines the width of street which should be paved and repaired by the company. Thus the width to be paved at the expense of the company will be approximately a strip eighteen inches wide outside of the rails and the four-foot strip between the rails, where a double track is laid, besides the width between the rails of each track.

This amount of paving which should be done by the company is but a fair compensation to the property owners on the street whose frontage the company are

in part using as a means of gain or revenue, and it is no more than right that the company should relieve the property owners of a fair share in the cost of improving and maintaining the streets in a good serviceable condition. Besides, the street cars really occupy more of the street than is defined by the laying of one or more tracks, whether the franchise says so or not. Vehicles are required by city ordinance, as defined by the franchise, to abandon the tracks on the approach of a street car, that it may proceed on its way without detention, and the signal used by the car-driver to warn vehicles when on the track is sanctioned by the ordinance or franchise; and if the driver of the vehicle does not heed the signals, he can be fined for not doing so. The driver of the vehicle must move far enough from the track, either one side or the other, to allow the body of the car to pass, thus giving up to the street car a width of at least eight feet of street.

The street-car company should be required to lay and maintain its tracks to the established grade of the streets; and when a street is paved or otherwise improved, the share of the work to be done by the company should be performed at the same time the city's work is done.

In some cities the number of street cars used and owned by the company are registered at the city clerk's office and are licensed to operate by the city, the company paying a stipulated sum for each license. These sums vary with different cities: $10 in some cities; $20 and $25 annually in others. In Baltimore,

Maryland, the city required the street-car companies to pay one cent from each fare collected to the city. The companies therefore charged a six-cent fare and thus became tax-collectors for the city without any expense to themselves. Had the city restricted the fares to five cents per capita per ride, the result to the street-car companies would have been widely different.

This is an instance where cities are overreached by exacting terms that are not fully considered, nor all the results carefully weighed when the franchise is granted. When a city grants a franchise to a street-car company it should state the exact terms of the franchise so that they cannot be evaded, or leave them out of the franchise altogether. To exact the condition that "car fares shall be but five cents per capita on a certain line" does not insure a five-cent fare to the patrons of that line unless the distance is also stipulated which a patron may ride for five cents; because the street-car company can make two distinct sections of its one line, as has been done.

In some franchises restrictions have been incorporated which prevent the company from charging additional fare upon a line or lines running to fair or exposition grounds and to certain parks or places on legal holidays, also requiring the street cars to be at the depot to meet incoming trains; but such restrictions are not usually necessary. The street-car companies in most cities endeavor to take care of all public travel which comes their way in a liberal, commendable manner. The most serious complaint against street-car

companies is the overcrowding of the cars, especially in the morning and at night when the people are going to and from their daily work. But the people themselves are largely to blame for this evil; they will mount an overcrowded car until every foot of space inside and outside is occupied, pay their fare to the conductor, and then do their grumbling. If they would do their grumbling before they paid their fare, some good might come from it.

Street-car companies operating horse-car lines should be allowed to lay cobblestone pavements between the rails of a track on steep grades. Such a pavement is a merciful provision for the animals hauling the cars. The residents on a street generally object to cobble pavement because of the noise; but the service the company owes to the public demands it and it should be permitted. A wood pavement on a steep grade is wet and slippery and very severe on the animals hauling the car, and when cars are heavily laden much time is consumed climbing such hills or grades.

A street railway built with rails laid on longitudinal stringers is not as serviceable a track nor is it as pleasant to ride upon as a track laid on cross ties, with stringers supporting the rails. The cars, after a few weeks of travel over it, take to bobbing up and down like a storm-tossed vessel, which is very disagreeable to the occupants. The track laid on cross ties is, if well ballasted and well kept, as pleasant and smooth riding as any steam-railway track.

With the introduction of electric motor street rail-

ways, heavier cars have come into use and the rails used are heavier. The girder rail laid by the Cream City Railway Company of Milwaukee weighs 89 pounds per yard. The old horse-car lines used rails varying in weight from 45 to 60 pounds per yard. An economically wearing rail, one that will not kink under heavy loads, should be not less than 60 pounds per yard.

STREET SPRINKLING.

EXPERIENCE has proved that the most satisfactory method of sprinkling streets is to place the work entirely in the hands of the municipal authorities. When two thirds of the property owners on a street petition the council to have it sprinkled there can be no legal obstacle that will prevent a proper assessment of the abutting property on that street to provide the necessary means to pay for the sprinkling. When such work is done by the property owners it is seldom well or satisfactorily done. Some owners will not subscribe for the work, and their frontage is therefore not sprinkled; the gaps thus left are a positive nuisance to those who do pay for the sprinkling, because they do not receive the protection from dust which they pay for. The whole block or street should be sprinkled, if sprinkled at all. If a street-car line traverses a street, the car company should pay for one third the sprinkling.

In some cities the cost of sprinkling is paid entirely by the city from a general fund; in others the cost is paid by assessments made against the abutting property, the city itself bearing no share of it whatever. Sometimes a city will assess the abutting property from two to three cents per lineal foot of frontage and pay

the balance from a general fund. There is much difference in the cost of street sprinkling as paid by different cities and towns; it is not readily understood why one city should pay twice as much per mile for street sprinkling as another, when both have a water-works system and the scarcity of water does not enter into the conditions in either case; nor is it apparent even why one city should pay $200 per mile more than another, yet statistics on street sprinkling show such differences.

It is claimed that an assessment of five cents per lineal foot of frontage, or ten cents per lineal foot of street, will pay for the cost of sprinkling the widest street. This rate of assessment equals $528 per mile of street and is from $100 to $250 less per mile than is paid by our largest cities.

At St. Louis, Missouri, the cost for eight months' sprinkling per mile of street is about $700. The city furnishes the water free of cost to the parties doing the sprinkling. At Rochester, New York, the cost is about $781 per mile of street.

At Racine, Wisconsin, the water company charge the party doing the sprinkling at the rate of one and one fourth cents per lineal foot of street sprinkled; to this must be added cost of sprinkling. Some cities pay $100 per month, for a season or six or seven months, per mile of street, and the water furnished free by the city. Water companies supplying cities with water have stated rates for street sprinkling incorporated into the franchise when granted; these rates vary from three to five cents per lineal foot of frontage, and some have

a rate as high as five cents per square foot of street area. These prices are for the water alone; the labor of sprinkling is additional.

Contracts for sprinkling require the streets to be sprinkled three times daily, excepting Sundays, on which day the streets are to be sprinkled once and before 9 o'clock A.M. In some cities no street sprinkling on Sundays is required.

The carts are generally required to cover not less than two miles per day, each, on a street having an average width of thirty-six feet between curbs. On level streets, or rather streets that have comparatively light grades, carts can do much better than this. The spread of the sprinkler is eighteen feet, and a cart contains not less than 600 gallons of water. All water-carts should have wheel-tires not less than three inches wide, for they have heavy loads.

It has been estimated that a cart can cover from five to six miles per day (single spread) of ten hours. The distance which can be covered by a water-cart in one day depends somewhat upon the facility for supplying it with water.

A city owning its water-works can make cheaper contracts for sprinkling than if it purchases the water from a company, but it does not follow that the cost of supplying the water is less for a city than for a water company. Few cities operate a plant as cheaply as the water companies do; the reasons therefor are obvious.

THE STREET SURFACE—PAVEMENTS AND IMPLEMENTS.

WHEN it is contemplated to have a street paved and the improvement is to be paid for by assessments made against the abutting property, as is the usual custom, a map drawn to some large and convenient scale should be made, showing and including all the property which may be affected by the improvement. If a street-car line traverses the street, the area which the street-car company must pave, or pay for paving, should be laid off on the map, then the frontage of each piece of property located upon each side of the street should be defined. The street-car area can be washed in one color, all the property owned by individuals in another color, and the city's share of the work defined with a third different color. Then compute areas by square yards and note the number of yards and fractions thereof upon each individual tract, respectively.

A map thus prepared is not only a satisfactory exhibit to the property owners who are pecuniarily interested in the work, but it otherwise serves many purposes and interests; the council, the assessors, the engineer in charge, and the contractor who performs the work, all have a correct and reliable guide which

will enable them to carry on the entire improvement and make compensation therefor in an intelligent and satisfactory manner.

To go into the details of street paving would be intruding upon specifications for such work, and there are different specifications for different pavements and localities. The intention of this work is to describe the essential features of municipal improvements, omitting those details which would not only be inapplicable here, but would make the work cumbersome.

Every community must decide for itself what sort of paving material it will adopt for its streets. Often the local quarries will settle the question, or the stone they can buy at a distance and transport at low or reasonably low freight rates. In Illinois, stone and brick are chiefly used for pavements. In Wisconsin cedar and tamarack blocks, granite and limestones are used. No paving brick are made in Northwest north of the northern line of Illinois. Few of the limestones make good pavements, because of their brittleness. Granite fashioned into the shape of the "Belgian block" is used on the main thoroughfares of most large cities and makes a good wearing, durable pavement, but is almost as noisy as the old cobblestone pavement. Not all stones that are hard make good paving material, nor should many of the softer stones be rejected because they are not hard. Many of the gritty, softer stones will wear evenly and smoothly and are not as prolific of noise as the harder and more brittle stones are.

Asphalt Pavement.

The asphalt pavement has come into such general use during the past five years that its merits and deficiencies as a pavement are quite well known to those who reside on streets where it has been laid, and it has not fully met with the favor expected of it.

While it has the advantage of being one of the most evenly-surfaced and "noiseless" pavements known, it is also very dusty, and there seems to be no prevention for it.

Sprinkling mitigates its dusty condition only to a limited extent; inasmuch as it is non-absorbent of water it cannot be so heavily drenched as other pavements are that have many joints to hold and absorb the water. Even when sprinkled with a moderate quantity of water there is a perceptible flow down its slope to the gutter. The hot sun and light winds of a summer day will quickly evaporate an ordinary sprinkling, and before the water-cart can make another round the dust is whirling along the street as lively as if never sprinkled.

The residents on an asphalt street cry as loudly against the prevailing dust as they do against the alleged excessive use of water by the water-cart, and there seems to be no happy medium whereby they can be made satisfied—

at least not while horses are employed on our streets and the surface of all streets is not of asphalt, so that no mud can be tracked upon them. Unless the dirty cross-street is improved likewise it is impossible to keep an asphalt surface cleanly. Perhaps electricity and the automobile will eventually improve some of the existing objectionable conditions connected with city pavements and traffic thereon—commencing with the banishment of the horse; supplying power for manufacturing purposes by the transmission of electricity from the suburbs, where it should be produced, thus making obsolete innumerable tall chimneys within the city that now defile everything with their smoke and soot; ending with other improvements in the direction of cleanliness and quietude.

There are also other days in the year when the dust on asphalt streets is disagreeably prominent, and these are the dry cold days of winter when there is no snow on the ground—from November to March inclusive.

Cities in the latitude of Boston and Chicago and north of them are often seriously troubled with what has been called "winter dust." Sprinkling the streets cannot be done under the prevailing low temperatures without making the street surface a glare of ice, and residents must submit to it awhile—complainingly, of course—until a rain or snow storm abates the nuisance.

It may be said that the causes which make winter dust are equally applicable to other pavements. So they are, yet the dust of other pavements does not whirl so easily and readily as upon the smooth-surfaced asphalt. The irregularities and interstices (joints) of stone and brick

pavements seem to hold the dust more fixedly, due probably to the condensation that is constantly going on between the cold air and the warmth from the earth below, which cannot possibly occur on the tight, thick-skinned asphalt surface; besides the complaints from winter dust are not so frequent nor quite so vehement on streets having other kinds of pavement.

Another objectionable feature of the asphalt is its slippery surface when wet or frosty. As a rule, city horses do not wear shoes that are sharp-calked: and well it is so; were it otherwise the consequent wearing away of surfaces would be infinitely more rapid and the volume of dust largely increased, hence it is no uncommon sight to see horses thrown suddenly while travelling the asphalt pavement.

For this reason asphalt should not be laid on inclines where the grade of the street is more than one per cent. Either a brick or stone pavement should be laid on such grades, otherwise they will be very unsafe for travel in wet or frosty weather.

For sidewalks asphalt is excellent; it is more durable than cement walks, and when the surface is sprinkled with coarse sand (during the rolling process) it is far less slippery. It should be laid on a thick bed made either of gravel or broken stone, well drained, and rammed compactly.

For street surfaces the price of asphalt per square yard, laid, is from $1.75 to $2.25, according to the convenient facilities for obtaining the necessary ingredients.

It is to be regretted that there exist such objection-

able features against the greater use of asphalt for street surfaces, for it is really a neat and handsome appearing pavement. Under present conditions of city traffic no amount of cleaning will abolish the dust nuisance. Dust will prevail while horses are used and coal is burned within the limits of our cities.

Brick Pavements.

The brick pavement, like the asphalt, is best adapted to the resident street, where the horse-vehicle travel is the lightest; consequently it meets with greater favor in the smaller cities, where street traffic is much less in weight and volume than in the great metropolis.

It is not as "noisy" as the stone pavement, and is less dusty than macadam roadways. The most serious objection raised against it is the difficulty in securing a uniform hardness of brick. A minimum of porosity and a uniform hardness of brick are the two great essentials necessary to secure economical durability from this material.

If the brick are too porous they absorb much water and will crush under the wheel when in a frozen condition; besides the frost that is in them operates expansively, which is no more than the usual tendency of that element, and the brick is liable to go to pieces without the aid of the crushing weight of a passing wheel. Furthermore, a brick pavement to be durable must be laid on a foundation equally as firm as that upon which asphalt is laid, which requires a well-rammed concrete

base. If the brick are laid upon a yielding surface they are liable to break in pieces.

There are several ways of laying a brick pavement, and in the absence of comparative statistics on the different methods it may be presumed that one method is as good as another. First of all there should be two layers of brick—one above the other. Sometimes the lower layer is laid diagonally across the street, and the surface layer is placed transversely upon it.

Again, both layers are laid diagonally across the street, from which a single line of brick taken from each layer respectively would represent the letter X.

Again, the lower layer is laid longitudinally with the length of the street, and the upper layer is laid on it transversely with the street.

Sometimes the lower layer is laid flatwise upon its bed, and the upper layer rests upon it edgewise. Evidently the lower layer should rest flatwise on its bed, which gives a more even, uniform bearing to the upper brick, making it less liable to break under a load. Some pavements have been laid with the brick of both layers placed flatwise, and others have been laid with both layers resting edgewise on their beds.

Whichever method is best cannot be easily determined, because of the varying conditions of travel and of foundation.

A good wearing condition is obtained by laying the pavement on a concrete base, placing the lower layer of brick flatwise, in courses diagonal with the street, and the upper layer edgewise, transversely with the street length.

Care must be taken to reject all warped or crooked brick. Those not having an even bearing will break others below and about them.

Where the city buys its own brick, money can be saved by having an inspector at the yard when the brick are loaded for shipment.

It is a serious mistake to put a heavy roller on a brick pavement when laid. Many brick are thus broken which might otherwise have lasted for years without showing injury.

Some cities use brick for street-crossings in connection with macadam and stone pavement, and have proved to be very acceptable. When used in this manner the crossings should be crowned but slightly, for they are slippery surfaces in frosty weather.

The paving-brick now offered for sale are $2\frac{1}{4} \times 3\frac{1}{2} \times 7\frac{3}{4}$ inches; they are burned harder than the ordinary brick, and when struck smartly give a metallic ring like vitrified sewer-pipe. When laid an interstitial filling is used in the joints, composed of hot tar and coarse sand, or asphaltum and coarse sand, or some patent compound prepared for the purpose, of which there are several kinds on the market.

The price of brick pavement ranges from $1.15 to $1.50 per square yard, laid in two courses. The cost of grading, rolling, and a concrete base is additional.

Wood Pavements.

The wood pavement as it has been laid in our American cities is at best a miserable makeshift, unworthy the

name of pavement. It is but one remove better than the old-fashioned "plank" road, inasmuch as it is less dangerous for a horse's legs than is a loose plank.

It is not only uncleanly, but unhealthful, and its use should be prohibited by law unless it can be laid upon something less deleterious to its fibre than is common earth.

In London, England, the wood pavement is again being tried, but under unusual circumstances and better preparatory conditions than ever before.

The blocks of wood are carefully selected, and creosoted in a vacuum which enables the wood to receive the fullest quantity of fluid possible. When laid they are set with the grain vertically on a firm concrete base, and all joints are well filled with a mastic which excludes moisture.

The resulting benefits from such a pavement cannot be obtainable for some time, for the antiseptic treatment given to the blocks will cause them to last a score or more of years should the street traffic not wear them away meantime.

The demand for a "noiseless" pavement is the true cause of this new departure in laying wood pavement. Undoubtedly this pavement will have to be relaid with new blocks within ten years, for the wear by travel on a London business street must be considerable; meantime the treatment given the wood blocks will render the detritus less offensive than that which usually comes from a decaying wood pavement.

The price per square yard for cedar-block pavement, as usually laid, is from 80 cents to $1.25.

Wood paving-blocks should be as nearly of uniform dimensions as practicable. Their lesser diameter should be four inches and their greater eight inches. The pavement will be better if all the larger blocks are split into two parts and then laid among those of lesser diameter. A block eight or nine inches in diameter, surrounded with blocks of much less diameter, will make in time a noticeable elevation in the pavement, the smaller blocks wearing away or being crushed down by the traffic, leaving the broader block isolated and higher than those about it. Six inches is the usual depth of block used, although blocks of five inches depth are not uncommon. The blocks must be set quite loosely in place, for when wet they expand so much as to lift from the foundation.

Select the largest blocks, split them in two, and place the split sides against the curb, which forms an excellent joint; the large blocks are thus removed from the middle of the street, where those of a uniform size should be used.

MACADAM.

For residence streets in a city and suburban highways the macadam pavement, laid as this pavement should be laid, is a desirable and popular road covering. But broken stone has been so long used in many communities solely to fill ruts and quagmires in the highway that its efficiency and value as a good road covering are in undeservedly low repute.

The macadam when properly and substantially laid, with well-paved gutters, makes an excellent street. It can be built well and cheaply, and costs little for maintenance, and when properly cared for is seldom in need of repairs.

Limestone used solely does not make a desirable macadam road. It is too brittle a stone, pulverizes easily, and is thereby prolific of dust. The base and intermediate layers of macadam may be of limestone, but the wearing surface should be of broken granite, gneiss, or other hard rock. When ruts occur in it, a square or rectangular hole should be cut into the pavement, so large in area that the entire rut is thereby excavated, and the hole then refilled in the same manner that the road was built originally. It is bad practice to dump broken stone into the rut-hole and let travel over it finish the job. Something better must be done to exclude surface water than this, otherwise the remedy is useless.

Railroad companies maintain the excellence of their tracks by employing men constantly to look after and keep them in good repair. The men so employed average in number about one man per mile of track. A street surface, mile for mile, is about twice the area of a railway road-bed, that is, so much as is used to maintain a single track. But it is far less work to maintain a mile of macadam street than it is a mile of track, for the usage is much less severe. Hence if we employ one man to care for five or six blocks of city street—equal, say, to a distance of half a mile—he could undoubtedly keep so much of it in excellent condition.

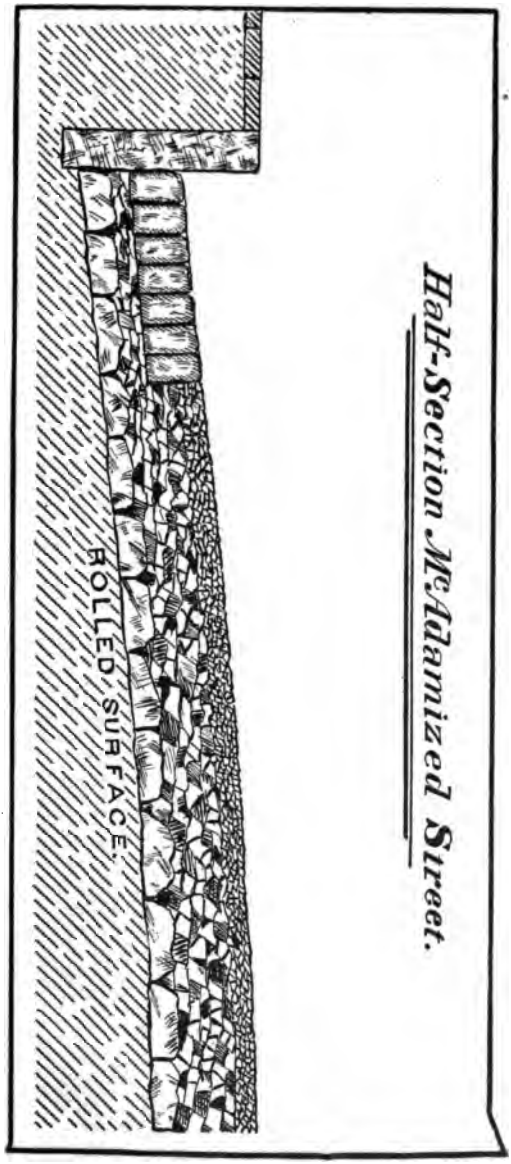

Half-Section McAdamized Street.

He should be provided with a horse, cart, and suitable tools, and have ready access to broken stone when needed for repairs. A man on the ground, thus equipped, can promptly make needful repairs, which soon become worse than neglected; keep the street free from loose stones, clean the crossings when needed, and keep the street in a tidy, handsome condition. Such surveillance and labor cost no more than the spasmodic efforts of men and teams made twice annually to keep our streets in a suitable condition for travel.

The excellence and durability of the macadam street depend much upon the care and labor expended upon its surface the first years of its existence. In time it becomes substantial and solid and needed repairs are moderate, much less expensive than for other kinds of city pavement, which demand an ever-increasing sum for repairs with their increasing age.

The macadam or telford-macadam pavement as now constructed is substantially made by first grading, surfacing, and rolling in a very thorough manner the earth road-bed upon which the stone covering is to be laid; the first layer, of broad flat stones, is then placed by hand, the stones set closely together, with the base of each downwards; the joints are then filled with spalls wedged and sledged solidly in place. Upon this prepared surface the coarser stone from the crusher is laid and well rolled; upon this a third layer of the medium-sized stone from the crusher is spread and well rolled, and upon this third layer is put the finer stone from the crusher; this

surface is then wet thoroughly and rolled until it is compact and firm.

Before any paving or macadam is laid, the subgrade or earth road-bed which is to receive the wearing surface of the road or street should be graded so as to insure good drainage and then be well and compactly rolled; for if this subgrade yields in places under future conditions of weather or traffic, the surface of the road will yield correspondingly, and every such depression will be plainly indicated by a puddle on the surface in wet weather—and it is the puddles which make our bad streets and roads.

General Gillmore said that a good, well-built road was also a good roof. This comparative idea should be borne in mind by the builders of roads.

Stone Pavements.

Stone pavements, sometimes known as the "Belgian block," are the most desirable known for durability under a heavy street traffic. Indeed there are streets in some of our larger cities on which no other kind of pavement can take its place, having in view economy and durability; yet it is the most prolific of noise of any in existence, unless it be the inferior cobblestone pavement.

Neither is it cleanly, for the surface cavities between the blocks become so wide and deep from the wear by horses' shoes that the street-sweeping machine does not wholly dislodge the dirt that is packed within them, and

the pavement soon shows black and dirty, and at times is ill-smelling.

For warehouse localities where the street traffic is heavy, and at the intersection of important streets where there are street-railway curves and crossings, it is perhaps the only economical material that can be used; it is hardly necessary or desirable elsewhere.

Granite, gneiss, and trap-rock are the usual kinds of stone used from which the Belgian block is made. The cost per square yard laid is about $2.00.

Stone paving-blocks are supposed to be made of uniform dimensions, but they are seldom found to be so. The usual dimensions of the granite block are $3\frac{1}{2} \times 6 \times 8$ inches; upon work where the pavers are laying them they will be found not only of these dimensions, but also of $4 \times 6 \times 9$ inches, $3 \times 6 \times 9$ inches, and $4 \times 6 \times 7$ inches. This variation in dimensions is not in the least objectionable if all are of a uniform depth of six inches and have parallel surfaces.

Sometimes paving-blocks are used which comply with the required dimensions at one end only, and this end is placed upwards by the paver; the lower end of the block may be either wedge-shaped or bluntly pointed, or quite suggestive in shape of a kernel of corn. Such a paving-block, having no flat base to rest on, sinks in the ground, causing many of the numerous depressions seen in pavements. Stone blocks may vary a little in width and not be at all detrimental to the quality of the work. Three blocks placed side by side should not measure in the aggregate more than fourteen inches in width. When granite blocks

are set on a concrete base the joints are generally filled with a mixture of hot tar or pitch and gravel.

Hard stone blocks of the Belgian type are excellent for paved gutters used in connection with macadam and with brick pavements. Horses, during the fly season, when hitched at the curbstone for any great length of time will seriously injure other gutter material with their stamping feet.

SIDEWALKS.

It would be much better for every city if wood sidewalks, or plank sidewalks as they are sometimes called, were prohibited by law. Could this be done our cities would present a neater, handsomer appearance, they would be more healthful, and the ultimate cost of sidewalk construction would be much less than it now is.

A witty alderman once remarked that "wood sidewalks generally lead to the court-house," referring to the innumerable lawsuits which the defective sidewalk engenders. The attorney of one of the larger Western cities recently declared that "of all the lawsuits in which his city was a defendent, more than one half of the cases arose from defective sidewalks," and he strenuously urged in a speech before the city council that the wood sidewalk be abolished from that city forever. Those who are familiar with municipal management will undoubtedly approve of and sustain this attorney's position in this matter.

There is other material suitable for sidewalk surfaces

that is far better in every respect than wood. If a sidewalk is built of a durable material the first cost may exceed the cost of a wood sidewalk, but its wear is so much better and it lasts so much longer that it will prove to be the cheaper walk in the end.

It is poor management to permit a property owner to build a sidewalk of any material acceptable for the time by the authorities, and not make him a party to any suit for damages that may be brought against the city because of defects in this same walk—perhaps from neglect to keep it in safe repair for pedestrians; yet our cities have been tolerating such management for years, ever since the beginning of things in this young nation. Why should a city be made to suffer financially through individual neglect or parsimony? Some of the responsibility should be placed upon the delinquent property owner, otherwise the city should lay the sidewalk and assess its cost against the abutting property, as is now the common practice for street paving, then relieve the property owner from all responsibility in the matter.

Better would it be for the taxpayer if we accepted the French way of municipal street management, placing the entire street and street work, sidewalks inclusive, solely under municipal control. A French city improves and keeps in good repair all its streets and sidewalks, provides street illumination and police surveillance, and allows the pedestrian to take care of himself, whether it be day or night, which he is bound to do, knowing that the

city is not in the least manner responsible for any mishap which may befall him—drunk or sober.

Rather than lay a plank walk, dig a shallow trench, say six inches deep and six feet wide, and fill it with screened gravel; sprinkle it well with water, and then run a hand-roller over it. This is the way park walks are usually made, and for residence streets it makes a desirable walk at a small expense.

Or, after the trench is filled with gravel and well rolled, cover the gravel surface with a sheet of asphaltum, on which coarse sand may be sifted during the rolling process, to make the walk less slippery in frosty weather.

The most expensive sidewalk built nowadays is what is called the "cement" walk, which is practically an artificial-stone walk. They are cleanly, neat, and handsome, but very slippery when wet and in winter weather. They wear away rapidly under steady travel, and for this reason are not so economical for "down-town" sidewalks in our larger cities.

Perhaps the cement walk is no more slippery than is the flagstone walk after it has been in use awhile and its quarry roughness has become worn off, leaving a very smooth surface. Besides, the flagstones are quite liable to crack from the combined effect of frost and moisture. They are less liable to such damage when laid on a bed of coarse gravel or broken stone six inches deep, more or less.

Brick are too absorbent to make a good walk. Freezing will destroy wet brick; if they are vitrified and culled well, to insure evenness of surface, and laid on a bed of

gravel or broken stone there can be no serious objection to such a walk. It is somewhat cheaper than is a cement walk, but is not always as smooth and even-surfaced as property owners generally desire.

Implements for Street Work.

It may be well enough for a city to contract for street grading, pavement laying, and such other initial work of street improvement, but it should, by all means, have full control of all street repairs, cleaning, etc., owning the horses, wagons, carts, machines, and tools needed for such purposes. Whether or not it should own a complete stone-crushing outfit will depend upon local facilities for obtaining a plentiful supply of crushed stone at a low price, or at least as cheaply as the city could produce it with its own plant. Usually the proprietors of a stone-quarry can furnish broken stone for streets more cheaply than the city can produce it, inasmuch as the quarrymen are in the stone business, producing it for many purposes, and the broken stone sold by them is made from the refuse of the quarry—the accumulation from the legitimate work, which would not be the case with a city; hence the expense of obtaining broken stone by the city would be somewhat greater. If there is an abundance of good gravel in the immediate vicinity of a city, a stone-crushing outfit would not be considered necessary by the average taxpayer, yet the best of gravel does not make nearly as good and durable a street surface as broken stone will. It does not solidify as soon, it pulverizes rapidly, and produces more dust.

A good serviceable rock-crusher is usually a desirable implement for a municipality to own for the work of road or street making. A crusher that will crush about 40 cubic yards of stone per day, with a carrier attachment for taking the stone from the crusher to the wagons, costs about $1000. A portable engine to run the crusher, say 15 horse-power, can be purchased or rented.

The cost per cubic yard for crushing stone is quoted at from 25 to 50 cents. The writer crushed during one season nearly 7000 cubic yards of black gneiss at a cost of 19 cents per cubic yard delivered to the wagons. This price included a small royalty paid to the owner of the quarry for the stone used. It is far cheaper to set up the crusher in the quarry than it is to haul the stone to the crusher, as is sometimes done. When granite, black gneiss, or other stone of like hardness is to be crushed, an extra set of "jaws" or "concaves" should be provided and kept on hand, so that no time will be lost making repairs should these fittings break, which they are liable to do at all times when the crusher is in operation.

A valuable auxiliary of the stone-crusher is the revolving-screen which separates the crushed stone into three different sizes. The screen is circular, about 10 feet long and 3 feet diameter, and is made to revolve about 20 times per minute. The screen is divided lengthwise into three sizes of mesh; the smallest is ½ inch, the next is 1½ inches, and the largest is 3 inches, and there are specific carriers for each size. A platform should be provided upon which the carriers may dis-

charge the stone when no wagons are at hand to be loaded.

Some crushers are made with a different arrangement of driving-pulley and carriers, which the manufacturers designate respectively as "left" and "right" hand machines. This designation should be stated when ordering a crusher and its appurtenances.

The horse road-scraper and ditcher that has a long mold-board, carried by wheels, is a machine of doubtful utility on street work in towns and cities, although it is in quite common use. It is seldom used to scrape anything off a road surface, and what it scrapes on to it is a soft mushy material from the gutter, that is a detriment to the road rather than a benefit. Better that such refuse should be hauled away, for it is a dust-producer of the worst kind when the street surface is dry. These machines are useful when grading a street and for levelling material that is dumped upon it for street building, but when the work is completed it should be banished entirely.

The road-roller is a necessary implement for good work either on pavements or highways. It should be made to weigh about four tons, with facilities for increasing the weight to eight tons, more or less. The lighter weight is suitable for rolling a brick pavement, and the heavier weight is better for macadam. A roller should have a pair of wheels in front of the heavy cylinder that actually does the rolling. These wheels will greatly relieve the weight on the horses' shoulders and enable the driver to turn about without causing the large

cylinder to turn short on its axis and scrape a hole in the roadway.

When streets are divided into working sections, each section including a certain number of blocks, and a caretaker is placed in charge of each section, he should have an outfit about as stated in the following list:

For a macadamized street.

One horse, harness, and tip-cart.
Two shovels, two picks, one crowbar.
One sledge, weight about 4 pounds.
Two knapping-hammers.
One rake, axe, and hatchet.
One switch-broom.
One 6-gallon sprinkling-pot.
One 18-inch grindstone, mounted.
Should his work include any brick and stone pavement add
One trowel and a paving-hammer.

GAS CONSUMPTION.

IT is authoritatively stated that the street lamps in cities consume about four cubic feet of gas per hour, and an ordinary single-jet house burner will consume from 6 to 8 cubic feet of gas per hour. Haswell says: "Internal lights require four cubic feet and external lights require five cubic feet per hour." Gas-tips are sold by dealers which are alleged to burn a specified number of cubic feet per hour and are rated as "three-foot burners" or "four-foot burners." This is an empirical rating which rarely ever will withstand an actual test. The consumption of gas per hour which these burners will consume is generally a great deal more than the rating signifies. The actual quantity of gas a tip will consume per hour, regardless of its rating, can only be determined by a test made with the tip itself; and the test will not always be a true rating for another tip of the same size and manufacture.

The amount of gas which any tip or burner will consume in one hour also depends upon the pressure and the specific gravity of the gas furnished. The following testimony by an expert on this subject is quite important.

The superintendent of the lighting of streets and public buildings by gas in the city of New York says

that it is not essential nor customary that the tips used in burners within the different street lamps should be of any particular kind, mark, or of any uniform size; that the quantity of gas to be furnished for street lamps is not determined by the size or kind of tips used in the burners, or by the number of the marks or rings thereon, but by the actual number of feet of gas per hour passing through the burners in the lamps at the place where the same is located. That the amount of gas consumed by any burner depends not only on the kind and size used thereon, but also on the pressure at the particular place where the street lamp is stationed, and also on the kind and specific gravity of the gas furnished.

STREET LIGHTING.

UNQUESTIONABLY the best modern illuminant for streets is the electric arc light, each lamp being not less than 2000-candle power. Many object to it solely on account of its brilliancy, yet that is its chief value as a street light. When the arc light is enclosed in an opaque glass globe its extreme brightness is so modified that the glare is less blinding to the eye. Sometimes these lights are hung extremely high, anywhere from 60 to 100 feet elevation above the street. To obtain the best illuminating effect they should never be hung more than twenty-five feet above the ground; then the reflection from the buildings on the street gives additional light. When the lamps are hung very high, higher than the buildings, their light falls upon the roofs, and the street surface receives all the shadows. Where the foliage of shade trees is very heavy and spreading, as it often is on residence streets, it will be found that the lights will give better results if hung at an elevation of about eighteen or twenty feet than if hung higher.

The incandescent system is not suitable for street lighting; it is not powerful enough, and not much bet-

ter than the gas lamp, especially where the foliage of trees is heavy and spreading. To give as good an illuminating effect as the gas lamp will upon the street surface it must be hung quite low—lower than is required for the arc system.

To know that a company is furnishing electric lights of the required candle power, the city should employ an expert to make tests from time to time, and the company notified of delinquencies in this respect. Where such tests are not made there is a tendency towards diminution of the strength of the lights which is sometimes quite apparent.

The annual cost of electric lighting varies with the conditions required. Where the lights are required to burn from sunset to daybreak they cost each (arc system) from $100 to $125 per year, according to the number installed. Where they burn from sunset to midnight they cost each from $70 to $80 per year, depending upon the number installed. A plant having 200 lights can afford a lower rate than one having only 80 or 100 lights installed.

The incandescent is cheaper than the arc light, but more lamps are required for the same street area.

Yearly Table for Street Lighting; showing the Number of Hours from Sunset to 12 o'clock Midnight, for each Month in the Year.

Month.	Total per Month.	Average per Night.
June	136 hrs. 55 min.	4 hrs. 34 min.
July	145 " 52 "	4 " 42 "
May	150 " 38 "	4 " 51 "
August	161 " 16 "	5 " 12 "
April	162 " 47 "	5 " 25 "
September	175 " 24 "	5 " 51 "
March	189 " 06 "	6 " 06 "
February	188 " 59 "	6 " 45 "
October	202 " 41 "	6 " 32 "
November	210 " 35 "	7 " 11 "
January	225 " 16 "	7 " 29 "
December	230 " 25 "	7 " 38 "

This table may be used for either gas or electric lighting.

STREET GRADES.

PERHAPS there is no other municipal improvement that will raise a longer and louder blast of indignation from property owners than the grading of a street. When such a job is under way the alderman who began it most generally wishes before the work is finished that either himself or that particular street had never existed; while the vocabulary of names having reference to imbeciles and other persons with little or no minds is exhausted, and poured upon the head of the city engineer. To the average property owner a street consists of an area of land embracing the frontage of his own property. He does not care particularly for any other portion of the street, as long as he is permitted to make good drainage on his own front and allow the water to pass on for some other property owner, located on lower ground, to care for.

The principal cause of the trouble which arises from grading a street in most towns and cities is that the blocks have been built upon and sidewalks laid about them ever since the settlement of the country, without street grades and drainage having been previously provided or established. Perhaps a few grades have been established in the business part of the city, but

the larger area has been built up without them, every property owner erecting his building according to his own inclinations. Trees have been planted and have thrived handsomely, located not only on the curb line, but outside as well as inside of it. For years the streets have been under the care of successive street commissioners who have scraped, ditched, guttered, and graded them to suit the notions of many property owners. When the time comes for the improvement of the streets, to secure good drainage so that there will be no excessive concentration of storm-water at any particular place; when water-works, sewerage, paving and macadam are introduced; when street grades are established and profiles of surfaces and grades are made and placed on file in the city hall—it is about this time that the air becomes turbulent with muttered imprecations and threatened suits at law against the city for damage to property, and at the next municipal election a strong cabal is formed to defeat the re-election of the offending alderman, and a successor to the city engineer is sought for—one who will ignore the established grades and respect the old-time condition of things.

A street is graded for several reasons. One reason is to make good drainage and take care of the flowing water without its damaging any private property. The grading of a street in most instances means a more rapid concentration of storm-water as a result. In many cases streets are graded not only to place them in a better condition for travel during wet sea-

sons, but to reduce grades and thereby facilitate traffic upon them. And there is an æsthetic reason which is appreciated by every one, for we all admire a handsome street. When a street is graded and all the considerations are judiciously carried out, the property located thereon is not damaged, on the contrary it is very much improved and the assessments for the work are in the nature of benefits, as they should be.

Where buildings have been erected years before the street grades were established and the later grading of the street puts them above or below grade, there is no alternative for the owners but to conform to the new order of things; and if they deem this a hardship and an expensive matter, there is visible evidence existing for a jury to see and decide how much compensation they are entitled to because of the change of street surface.

The stranger visiting a city for the first time does not always remember the handsome buildings it may have; but if its streets are execrable he never forgets them, and if the streets are handsomely improved he will ever after speak of that city in a praiseworthy manner.

The sidewalks on a business street should be fifteen feet wide; if the street is sixty feet wide this will leave a roadway for vehicles thirty feet wide. When the business streets are but sixty feet wide two street-car tracks should not be allowed upon them if there is nothing to prevent a return track being laid upon another parallel street. If two tracks upon one street

are a necessity, then the width of sidewalks should be reduced to twelve feet.

On residence streets the sidewalks can be held to the width of fifteen feet without detriment to roadway travel. The footway proper can be made seven feet wide, leaving eight feet width for a grass-plat and the curb; this width and arrangement is not only an ornament to the street, but reduces the paved area of the roadway.

The cities of our Northern States require deeper gutters than those of the Middle and Southern States, because the snow and ice in winter compact upon the street surfaces to a depth of six or more inches, and when a thaw comes the flowing slush will flood the sidewalks if the curbstones are set too low. In this case the surface elevation of the curb should be six inches above the crown of the street, and when paved the grade of the gutter should be eight inches below the crown of the street; this gives a depth of gutter at the curbstone of fourteen inches. Ordinarily the surface elevation is the same as the centre of the street.

For a macadam roadway thirty-four feet wide the crown of the street should be fifteen inches higher than the gutter.

On comparatively level streets the intersections should be made level. Where the grades are quite steep, crossing streets which are level (or nearly so), the down-hill side of the intersection should be made from eight to twelve inches lower than the up-hill side; otherwise there will be a bad pitch on the cross

street from the lower crossing. Change or break the grades of streets at the intersections where possible to do so. Where this is done the streets present a much better appearance than if grades are changed midway between streets. Require all property owners on a street to make water and sewer connections before the work of paving begins, and thus save the pavement from future destruction; otherwise it will be cut up continually to make these connections, and none will regret such work more than the property owners on the street.

A WATER-WORKS SYSTEM.

THE advantages of a well-built and efficient system of water-works to any community are obvious; its chief requisite being a plentiful supply of good, wholesome water at all times and for all reasonable purposes. The water supplied should be, if obtainable, free from objectionable and mineral matter; not too hard, that is, not impregnated with lime or its constituents to that degree which renders it unfit for steam, laundry, and many manufacturing purposes. If a water supply is thus rendered unfit for all general uses, its sale to consumers is just that much limited and the income from the sale of water is thereby curtailed. Oftentimes a citizen of a town or city will say, when the question of building a system of water-works is discussed, "Oh, we only want a small system to supply us with water for cooking and drinking." That citizen has to learn that the sale of water for such purposes only will not pay the cost of operating a plant, and the deficiency of income to meet operating expenses must come from a general tax levy. The works should be built upon the broad plan of supplying water in quantity and quality desirable and suitable for all general purposes—a truly commercial water—with the intention of selling every gallon possible. Of course

not all sections of the country are favored with water of this kind and excellence, and the best water obtainable in one section would be rejected with disdain by a community of a more favored section.

There are some sections of the country where the artesian wells supply an abundance of the best quality of water good for all purposes, and there are other sections where artesian wells are not only a very unreliable source of supply, but the water from them is very objectionable for any use but the extinguishment of fires—provided that enough of it can be had when wanted for this purpose. As a rule the artesian well as a source of supply is out of the question when considering a sufficient supply for a town or city of any considerable size or population.

An artesian well that will discharge 100 gallons per minute is a rarity; many of them discharge only 18 to 30 gallons per minute. A discharge of 100 gallons per minute is but 144,000 gallons per day, and this quantity is a meagre supply for an ordinary, sized village. This quantity of water does not afford even fire protection, for there is but 6000 gallons per hour available, and two fairly good fire-streams require, each, 160 gallons of water per minute, which in the aggregate amounts to a discharge equal to 9600 gallons per hour. The artesian well fulfils its mission in those localities where there is no other supply obtainable.

The source of supply should be located, where possible to do so, where there will be no danger of future contamination, and to make such assurance *sure* the

location and outfall of the main sewerage of a town or city should be considered at the same time that the water-works system is planned. Lay no pipe in the streets less than six inches internal diameter. Only one efficient fire stream can be had from a four-inch water-pipe, and only single-nozzled hydrants can be placed on such a diminutive pipe-line. A cast-iron six-inch diameter pipe, well laid in the ground ready for use, costs 40 per cent less per lineal foot, so laid, than does good rubber hose per lineal foot; one double-nozzled hydrant set in place ready for use costs about $30—showing that cast-iron pipe and hydrants are a cheaper fire protection than is the best rubber hose. Yet the rubber hose must be kept on hand whether or not a city has a water-works system, but not so many lineal feet are required to be kept on hand. The fire department of a city without water-works is compelled to use long lengths of hose to each pipe-nozzle because of the remoteness of the water supply, using lengths varying from 800 to 1200 feet, while a city having water-works, and hydrants located at alternate blocks, seldom uses more than 300 feet of hose to a pipe-nozzle and more often only 100 or 150 feet of hose, thus supplying from four to eight streams from the same length of hose which in the first instance supplied but one stream, and a weak stream at that: for the pressure loss when rapidly conveying water through 1000 feet of hose is very considerable, and the pressure is so great that there is usually a heavy loss in bursted hose at every fire where long lengths are used. A

certain city having a population of about 7000 keeps for use about 30 per cent more hose than a neighboring one does having a population of 20,000 and equipped with a water-works system.

A good cast-iron water-pipe thoroughly coated with iron varnish and well laid in the ground, has a durability that is practically unknown to-day, while the durability of the best quality of rubber hose is scarcely more than four years. A well varnished cast-iron pipe does not decompose in the ground unless there are deleterious gases or chemicals in the soil about it.

The water-pipe throughout a system should be amply large to ensure sufficient fire pressures at all the hydrants of the system. In cities with a population of 30,000 or less the system should be so planned that no steam fire-engines need be used for the extinguishment of fires. The pressure at the hydrant should be such that with the aid of the hose efficient fire-streams can be thrown upon a burning structure with satisfactory results and without the aid of a fire-engine. There are several cities in the Northwest where fire-streams are thus used and the fire-engines, purchased before the water-works were built, have never been taken from the engine-house to serve at a fire, although five or more years have elapsed since the water-works were built; in the meantime quite large fires have occurred in these cities, which were combated successfully by the firemen with hose attached to the hydrants.

A city having a population of about 5000 pays usually an annual hydrant rental of about $4000. To

maintain a fire department equipped with steam fire-engines would be an additional expense of $2500 or $3000 unless the water-works system was properly planned so as to afford ample hydrant pressures, when two-horse hose-carts would be the most expensive equipment needed.

Where a city depends upon its fire-engines and not its hydrants for streams, the number of streams available at a fire is the number which the steam fire-engines can throw. With adequate pressures at all hydrants, the limit to the number of streams which can be thrown will be the number of hydrants available in the locality of the fire; and if some of the hydrants used are located upon the larger pipe of the system, then the double-nozzle hydrants will also furnish a much greater number. Where a planing-mill or other wood factory takes fire and a high wind prevails at the time, many streams are required to prevent the fire spreading to localities outside of the course or route taken by the conflagration: these incipient fires are caused from flying brands carried among the buildings by the prevailing wind, and unless extinguished at once the devastation is widespread, and the fire loss will be immensely greater. Instances of this kind have occurred in this country where from thirty to forty streams were necessary to prevent a conflagration from becoming widespread. It is a very large city that is equipped with twelve steam fire-engines, and none of our cities, having a greater or less number of fire-engines, depend upon hydrant pressures for fire-streams. The real

reason why cities as a rule do not provide adequate fire pressures at hydrants, and maintain instead large and expensive fire-department machinery, is the false economy of laying small pipe. Outside of the fire department and the engineering staff of a city, the value of pipe, pumps, and water of generous measure and capacity is not generally appreciated, nor are they extensively provided.* The experienced fireman will say, if asked to name the conditions which make an efficient fire-stream: a stream of water forced through 200 or 250 feet of two and one-half inch rubber hose, with a smooth nozzle not less than one and one-eighth inches diameter and a pressure at the hydrant of not less than sixty pounds, such pressure and streams throw 185 gallons of water per minute, to an elevation of 74 feet. Yet this fireman is giving almost minimum conditions; he would undoubtedly prefer a smooth nozzle one and one-fourth inches diameter and eighty pounds pressure at the hydrant, which would discharge 239

---

* At the great fire in Milwaukee, Wis., October 28, 1892, there were available in the city eighteen steam fire-engines and a steam fire-tug on the river with a capacity of eighteen streams more, although not all available at one time. The city made a call upon neighboring cities for help, and fire-engines came from Chicago and intervening cities to the number of eight. A very high wind prevailed at the time of the fire, and the area burnt over had been previously covered with old-time, cheaply built, wooden-houses, with some few factories and buildings of the better class among them. The hydrant pressures alone were not sufficient to furnish fire-streams. The sole dependence of Milwaukee was her eighteen fire engines and the steam fire-tug.

gallons per minute to an elevation of 80 feet. These streams would be, at the heights specified, solid columns of water, not sprays of water which spread in mid-air and feed the flames. The average pressure maintained by steam fire-engines at work is, for steam, 100 pounds per square inch and from 130 to 160 pounds water pressure. Oftentimes even greater pressures are used.*

If all cities of the larger growth could be divided into prescribed areas, with lines of large pipe well stocked with hydrants to a reasonable number, such pipe lines would afford a more practical and safer barrier against the sweeping conflagrations which oftentimes devastate large districts than anything that has yet been done in our American cities to check such fires. The best conditions of water-works construction, combined with the best principles of fire-resisting construction, must be observed and practised in our larger cities if we would save them from the great destructive fires which are nowadays a quite common occurrence. In our large cities, where the population is more dense, where the daily domestic and factory consumption of water is great and the busi-

* While advocating the use of large pipe and heavy pressures, the writer does not mean to convey the idea that our larger cities can dispense with the steam fire-engine; the prevalence of tall buildings and the modern sky-scraper building not only demands their retention, but also requires engines of larger capacity than those now built and used.

ness blocks are very tall, the standpipe loses its utility as a reservoir, and its static pressure is of little avail; in such instances the supply and pressure for all purposes must come from the pump direct, and steam fire-engines must be employed to take the water from the hydrant and throw it upon the burning structure. For cities of the second and third class the standpipe is a great economical factor in the operation of a system, and a valuable adjunct to its utility. It saves the cost of steady pumping day and night, including the labor of a night engineer and fireman and the fuel they would burn during their hours of duty. The stand-pipe affords a steady static pressure at all times, and provides a large supply of stored water, which by its altitude is available at once for the extinguishment of fires. To say that this use of water is not possible or practicable because the engineer might neglect to keep the standpipe filled is tantamount to saying that railway trains cannot be run on time because the engineer might fail to keep up steam: a pressure gauge or an Edison recording gauge, posted in the office of the mayor, or of the chief of the city fire department, will tell at a glance whether or not the tank is full and the engineer attending to his duties. The great utility and economy of the standpipe is recognized wherever it is used.

The largest standpipes built in this country are 20 and 25 feet diameter, with tank 100 feet and more in height. The extreme height is in many instances increased by placing the tank on a brick or masonry

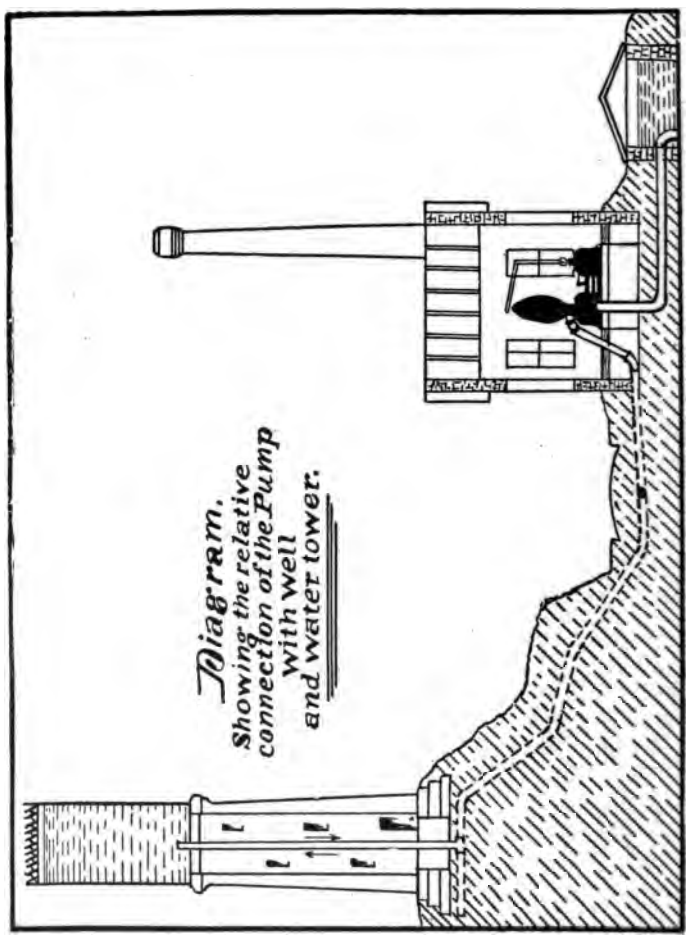
Diagram.
Showing the relative
connection of the Pump
with well
and water tower.

tower varying from 50 to 100 feet high; the static pressure desired determines the total height. Where a high elevation of land exists near a city the total height of standpipe can be materially lessened by placing it upon such elevation. Where a standpipe is incorporated in a system of water-works, the engineer's duty is to keep it full; his pressure gauge placed in the pump-room will show him at all times what the elevation of water is in the tank. In most instances the tank is kept full by pumping only morning and evening and during a conflagration; where there is a great constant demand for water during the day, as is the case in a manufacturing city, the engineer must pump at noon as well as morning and night. The intervals at which the pumps remain idle depend upon the capacity of the standpipe and the hourly consumption of water. The standpipe was first designed to afford relief to the pumps and protection to the pipe system from injury by "water-hammer," but of late years it has been increased in size and become utilized as a storage reservoir; thus in the modern water-works system it serves a twofold purpose.

The earlier settlers of the West voted money quite lavishly to secure railway facilities, and they handed down to the present generation in many localities some heavy bonded debts. The effect of these debts upon the present generation is that they have a very great dread—it may be said, an unreasonable dread—of any and all public improvements which cannot be built without an issue of bonds whereby to provide the nec-

essary funds. Consequently there are numerous towns and cities in the West to-day without water-works, sewerage, improved or paved streets. Yet the denizens of such towns and cities have lived on the same spot, the same ground, using water from the same old well, and casting all manner of filth upon the same ground as they have continued to do for the past forty and in some instances sixty years, yet will persistently vote down any proposition which will secure them a water-works or a sewerage system upon very favorable terms. In nearly every instance it is noticeable how rapidly a small city thrives and grows in wealth and population when it has in operation a water-works and sewerage system. In a few years the increased wealth contributes a tax levy to the municipal treasury greater than the annual outlay which the improvements cost the taxpayers. A good water-works system costs the consumer (the taxpayer) but very little; if he pays a water rate of $6 per year for one faucet in the kitchen, he gets all the good water the household needs for the sum of one and two-thirds cents per diem. This sum is less than it costs to maintain a pump, and the faucet supply is vastly more convenient to the household than a pump ever could be.

Items from the Report of the Superintendent of Water-works, Madison, Wis., for the Year 1891–2.

Population, 13,246.

Total number of water takers, 1405.

Greatest number of gallons pumped per day, 925,000.

Smallest number of gallons pumped per day, 375,000.

Number of gallons pumped per pound of coal, 189½.

Number gallons of pumped for one cent of fuel, 924.

Average head pumped in feet, 214.

Total number of tons of coal consumed during the year, 522.

Cost of coal during the year, $2140.20.

Receipts for the year were $15,372.26.

Operating expenses were $7564.25.

The system is direct pressure.

Cost of Operating a Water-works System and Collecting its Revenues. Taxes not included.

For a city with a population of 10,000, standpipe system:

Superintendent	$1,000 00
Engineer	600 00
Fireman (and other duties)	360 00
Fuel, oil, waste, etc.	1,000 00
Repairs, etc	300 00
Annual cost	$3,260 00

For a city with 2000 population, standpipe system:

Supterintendent and engineer	$700 00
Fireman and helper	300 00
Fuel, oil, and waste	500 00
Annual cost	$1,500 00

City clerk collects the revenues.

In most instances the cost of maintaining a horse and wagon should be included in the annual expenses. It is difficult to obtain exact figures of cost of operating a plant. The water companies decline to furnish such data. Water-works accounts of the smaller cities are not as a rule kept in a classified form available for such showing.

The foregoing statements are taken from cities where the standpipe is used; where no standpipe is used and the daily pressure is furnished directly from the pumps, the cost of operating expenses is increased very largely. In the smaller cities the employees in the water department have sometimes other duties to perform outside of the water department, and instead of the superintendent of the works caring for its revenues, the city clerk is appointed to do so. It is because of these complicated duties of water-work employees in the smaller cities that exact items of the cost of operating the works cannot be readily obtained.

Where water is supplied to a city under a franchise by a private company, the city pays an annual rental at such price as may be agreed upon between the city and the water company when the franchise is granted. This sum varies considerably. The water companies that supply by direct pressure (without a standpipe) usually charge more hydrant rental than those that build the combined system (that is, furnishing both pump and standpipe pressures, as may be called for from time to time). The usual price per hydrant is

from $45 to $50 annually, and $30 to $35 annually for all additional hydrants located on future extensions of the pipe system. One city in the West is paying an annual hydrant rental of $70, another $68, and a third pays $60. All three cities are supplied with water by direct or continuous pumping. These rates are considerably higher than are paid by cities having a combined system, both pump and standpipe.

A standpipe 16 feet in diameter, 50 feet high, containing 75,375 gallons of water, if placed upon a masonry tower 50 feet high will, when full, afford a static pressure of 43 pounds per square inch.

A standpipe 18 feet diameter, 60 feet high, containing 114,510 gallons of water, if placed upon a masonry tower 60 feet high will, when full, afford a static pressure of 50 pounds per square inch.

A standpipe 20 feet diameter, 80 feet high, containing 188,480 gallons of water, if placed upon a tower 70 feet high will, when full, afford a static pressure of 65 pounds per square inch.

A standpipe—steel tank with masonry or brick tower—costs to erect from $6000 to $16,000, if plainly constructed; if the design is ornamental and much cut stone is used in its construction, or an expensive foundation is to be prepared, then the cost is materially increased; but a large number of the standpipes in use throughout the country cost from $6000 to $10,000; a variation in the dimensions and capacity affecting the price.

The tower may be built of shape iron, brick, rubble

or ashlar masonry. Whatever material is used should be of the best and the workmanship first-class, for the weight to be sustained is a heavy one and the tower as a whole structure is subjected to great wind-strains.

When setting the pumps, keep them well down to the water level in the well. A 10-foot lift (suction) is an economical one; an 8-foot lift is even better.

Use a duplex compound pump and condenser of some reputable make, and thus help to keep operating expenses within reasonable limits.

If the water supply will permit it, locate the pumping station as near as practicable to the business centre, where exist the vital interests of a city; then the power to supply water is where the most water is likely to be required; it is also where the greatest need exists for protection against fire. If a city is divided by a stream, have more than one pipe crossing the stream and place the pumping station on one side of the river, the water-tower upon the other. In many cities the water-tower and the pumping station are thus separated for a distance of more than a mile. By means of an electric connection between the two structures, the engineer at the pumping stations can, by pressing a button in the wall of the pump-room, close the valve in the water-tower and thus disconnect it from the pipe system and give direct pump pressure whenever called upon to do so. Use plenty of gates or valves in the pipe system, so that if a break in a pipe occurs, or a hydrant is to be removed for repairs, only a small section of the pipe system need be deprived of water

while the repairs are being made. In the business part of a city it is better to place a gate on the (pipe) hydrant connection, between the hydrant and the street main; then a hydrant can always be removed or repaired without interrupting the flow of water in the street mains.

Never be parsimonious in the furnishings of a water-works system: if such extreme policy be followed it will be found, after the works are completed, that there are several omissions in their construction which must be supplied, and at much greater cost than if adopted at the outset, as they should be. The careful engineer will provide for many things which to the novice seem of minor importance; but the engineer is a man who obtains a livelihood by spending other people's money; so the purse-strings are drawn tightly on him, and later on some one else supplies the deficiencies at a greater cost and nothing is said about it.

Build all structures connected with a water-works system as nearly fire-proof as practicable.

Always subject a pipe system after it is laid, and before acceptance of the work, to a substantial test with the aid of the pump—at least 100 pounds pressure at the hydrant; and hold this pressure one hour if desired. Such a test is liable to show all the weak places in the pipe and expose bad calking. It is much better to find the weak places in a pipe system before the acceptance of the work than afterwards during a conflagration. If under the test a breakage occurs, it should be

repaired and a second test made, and again if necessary until no breaks occur.

Test the valves of all hydrants in the fall of the year before freezing weather sets in, and have them well protected against frost. Test them again in the early spring when freezing weather ceases, and drive down all frost-jackets which may have raised during the winter.

Capacity of Pumps required for Cities of a Stated Population.

Population.	Daily Capacity, Gallons.
1,800 to 3,000	1,000,000
3,000 to 6,000	1,500,000
6,000 to 10,000	2,000,000
10,000 to 20,000	2,500,000
20,000 to 25,000	3,000,000

Most towns and cities have two pumps and two boilers; the pumps are not always of the same capacity. Some smaller cities have but one pump and one boiler. This is not only a risk because of the liability of a breakdown, but there comes a time when pump and boiler must be cleaned or repaired, and then no pumping can be done and for the time being there is no protection against fire.

When considering the adoption of a water-works system, whether for construction by the town or city itself, or by granting a franchise to a company, a map or plan of the entire pipe system and hydrant location should be carefully prepared. To prepare such a plan in a practicable manner the source of

water supply must first be permanently fixed, then locate the site for the pumping station and the water-tower, and if there is a stream traversing and dividing the city, the pipe crossings of the stream should be located. When these points are determined, the pipe lines can be drawn thereon. The map should show also all inhabited blocks in the city, the location of all public buildings, churches, manufactories, etc., and the business blocks of the city should be "hatched," i.e., cross-lined, so that the map will show at a glance all the actual property of the city that is to be protected with hydrants and exactly what streets are to be piped to supply water to consumers. When the map is thus prepared, the hydrants can be located to the best advantage. Place one hydrant at every block in the business centre of the city, also a hydrant at the corner of alleys on every cross street, so that a line of hose can be run along the alley in rear of the stores, where fires most commonly break out. In the residence parts of the city locate one hydrant at every alternate block. Place hydrants on the north and east side of streets, where they will receive the most benefit from the sun's rays in the winter months. The usual number of hydrants placed upon a system is ten to one mile of pipe. This is about the right number in the more densely settled parts of a city; but in the suburbs, where land lots are larger and houses farther apart, seven to the mile is enough; this number gives one hydrant to every 754 lineal feet of pipe.

When the map is entirely completed it should be

formally adopted by the city council and placed on file, and the franchise, if one be granted to a company, should refer specifically to this map in its details and conditions; for future reference it will be invaluable, for it shows the original pipe system and plant of the city's water-works system, independent of its subsequent growth and extensions.

Weight per Foot of Cast-iron Pipes, including Socket and Spigot Ends.

Diameter.	Thickness.	Weight per foot.
4 inches.....	½ inch.....	23 pounds
6 "	" "	33 "
8 "	" "	43 "
10 "	⅝ "	68 "
12 "	" "	82 "
14 "	" "	94 "
16 "	¾ "	129 "
18 "	" "	137 "
20 "	⅞ "	197 "
24 "	" "	224 "

Note.—Cast-iron pipe costs from $24 to $30 per ton at the foundry. Specials (T's and Y's) cost $50 per ton. Freight from 11 to 18 cents per 100 pounds to points in the Northwest.

The usual length of a water-pipe is 12 feet.

The length of a hydrant stock is 7 feet below the level of the sidewalk curb, unless otherwise ordered by the purchaser.

The valve or gate stocks which cover and protect the valves on the street mains are made 6 feet long, with screw-sleeve attachments, so that the top of them can be adjusted to the grade or surface of the street.

The grade of all streets in a town or city should be established and profiles of the same placed on file in the city clerk's office, and the water-pipe laid, where practicable to do so, to conform to such grades. Unless this be done trouble will arise between the city and the water company whenever a street is graded and the water-pipe thus exposed to the danger of freezing; the water company must lower the pipe, and it generally expects the city to pay for such work where no street grades are established.

It is an open question whether a city council has the authority to convey to a water or a gas company any right whatever to the use of its streets, above or below ground, which entails upon that city expense in caring for or protecting such property as these companies may bury below the street surface. The city had certain rights and authority to grade, level, pave, and otherwise improve its streets before the water company existed, and the granting of a franchise to supply the city with water or gas should not curtail this right in the least particular; if the city must pay for lowering or raising water and gas pipes whenever it grades a street, it certainly is a curtailment of the rights of a city to improve its streets.

Gallons of Water required Daily for Man and Beast.
(*German Estimate.*)

One	person, in summer.....	20	gallons.
"	" " winter.....	15	"
"	horse, average.....	18	"
"	cow, "	13	"
"	heifer, "	10	"
"	sheep, "	1	"
"	hog, "	7	"

Hydrant Pressures required to give Certain Streams of Water of Stated Volume and Efficiency.

Hydrant Pressure, pounds per sq. inch.	Length of 2½-inch Rubber Hose in feet.	Size of Nozzle, Smooth Bore.	Gallons discharged per minute.	Height thrown in feet.	Distance thrown in feet.
50	300	1⅛ ins.	155	53	82
55	300	1⅛ "	164	59	89
60	300	1⅛ "	170	63	93
50	400	1⅛ "	142	45	74
55	400	1⅛ "	152	51	80
60	400	1⅛ "	158	55	84
60	200	1¼ "	182	75	106
70	200	1¼ "	196	85	117
80	200	1¼ "	209	94	128

A MUNICIPAL FRANCHISE.

A FRANCHISE granted by a town or city is nowadays, in its form and terms, the record of a bargain between two parties, whereby the conditions may prove to be exceedingly favorable to the grantee and very onerous and unfavorable to the grantor, or the community the franchise is intended to benefit for a consideration; but frequently the grantor does not discover or realize the true intent or purport of all the conditions imposed until the results are shown by actual working operations. When the franchise is considered and discussed before its passage, the grantee invariably knows of what he is talking and the council, as a rule, does not, it having no previous experience in that particular matter; and many franchises have been granted for gas, electric lighting, street railways, water-works, etc., that were not fully comprehended by any of the council when under consideration; indeed, there are existing franchises which contain conditions that would not be tolerated, nor even considered for a moment, had the grantors their work to do over again. But the grantors in such cases are the people, and the people have only themselves to blame for the bad effects of their bargains: they allowed their representatives to buy goods of a kind and quality with

which they were totally unfamiliar, and although the community may murmur because of the poor results obtained, it must nevertheless foot the bills. The careful, conservative alderman, one who exercises the same good judgment and business tact in public matters that he does in his personal affairs, will hesitate to vote for or approve of any contract or franchise to be granted or let in the interest of his city until he fully understands all the conditions involved and something of the effect they may have upon the community when the instrument is subjected to practical operation.

The legal requirements of a franchise are most generally well cared for, because both parties to the agreement employ able lawyers to frame the conditions; but oftentimes there exists a gap between the legal and the mechanical requirements that cannot be closed—where human and natural laws will not join and make a harmonious whole—because the mechanical part of the franchise was not represented and in connection with the legal part when the document was framed. In such cases the mechanical conditions must in effect be ignored and are inoperative, because they would otherwise conflict with the law, which has a weakening effect upon the whole franchise, creating in the community a feeling of dissatisfaction that exists during the life of the franchise.

There are many instances where municipalities could have obtained better water systems, better bridges and pavements, and for the same money that is expended for poor work or service, had the city em-

ployed a competent* engineer to care for its interests, instead of dealing unadvisedly with the contractor and accepting plans and specifications drawn by him, or a franchise drawn by the would-be grantee, of which the council knew little or nothing. The tendency when granting a franchise is to be too liberal with the terms imposed and at the same time careless regarding the exact nature of those which the same franchise will impose upon the city. A franchise is presumed to convey benefits to a community granting it, and for such benefits the community are generally required to pay, either individually or collectively, as with street-cars and street-lighting. The franchise when in practical operation is expected to produce a sufficient remuneration to the holder thereof to induce him to confer certain benefits upon the community for

* The use of the word "competent" is every way better for the engineer than the word *expert*. All professional men are not experts in their particular calling. When called into court to give testimony upon matters pertaining to their vocation they are generally rated as experts and berated by the opposing lawyers because of this distinguishing title, and in the minds of some persons the word "expert," as applied to professional men, has become synonymous with the word liar—perhaps justly so in some cases. A competent engineer is no more of an expert than is a competent doctor, lawyer, or manufacturer, unless he is a specialist in certain branches of his vocation and well known as such. Neither the city attorney, the city engineer, nor the city physician is rated as an expert, however competent he may be in his calling; but when the outside professional man is called upon to consult with one of these officials upon matters profound or difficult, he is forthwith dubbed an expert, when in a majority of cases he is simply competent.

a specified term of years: should it prove to be unremunerative, it is generally allowed to lapse and the public receive no further service from it, notwithstanding the conditions it contained requiring the continuance of the service; but no lapse occurs if the conditions of the franchise prove to be advantageous and remunerative to the holder and are insufficient and burdensome to the community for which it was created. Under these circumstances the community will bear with it to the end, complainingly of course, unless the conditions become unbearable and relief is sought in a court of law.

Most franchises in their operation impose a twofold tax upon a community: the individual being taxed, for instance, for gas and water for the house, and the city for gas for street-lighting, and water for the hydrants. Street-car service imposes a tax upon the individual alone, and this not quite so voluntary as has been claimed for it: it is not always optional with the business man whether he will ride or walk; his own or his employer's interests may not permit it, because of the time consumed in walking long distances.

Modern appliances and appurtenances seem to be in a constant state of evolution; the best methods and appliances of to-day may become obsolete within a year. This rapid material development has had a marked effect upon municipal improvements, simplifying and cheapening so many of them that they have been readily adopted by the smaller cities, giving them quite as metropolitan an appearance as our largest

cities. This transitory state of material things affecting municipal improvements has also a marked effect on the population of a city: it demands the best and cheapest service of all kinds, and as soon as it is demonstrated that the improved service is better than that which they have, its adoption is an immediate result. Therefore, when a franchise is to be granted for any purpose it should be for a short period of time—about ten years; otherwise it should contain a provision whereby a community may in after years regulate the service performed to conform to the changed and altered conditions of the municipality wherein it exists, and also regulate the price exacted for the service rendered—upon the same principle that long leases of real estate are re-rated in rental price every ten or twenty years. The conditions involved when granting a franchise are matters peculiarly under the care of the municipality, and the council granting it is not only required but bound to act with the highest regard for public interests.

It is strongly advocated by some of the best municipal legislators in this country that the use of streets by companies whose franchises grant such use should be paid for, and not freely donated as is now commonly done. The license fee paid by street-car companies in some cities is a practical illustration of this opinion.

A city granting a franchise at the present time should do so conditionally, and the conditions held in view should be:

A re-rating at stated intervals of prices paid for service rendered;

The termination of the contract by purchase whenever desired, in a fair and equitable manner;

Reserving the right to annul the contract when the service rendered is continuously inferior to the better service required.

When a company seeks to obtain a franchise from a municipality, it does so because it is believed that the results of its operation will be remunerative, otherwise it would not be asked for, and this fact should be borne in mind, as it affords some idea of the value of the franchise asked for.

BRIDGES.

THE bridges generally built by a municipality are of two kinds: the swing-bridge for navigable streams, and the fixed or permanent bridge for unnavigable streams.

If a swing-bridge is desired, the first thing to consider is the width of the channel upon either side, which should be wide enough to permit the passage of the largest boat that navigates the waters of that locality. Sixty feet is the usual width for draw-channels in the cities located on the shores of the great lakes, although there are several draw-channels in the Northwest which are sixty-six feet wide, and this is not an undesirable feature for the larger vessels which require more leeway. Side-wheel steamers require a greater width of channel than other boats, but such boats are now principally confined to river traffic; hence the width of a draw-channel is a matter of local consideration. For a swing-bridge there is nothing gained by making it wider and longer than is absolutely necessary; the heavier the bridge the harder or more difficult it is to turn, and such bridges are most generally turned by hand.

The roadway of a swing-bridge is generally made 18 feet wide, and the sidewalks 9 feet 4 inches wide from the inside of the roadway curb to the extreme edge of the sidewalk floor; but from this width of

9 feet 4 inches must be deducted the width of the roadway curb, the thickness of the truss post, and the space occupied by the sidewalk rail, which in the aggregate amounts to about 2 feet, thus leaving a clear width of sidewalk of 7 feet 4 inches. The aggregate width of the two sidewalks and roadway is 36 feet 8 inches; the width of draw-seats at each abutment is 3 feet 6 inches. The pier protection in mid-channel should be built at least 3 feet wider than the extreme width of bridge, to afford a safe protection to the draw when swung. The summing up of these dimensions will give the total length of draw required for a channel 60 feet wide upon either side of the bridge:

Width of bridge.....	36 feet 8 inches
Two draw-seats.....	7 " 0 "
Pier protection, outside of draw.....	3 " 0 "
Two channels, each 60 feet.....	120 " 0 "
Length of bridge.....	166 feet 8 inches

If the width of the bridge is increased, the length must be increased correspondingly, otherwise the width of channels will be decreased.

The iron or steel bridge is now almost universally adopted by towns and cities,* but the wooden bridge floors have not yet been relegated to obscurity, along

* The first all-steel bridge was that over the Missouri River at Glasgow, Mo., built by Gen. W. S. Smith, civil engineer, of Chicago, Ill., and completed in 1880. Now the steel bridge is met with not only in cities, but on country highways.

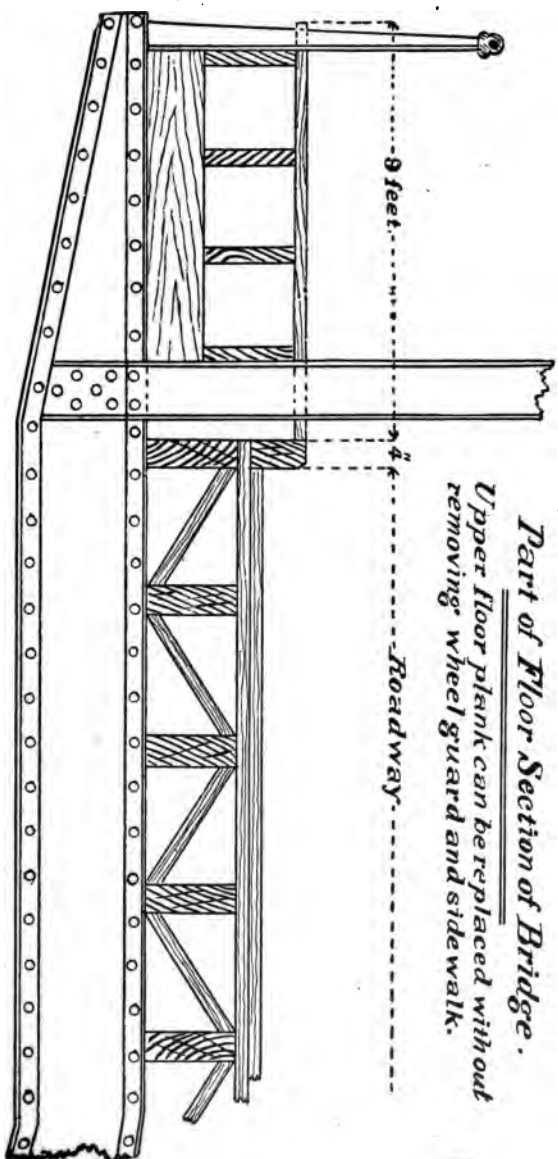

Part of Floor Section of Bridge.

Upper floor plank can be replaced without removing wheel guard and sidewalk.

with the wooden truss, as they should be. The fixed or permanent bridge can be made of almost any reasonable length desired, and without any consideration of the weight and difficulty of turning which is involved in the construction of the swing-bridge. Its width of roadway can be made as desired, for two or four vehicles to move abreast of each other, or it can be made the full width of the street or streets it is to connect.

If a bridge floor is to be of wood, the roadway flooring should be of double thickness, and the upper thickness (called wearing plank) laid independently of the guard-rail and sidewalks, that it may be renewed when necessary and without disturbing the sidewalks. Sidewalks will last much longer than any surface plank that can be laid upon a bridge roadway. This method of flooring is applicable to either the swing or fixed bridge.

The foundation for a masonry centre pier for a swing-bridge, or for a pier placed in mid-stream to connect two spans, can be made by sinking a caisson below the river bottom upon stable soil or rock and filling the same with concrete to the water-level. A pile sub-foundation may be made by driving the piles closely together within the area desired, and cutting them off at a depth of about four feet below water-level; then place a water-tight caisson on the piles, and commence laying the masonry on the floor of the caisson. The interstices of the piling should be well filled with broken stone before the caisson is placed thereon. If the subsoil below the bed of the

stream is soft and mucky, or partakes of the nature of quicksand, and is of such depth that piling when driven into it will not stand sufficiently firm and steady to support the proposed structure, then pneumatic caisson work will be necessary, and the plans, specifications, and work itself should be placed in the hands of a competent engineer.

Cribwork made with sheet-piling and walings, two rows, with an intervening space about 18 inches wide, packed solidly with gravel to exclude water, costs from $6 to $10 per lineal foot, according to the depth of water in which it is built. Pneumatic caisson work costs about $2.25 to $3 per cubic foot, measuring the entire bulk of the caisson. A caisson constructed on shore and floated to place and set on a pile support, to a depth of four feet, more or less, below water-level, costs from 30 to 40 cents per cubic foot. Such caissons are generally built of heavy pine plank.

Piles that are to be driven below water-level may be of pine, cedar, tamarack, or elm; oak is preferable where they remain partially above ground or water, and in this case they should be stripped of their bark.

Piles when driven should be ringed unless an iron cap is used, and should not be forced into hard ground to their injury. The driving should stop when they cease to move under the blows of the hammer. Piles cost from 16 to 25 cents per lineal foot; the cost of driving varies from 15 to 20 cents per foot. Foundation-piles should girt not less than 36 inches midway their length.

It pays well to select all lumber intended for bridges, using only the best. Although the first cost is thereby much increased, there is an actual saving of money in the greater durability of the work. All bridge lumber and timber is necessarily long, consequently is the most expensive; and the renewal of a bridge floor is not only an expensive job, but is an annoyance to the public and an obstacle to the business interests of a city. Norway pine should not be used on bridges; it checks badly, which diminishes the strength of the stick.

When a municipality can afford to do so it should build its bridges with iron or steel floor beams and joists—in fact, make all of the structure that is practicable of steel. If a fixed or permanent bridge, the floor may be of asphaltum; but if a swing-bridge, a plank floor is necessary, as paving of almost any kind will load the structure too heavily, unless steam or electric power be used to turn it.

When advertising for proposals for bridge construction, divide the work, requiring separate bids for the substructure and the superstructure; because some bridge builders do not build substructures, besides the council will have the advantage of a greater number of bids to choose from.

When a municipality grants an electric motor line franchise, a clause should be inserted requiring the company to furnish power to turn all drawbridges which are traversed by the cars of the company. Of course the city must furnish and keep in repair the necessary electric cables and apparatus for turning the bridge.

METHODS OF ASSESSMENT AGAINST REAL ESTATE.

LOCAL customs and laws have produced different methods of assessment. The prevailing opinion nowadays seems to be that "every tub shall stand upon its own bottom"—or, in other words, every piece of property on a street shall pay for one half the cost of all improvements done on the street; and this rule is perhaps as good equity in such matters as can be practised.

If it is desirable to raise a general sewer fund, legislative authority to do so may be obtained, provided that the city charter does not warrant the raising of such a fund; or a community may ask for an election, that a popular vote may give the council authority to issue bonds the sale of which will afford the funds desired.

Sometimes a general city tax can be levied annually to pay for sewers built during the year. A general sewer fund is in most instances necessary, because without it the sewers at street intersections cannot be built, and private property can rarely be assessed to pay for such construction; therefore it is necessary that the city have funds to pay its share of the construction, whether it be sewers or pavements, otherwise the property owners cannot have the benefit of such improvements.

It is customary for the city to pay from the general fund:

For sewer work—the cost of main and intersecting sewers, man-holes, catch-basins, lantern-holes, flushing tanks and outfalls; also sewers at all street intersections and along the frontage of all city public buildings and parks.

For street work—pavements and crossings at street intersections; pavements along the frontage of city public buildings and parks.

For bridges—all bridge and viaduct work between dock lines or meander lines, unless the construction involves a change of grade; then the city should pay for all the work done; also for all culvert work done on streets within the city.

It is very unusual for a city to pay from the general fund the cost of curbs and sidewalks at street intersections; this is invariably charged to the property located at each corner, respectively.

Where a city builds its own system of water-works the entire cost of the system is paid from a general fund provided specially for the purpose. The sale of water to the inhabitants is about the only method that has been adopted to reimburse the city for such an improvement; it is for this reason that the revenues from the water-works system are in most cities kept separate from other revenues. The revenues thus received are used to liquidate the indebtedness caused by the construction of the system and for repairs and extension of the pipe-lines, also for operating expenses.

When the revenues exceed the total expenses, the rates to consumers are generally reduced.

In many cities the property owner is charged only with the cost of laying an eight-inch sewer, no matter how much larger in diameter the sewer may be that was laid on his street. If a larger sewer was laid, the city bore the expense but charged the cost of an eight-inch sewer to the abutting property owners. Thus property assessments for sewer construction per lineal foot of frontage never exceed the cost per lineal foot for laying an eight-inch pipe.

It is also a common practice to assess each lineal foot of frontage of the entire city the sum of one dollar or more. This sum the city can draw upon for all sewer work, including the street sewers, which are a benefit to the abutting property; but when any lot has paid this sum of one dollar per lineal foot it is exempt from further assessments for sewer work. It will sometimes require three or more partial assessments, at intervals of several years, before the whole assessment is collected.

Where cities because of their topographical conditions are naturally divided, it is better to maintain these divisions when the sewerage system is planned, naming the different divisions "District A," "District B," etc. Where these districts are formed they are distinct from each other in all matters pertaining to sewer construction; each district can provide sewers for itself without interference from the residents of another district.

There is another method of levying assessments against property for street improvements founded on areas of property. Each lot is assessed one cent, more or less as may be required, per square foot of area contained within its boundary. This method of assessment may be used for the payment of sewer construction or for paving. A lot 50 feet wide and 120 feet deep contains 6000 square feet; at one cent per square foot the assessment would be $60.

In making assessments for improvements it is customary to deduct about one third of the total assessment levied against a corner lot.

Assessments made against church property and other institutions (not public) are paid by the trustees or other legal custodians of such institutions.

MISCELLANEOUS MEMORANDA.

CONDENSING-ENGINES require 20 to 25 gallons of water to condense the steam evaporated from one gallon of water.

A COLUMN OF WATER one inch square and $2\frac{31}{100}$ feet high will give one pound (static) pressure per square inch.

A CUBIC FOOT OF WATER at a temperature of 60 degrees (Fahrenheit) weighs $62\frac{367}{1000}$ pounds (= $7\frac{48}{100}$ gallons).

AN AREA 100 FEET SQUARE contains $\frac{23}{100}$ acres. To find readily the quantity of land in a given area, reduce it to square feet and multiply the sum by 0.23.

WEIGHT OF SUBSTANCES.

One cubic foot of	granite weighs	160	lbs.
"	" limestone weighs	130	"
"	" sandstone weighs	125	"
"	" brickwork weighs	125	"
"	" gravel weighs	84	"
"	" sand (moist) weighs	84	"
"	" clay (moist) weighs	90	"
"	" earth, common loam, weighs	75	"
"	" earth, common loam, moist, weighs	90	"

One cubic foot of elm, dry, weighs..... ... 35 lbs.
" " pine, white, dry, weighs.... 30 "
" " pine, yellow, dry, weighs.... 40 "
" " pine, Southern, dry, weighs 60 "

For green lumber add one fifth the weight given for each kind, respectively.

MASONRY AND BRICKWORK.

1⅛ barrels of lime and ⅝ of a cubic yard of sand will lay 1000 brick.

1600 to 1800 brick laid is a day's work for one man, properly attended.

1¼ barrels of lime and 1 cubic yard of sand will lay 100 cubic feet of stone.

One man and one tender will lay 150 cubic feet of stone in one day (rubble masonry).

1¼ barrels of cement and ⅘ of a cubic yard of sand will lay 100 cubic feet of stone, rubble masonry.

FOR MAKING CONCRETE.—Mix one barrel of cement with 10 cubic feet of sand; cast it upon 25 cubic feet of broken stone; moisten the mass with water applied with a rose sprinkler; overturn twice with shovels, then cast into trench in layers not exceeding 8 inches thickness and *ram* well in place. Rammers should weigh about 12 pounds. Do not drench the concrete with water when mixing it.

COAL.

Anthracite.

Lump coal contains 36:19 cubic feet per ton of 2000 pounds.

Egg contains 34.63 cubic feet per ton.

Nut contains 34.32 cubic feet per ton.

Pea contains 37.60 cubic feet per ton.

Bituminous Coal.

Indiana block contains 45.61 cubic feet per ton of 2000 pounds.

Illinois coal contains 42.35 cubic feet per ton.

Ohio cannel contains 40.66 cubic feet per ton.

Hocking contains 40.56 cubic feet per ton.

Coke contains 76.04 cubic feet per ton.

GRADES OF SEWERS.

THE grade or inclination of a sewer is an important feature of a sewer building. It is not wise to lay sewers at such excessively steep grades that the fluids will flow rapidly away, leaving the solids stranded as it were for awhile, to be shoved or carried along farther by the next influx of fluid, for the flow of sewage is not a certain constant quantity, only in main sewers which receive their flow from all the minor sewers, and even in main sewers the volume of flow varies with the hours of the day in accordance with the domestic work of the many households which supply it.

If the grades are too light or there is too slight an incline, there is more danger of clogging and stagnation, which will cause offensive odors and the accumulation of gases within the sewer system. As a rule, what is sufficient to drain the street surface is more than sufficient to drain the sewers.

Where the combined system is used the watershed area and the annual rainfalls are the governing factors. Locality, therefore, makes a great difference in this respect: the larger the watershed the larger must be the sewers. Where the ground takes up much water and where the streets are unimproved, one fourth of an inch rainfall per hour is a fair basis for determining

the size and grade of the sewers. In a city where all the streets are improved (paved or macadamized) the absorption is very small, and one-half inch rainfall per hour is a safe basis for computation.*

The shape of a sewer affects its velocity, and the size affects it even more. An elliptical or egg-shaped sewer gives a greater velocity to the same volume of sewage than if it flowed through a round pipe of the same sectional area; the reason for this is that there is less wetted perimeter (i.e., wetted pipe surface) in the former than in the latter to the same volume of sewage, and this wetted surface retards the flow in direct proportion to its area. A sewer five feet in diameter with a fall of four feet per mile, and a sewer two feet in diameter with a fall of ten feet per mile, have the same velocity that a sewer ten feet in diameter with a fall of two feet per mile has. A sewer having a velocity of three feet per second is sufficient; five feet per second is considered an extreme velocity.

Where the separate system is used the questions of watershed areas and rainfalls are not considered. In this case the sewage of the city only is to be cared for. Here the population of a city, present and prospective, which is to be served with house-drainage is the consideration of the engineer who makes the plans for the system.

Whichever system is adopted, the grades and sizes

* The rainfall in Wisconsin during the months of May and June, 1892, amounted to fifteen inches. This is equal to nearly one half the annual average rainfall for the decade of 1880–90.

of sewers are not a matter of guesswork but of mathematical calculation, good judgment, foresight, and skill; and every locality where sewerage is contemplated must be studied and treated according to the conditions found, if an efficient system, economically built, is desired.

The centre of all streets for a width of at least ten feet (located longitudinally with the street) should be reserved in all towns and cities exclusively for sewers. This reservation should not prevent the surface of the street from being used for any legitimate purpose or traffic. It simply reserves that much of the street from occupation by water, gas, and other pipes, or obstructions to sewers and sewer grades. A sewer in operation is a gravity conduit, while other pipes or conduits are not and a grade is not essential to their operation; with a sewer, grade is everything; therefore a sewerage system should have first place in municipal consideration and foresight.

FIRE LIMITS.

THE fire limits of a city should be the corporate limits, but for many reasons they are not so defined. The customary practice is to establish a fire limit which encloses the business centre of a city and allows the residence portion to build as it pleases and fight fires when compelled to. In most cases the only difference existing between the inside and the outside of the fire limit is that only brick or stone structures can be erected within the fire limits, and no restrictions whatever are placed upon building methods outside of it; consequently the fire limit is surrounded with a dense mass of kindling which, if ignited and favored with a brisk wind blowing from the right quarter, will burn to the corporate limits—the only fire limits it recognizes.

The actual reason why the ordinary fire limits of a city are so contracted is, that it entails upon owners of property within such limits more expensive buildings. The possibilities of obtaining lower rates of insurance and securing less danger from fire are minor considerations with many. The overwhelming depression, private and public, which falls upon a community that has suffered a sweeping conflagration is not known or appreciated until experienced. Cheap buildings are desirable adjuncts wherewith to boom a town, but they add nothing to its permanence. The logic de-

duced from our present building laws is well illustrated by the remark of an alderman of a city that had recently suffered from a great fire: "It is better that the homes of the people should burn rather than the shops and factories which give them employment"—which is practically saying, "Of two evils choose the least." Yet when a fire sweeps everything, homes, shops, factories, and all, directly there is a strong demand upon all sides for better and more stringent building laws. There is an underlying principle of selfishness, or it may be said avariciousness, which controls and defines the area of a fire district in cities. Builders as a rule will erect buildings which will give the highest remuneration upon the investment, and the rule as applied is: a building erected on a certain lot and costing $4000 will return $400 per year to the owner, and a building erected upon the same lot, and of the same dimensions, which costs $3000 will also yield $400 per annum. The established fire limits compel the erection of the higher-priced building.*

The principles of fire-resisting construction and fire limits cannot be very successfully maintained against the percentage principles of investments; they are the strongest in times of disaster.

* In less than three weeks after the great fire in Milwaukee, Wis., of October 28, 1892, the burnt district, which had been previously covered with frame or wooden buildings, was again dotted with wooden buildings which had been moved there by property owners; one owner taking out four permits at one time for moving wooden houses thereon. Yet there existed at the time a popular demand that this burnt district be incorporated within the fire limits.

BUILDING LAWS AND ORDINANCES.

EVERY city in this country that has been visited by a disastrous conflagration has immediately thereafter promulgated more stringent laws and regulations regarding the construction of buildings, and this fact seems to indicate that few if any of our cities have building laws that are adequate and practical, or else they are not properly enforced by the authorities.

All of our larger cities have in force laws and regulations governing the construction of buildings of different kinds designed for different uses, with inspectors appointed whose duties are to enforce these laws. These building laws require that the doors of public buildings, factories, and assemblage halls shall open outwards; that fire escapes or ladders shall be provided for hotels, office buildings, etc. To insure strength of walls, certain thicknesses of wall are defined for each story and the safety loads for floors are prescribed, yet in spite of all precautions communities are often horrified at the great loss of life incident to a conflagration. In most instances the cause which led to the loss of life was bad construction—perhaps weak construction is a better expression, owing to the niggardly economy of the builder, who will erect an 8-inch wall

when it should be 12 inches thick, and support floors with posts 6 × 6 inches cross-section when they should be twice as large. The strength of all kinds of building material, where used to carry certain loads under specific conditions, is readily determined by the competent architect and engineer, and it should be made a criminal act for a builder to erect buildings whose walls and floors have not been passed upon and approved by competent judges. The building laws of most cities are supposed to insure safe construction in this respect, but in very few cities are such laws rigidly enforced. It is commonly said that an efficient building inspector has a short term of office, and there is more than a grain of truth in the saying; every bit of poor construction which he condemns makes the owner thereof his implacable enemy, and the inspector is sooner or later "worked" out of office.

The use of anchor-bolts for uniting floors and wall together is the worst sort of construction and should not be tolerated. The specious plea for using such bolts is that the floors thus bolted to the walls tend to stiffen them and thus make them safer. This is undoubtedly true as affecting a weak wall; any prop will strengthen a weak wall, but a strong wall needs no extraneous support. In reality the anchor-bolt makes a building unsafe and more dangerous to life and property should it take fire. If the walls of a building are not designed with sufficient strength to stand safely without the extraneous and doubtful stiffness which

the floors will afford, then their erection should not be permitted. Builders of the Budensieck kind defend the use of anchor-bolts because they tend to strengthen the walls of a building: it is a great pity that such builders cannot be deprived of the use of the anchor-bolt. When buildings of this kind take fire they are unsafe to approach; firemen dare not enter them nor mount the walls, and a fire-marshal would be justified in allowing such buildings to burn to the ground. If the walls of a building are designed and built of proper strength and stiffness, the excuse for using anchor-bolts is removed.

The following tables show the usual thickness of wall required for buildings at different heights or stories:

For Business, Manufacturing, and Public Buildings, Sixty Feet or more. Thickness in Inches.

Outside, Party and Division Walls.	Basement.	Stories.							
		1	2	3	4	5	6	7	8
One story....	16	12							
Two stories..	16	12	12						
Three " ..	16	16	12	12					
Four " ..	20	16	16	12	12				
Five " ..	24	20	16	16	12	12			
Six " ..	24	20	20	16	16	16	12		
Seven " ..	24	20	20	20	16	16	16	12	
Eight " ..	28	24	20	20	20	16	16	16	12

For the same Class of Buildings as for previous Table less than Sixty Feet deep. Thickness in Inches.

Outside, Party and Division Walls.	Basement.	Stories.							
		1	2	3	4	5	6	7	8
One story....	12	12							
Two stories..	16	12	12						
Three " ..	16	12	12	12					
Four " ..	20	16	12	12	12				
Five " ..	20	16	16	12	12	12			
Six " ..	24	20	16	16	12	12	12		
Seven " ..	24	20	20	16	16	12	12	12	
Eight " ..	24	20	20	16	16	16	12	12	12

If the walls are built of rubble masonry, or are faced with stone, an increase of 4 inches in thickness should be added, also an increase of 4 inches should be made in all cases where the walls are over 100 feet long, unless there are cross walls of equal height.

Buildings erected for the storage of petroleum or fluids of like nature should be constructed as follows:

Walls should be 16 inches thick and not more than 16 feet high, made of brick; the floor to be of fire-proof paving or concrete upon the ground, level of floor not to be above street grade. Roof to be of metal or best composition roofing; fire-wall all around 8 inches thick and not less than 18 inches high. It should be built without cornice of any kind.

There does not seem to be a good, practicable method for chimney construction provided in any of the building ordinances which the writer has read. Most of them commence by saying that "no chimney

shall be built with walls less than 4 inches thick, and no flues to be less than 8 × 8 inches." This is poor enough construction for any chimney, and the ordinance presumably deters the builder from setting his brick edgewise when he builds his chimney.

There should be a standard chimney, well defined in dimensions and construction, for each class or kind of houses erected in cities, because the "defective flue" is the principal cause of fires in all cities. It is a serious risk to build a fine house with chimney walls only 4 inches thick. Bituminous coal, and all coal which contains more or less sulphur, will in time destroy the lime-mortar in the joints of a chimney and render them as porous as a sieve; for this reason the chimneys of all buildings erected in cities should be lined either with clay pipe, terra-cotta lining, fire-brick or cast-iron. Plastering the inside of a chimney is not sufficient protection where coal is burned. If dwelling-house flues were lined with common brick placed edgewise within the 4-inch walls, it would be a vast improvement upon the average dwelling-house chimney; the walls would then be about 7 inches thick and the joints would alternate, thus making it a safe flue within the house.

In this country there does not seem to be any personal responsibility connected with weak and defective construction of buildings, we see enough of it so far as sidewalks, bridges, etc., are concerned, but the owner of a weak, badly constructed building goes scot-free should its destruction damage other buildings.

Contractors are often held liable for injuries received by an employee on the work and have to pay a smart sum of money in consequence; yet that same building may afterwards take fire because of a defective flue, and in burning destroy all the adjacent buildings, but the owner of the building is never held liable for the destruction of the adjacent buildings because of the defective flue. A French court a few years ago held a property owner liable for the destruction of adjoining property by fire, caused by a badly built chimney erected by the defendant. With all our love of justice and fair play, we Americans have not yet reached this degree of equity.

FIRE-RESISTING CONSTRUCTION.

WHILE we cannot erect buildings that are absolutely fireproof, yet we may erect buildings of brick and iron that are less liable to damage beyond repair, and we can erect wooden buildings that will resist fire long enough to enable a fire department to save them and their contents from a total loss, and without doing serious damage to adjacent buildings. Soon after the second great fire in Chicago (July, 1874) a prominent builder of that city was asked, "What are the essentials of a fireproof building?" The builder's sententious reply was: "Build of brick and iron, use the least quantity of stone possible, leave out all doors and windows, and put nothing in the building." His comments upon the use of materials are the strong points of fire-resisting material. Our best building stones, limestone and granite, are the poorest fire-resisting materials we can use in a building, for they will absolutely go to pieces under great heat. A brick building to be fire-resisting should have all its iron columns and beams covered with asbestos or other non-heating substances: to leave such columns and beams exposed is to insure their destruction should the building take fire. Its windows should be protected with metal shutters, and its roof slated or metal-covered. Elevator openings and stair-

ways should be located outside its walls, thus having no openings in the floors within the building. The floors should be laid solidly with two thicknesses of plank, with an intervening thickness of tin or galvanized sheet-metal placed between the plank. The roof should be made of three-inch plank, lap-jointed, and then covered with slate or metal. If the basement is to be used for any purpose that causes an accumulation of inflammable goods, such as a printing establishment would have, the basement walls and the pedestals supporting the columns should all be of brick. Wooden columns will stand a hot blaze for some length of time. They are far safer than ordinary cast-iron columns; in fact, they are better than iron columns unless the iron is covered with some non-heating substance. A wood column burns slowly when subjected to a flame, and will char slowly when subjected to heat alone; while an iron column will soften and weaken when subjected to either heat or flame,* and if a stream of cold water strikes a heated iron column it will surely go to pieces.

There is no building that firemen dread more than one built with light brick walls, a stone-veneer face, the front and floors supported with cast-iron columns

* At the great fire in Chicago papers of tacks and kegs of nails were fused into solid masses and retained their package shape, showing that intense heat (not flame) had fused the iron into a mass before the package covering was burned or destroyed, otherwise the package shapes would not have been preserved. The iron-work of a carriage melted and dripped as if it had been tallow, while parts of the wood of the running gear still retained their shape although much charred.

unprotected. A building of this kind is a menace to life and property when on fire, and in some respects worse than a wooden-building.

Wooden buildings to be fire-resisting should be enclosed or sheeted outside of the studding; have no elevator or stairway openings within the building, and the floors and roof built as described for brick buildings (excepting slate covering). The ceilings, walls, joists, studding, and all other exposed surfaces within the building should be well whitewashed, which makes the fibrous surface of the wood less liable to quick ignition when a fire occurs.

In brick buildings wire or metallic (corrugated) lathing should be used upon which to plaster the walls and ceilings. All doorways should be surfaced with tin, and the doors themselves covered, both sides, with the same metal. All chimney-flues should be lined with either clay pipe or fire-brick from the bottom to the top of the chimney. A hollow cornice of either wood or iron should not be built, a simple brick finish is better, or a terra-cotta cornice if ornamentation is desired.

When wooden columns are used they should be bored through the centre longitudinally (1½ inch bore) and half-inch holes bored transversely at the top and bottom, to prevent dry-rot. The cast-iron caps for the tops of the columns should have a projection to enter the bore of the column, and the area of the caps should be about three times the cross-section of the wooden girders.

Care must be taken also to prevent dry-rot in the thick flooring, when it is the intention to plaster beneath it by nailing the lath to furred projections.

Cross-walls should occur in the building as often as convenience for use will admit; if none can be built, the walls must be strengthened with substantial pilasters. To go farther into the details of fire-resisting construction would encroach on the specifications which the architect should furnish to the builder. The foregoing items are given to define the essential features of fire-resisting construction.

MUNICIPAL BONDS.

THE issue of interest-bearing bonds for the purpose of providing funds for the prosecution of public improvements is a matter of much importance to a city, and demands great deliberation as well as the exercise of good financial judgment. While the finances of a city may be in such excellent condition that its bonds when issued for a reasonable amount make a really good, sound investment, yet sometimes the methods of procedure in preparing the issue are so irregular and careless in their details that the bonds do not command a premium, nor even find a ready sale, as they otherwise would had the work of the council been better done.

The issuance of bonds by a council should always be correct in its minor details, and conform strictly to the law by which the issue is governed.

When permission has been granted a council by the affirmative vote of an election to issue bonds, the law authorizing such election and the result as shown by the affirmative and negative votes cast should be printed on the face of the bonds; also the act passed by the council authorizing the issue, with all the necessary dates. These statements are relatively the same as an abstract of title to real estate, which the pur-

chaser can verify or not—as he chooses. Some cities also make a statement, on the bonds which they may issue, of their taxable wealth and property, and the population of the city.

The tendency of the average council in many of our smaller cities is to such paucity of record, and meagreness of description of council proceedings as oftentimes to subject the city to discomfiture in suits at law. The records of proceedings of a council are as valuable to the city it represents as are the recorded transactions of a counting-room of a mercantile house; therefore the same degree of care and accuracy should be observed when noting them.

The denomination of the bonds is also matter of consideration: if of large denomination, they will in most instances be bought up by bankers or brokers of distant cities; very few, if any, are taken up by the home capitalist, the denomination being too large an investment for him; if the issue is made in small denominations the citizens at home, of small as well as large means, may absorb the entire issue. The great city of Chicago found a ready sale of its bonds in denominations of $50, bearing an annual interest of 3 per cent. Bankers and brokers generally prefer bonds of large denominations and long-time periods before maturity. A bond issue should not be made with conditions of payment that will prove onerous to a city. If the bonds are payable in instalments, the period of time between them should be at least two years, especially if the instalments are very large,

although the creating of a sinking fund to meet large payments on long periods of time is quite as onerous. The taxpayer generally prefers an alternate year for a breathing spell, when no special tax is levied.

There are no better securities in the land than the bonds issued by a thoroughly solvent, well-governed municipality, and its long-time bonds are much sought after by investors; such bonds will find purchasers a long distance from home.

In the West, and in fact all over the country, the rate of interest on money has been of late years steadily decreasing. We have seen the interest on Government bonds drop during the past twenty years from 7 per cent to 2 per cent. Many cities in the West that have been paying 7 per cent on their railway bonded indebtedness for the past twenty years can now borrow money at 5 per cent, and not a few have borrowed at 4 per cent. Since cities have ceased donating bonds to railway schemes, and have had legislative restrictions placed upon them limiting the amount of bonded indebtedness they can incur, the facilities for borrowing money have become greater, and the rate of interest paid by municipalities has been lowered. Cities which twenty-five years ago "cheerfully" gave three hundred thousand dollars in bonds, bearing interest at 7 per cent annually, to the furtherance of some railway project, nowadays consider it a very serious matter to issue, for the construction of water-works or sewerage, fifty thousand dollars' worth of bonds, bearing an annual interest of 5 per cent.

Judging from the past, it is fair to suppose that the future rate of interest will be lower than now, and not a few able financiers believe that the general rate after another decade has passed will be about three per cent annually. Taking this view, let us suppose that a certain city desires to issue bonds to the amount of forty thousand dollars. Will it not be good policy to issue the whole amount of forty thousand dollars redeemable in ten years at one payment, the rate of interest being 5 per cent? If at the end of ten years the city is unable to redeem them, or desires to defer their redemption because of other and more pressing necessities, it can refund the whole amount at the same rate of interest, or at a lower if the general rate throughout the country has dropped to the anticipated 3 per cent.

Certainly, if the decrease in rate of interest during the next twenty years corresponds to that of the last twenty, it will be unwise for any city to issue bonds for a longer period than ten years. The high rate of interest paid by Western cities on long-time railway bonds during the past thirty years demonstrates the folly of issuing a long-time bond. Perhaps the indications of a future low rate of interest is one reason why the long-time bond is preferred to one that is shorter lived.

CULVERTS.

A CULVERT is most generally built of wood when it should be built of either stone, brick, iron, or sewer-pipe and these materials are fast superseding the wood culvert.

Sewer-pipe twenty-four inches in diameter is about the extreme size that can be used for this purpose. A brick culvert thirty inches in diameter can be built as cheaply as an iron-pipe culvert can be laid of the same diameter. If pipes are used, end protection walls must be built to prevent the washing away of the earth at the ends of the pipe.

Large-span culverts, where sufficient height can be had, can be arched and built of stone; but if there is not sufficient height for an arch, two masonry walls can be erected and steel I beams (twelve or fifteen inches depth—according to the length of span) placed upon them, the ends of the beams built into the masonry flush with their upper surfaces, then floor the structure and erect railings upon either side. The bed of the stream, beneath culverts of large span, should be paved with stone to prevent scouring in flood seasons; the paving-stones should be not less than twelve inches in height. Never set the walls of a

culvert on the paving: to do so is to invite their destruction.

The distance between culvert walls allowed for the flow of water should never be less than the extreme width of the stream it spans; make the distance more rather than less. More width is required for the discharge of water than when the "oldest inhabitant" first saw the same stream. As the streets are graded, gutters are paved and many street surfaces are wholly paved, there is a greater influx of water received into the bed of the stream and in a much shorter period of time than when it was a winding meadow brook, half choked with weeds and rushes, and the verdure-covered land held much of the rainfall for evaporation and absorption by the earth. Under better conditions of streets and areas the rainfalls will cause the water to rise rapidly in the stream and to a greater depth than before, and it will fall rapidly if the bed of the stream has been cleaned, straightened, and otherwise improved, as it should be to prevent damage from high water. If the area of the watershed drained by a stream is computed,—which can be easily done,—there is no reason why the width of a culvert opening should be matter of guesswork; the sectional area and the fall of the stream are also easily determined. With these essential factors on hand the local engineer can readily determine how wide the opening of the culvert should be, basing his calculation upon a heavy rainfall upon snow-covered, frozen ground,—a condition or conditions which will give the

greatest fluctuation. A heavy rainfall at the close of a protracted season of rain will also require great capacity of discharge. A one-inch rainfall upon one acre of ground is equal to 27,225 gallons of water; allowing a loss of 25 per cent of this quantity by evaporation and absorption, there is still 20,418 gallons to be cared for under ordinary conditions and circumstances.

PLANS FOR A CITY HALL.

WHEN the building of a city or village hall is contemplated and the plans are in the formative stage, the first thing to be considered, when the site has been determined, is the convenience of rooms, one with another, relatively to public affairs; that is, particular rooms or offices most frequented by the public should be easiest of access, and be located so as not to discommode those who occupy rooms less frequented. For instance, the rooms of the city clerk, treasurer, and chief of police or marshal should be easiest of access, because they have constant business with the public more than other city officers.

The accompanying plans of the first and second floors of a city hall are shown, not for an architectural consideration, but merely to determine the best arrangement of the various offices suitable for their purposes.

The duties of the city clerk and treasurer are almost identical—at least their work is quite interdependent—consequently their office rooms are placed together; each room has its own vault, and the rooms can be used *en suite* or not—during tax paying time it will be quite convenient to use them so. The corner entrance affords direct access from the street and the desk-

railing forms a lobby in both rooms in which the public can transact business with the occupants.

The chief of police or marshal has an office on the ground floor, near the main entrance; as an officer for emergencies he is therefore located where he can be reached easily and quickly. The marshal's duties are quite in common with those of the "superintendent of the poor," or the person who has charge of public or municipal charities: for this reason the rooms of these two officials adjoin.

In the rear of the Poor office is the water-closet, and beyond it the policemen's room, from which the patrolmen come and go as their duties require. This room has a side entrance, presumably from the alley, through which arrested persons may be taken to the lockup without passing through the building. The location of the water-closet, as shown, makes it convenient of access by all the occupants of the building, and for the police to take when necessary those who are confined in the lockup. From the police-room is a door to the basement stairway convenient for the janitor. The lockup adjoins the police-room, and is designed for temporary lodgment only; it is provided with bunks which should be iron cots, and the bedding should be blankets, and cotton ticks filled with straw, and pillows of the same materials. The blankets should be washed often, and the ticks and pillows, with contents, should be burned as often as necessary. The windows of the lockup should be at least seven feet from the floor, and barred upon the

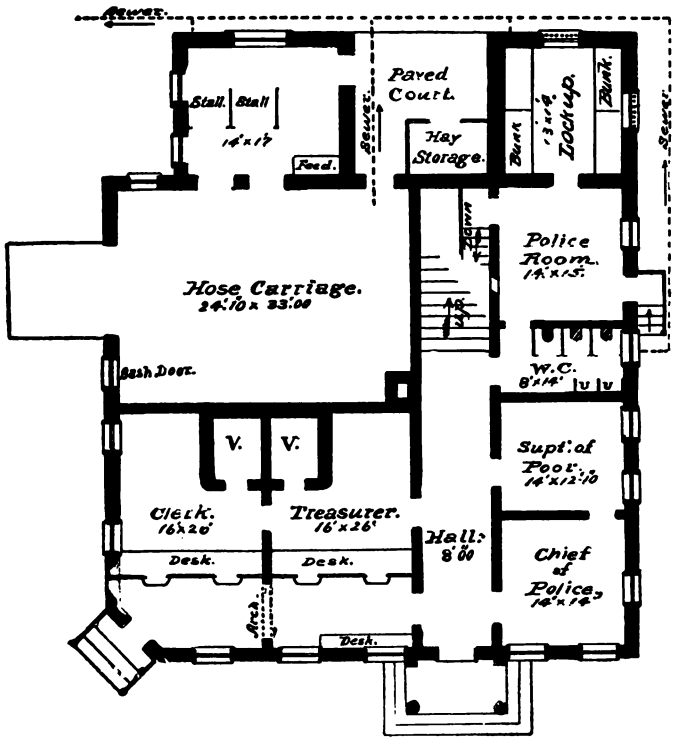

GROUND PLAN—FRONT.

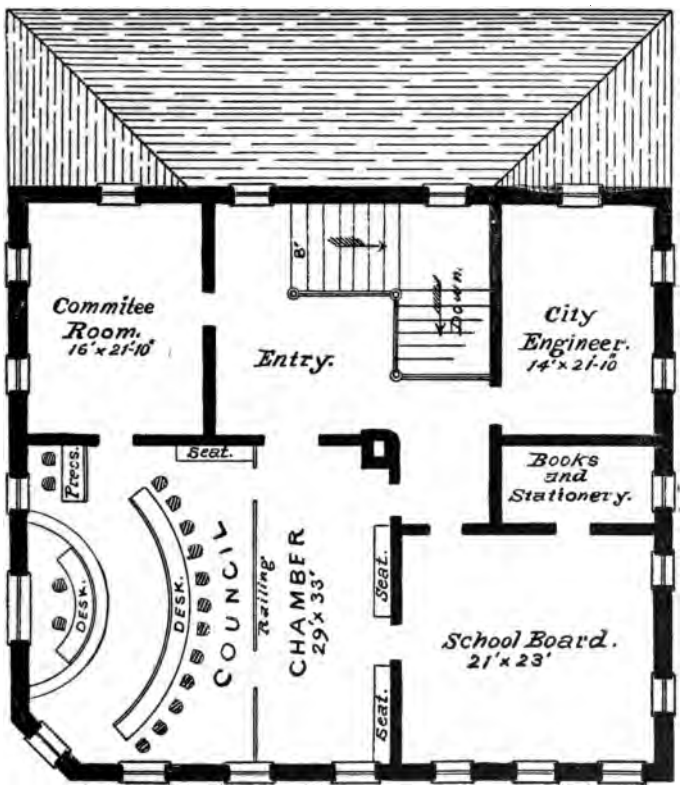

SECOND FLOOR—FRONT.

outside. There is no basement under the lockup floor; the area inside the walls is filled with gravel to within six inches of the floor level, and upon this are placed slabs of stone six inches thick, which serves as a floor; ventilation should be provided at the ceiling. The floor of the hose-carriage room is presumably about two feet lower than the office floor of the hall. There is no basement underneath this room nor under the stable adjoining; the floors are on a level with the grade of the sidewalk, and are made of two thicknesses of surfaced plank, laid crosswise of each other upon a gravel filling, the same as described for the lockup floor; or a cement floor may be laid.

The stalls in the stable are planned the same as those in general use where the doors are opened by electrical power; no mangers are provided, the animals being fed from boxes placed before them, or, as is most commonly done, the feed is dumped upon the floor at the head of the stall. The place for hay storage is sufficiently large where baled or pressed hay is fed; this may be built with 4×4 inch posts and the outside sheeted with No. 26 galvanized iron and then painted; all that is necessary is to protect the hay from sparks of fire and from pilferers. The paved court, if roofed, makes a convenient place to groom the horses. It is presumed the city has a water-works system, and only a two-horse hose-carriage need be kept in the building; larger accommodations for stabling horses will be necessary if both a steam fire-engine and hose cart are kept in the building. It may be observed

that no communication exists, within the hall, between the office part of the building and that portion occupied by the fire department; consequently no odors from the stable are communicated to the offices. If it is necessary to place a heating-stove in the hose-carriage room, another flue may be added to the chimney, although it is designed to heat the building either by hot air or steam, from a boiler or furnace in the basement.

The main hall is eight feet wide, and leads direct from the main entrance to the stairway, which is of the same width. The stairway should be of easy ascent, not more than seven-inch risers and about fourteen inches tread. The entry at the head of the stairway is commodious and well lighted.

The council chamber has a wide entrance—doors to be double, and to swing either way. The chamber is 29×33 feet, and ample for a council composed of fourteen aldermen. It is well lighted, having six windows; the large window shown above the mayor's desk should be placed at least eight feet above the floor, and the glass should be either colored or opaque, so as not to affect the eyesight of the aldermen who may sit facing it. The location of this window affords a good position for placing an historical window of colored glass, relating to some past event in the history of the city. The chamber should have a hardwood floor, and the walls should be wainscoted to a height of about four feet upon all sides.

The school board has a room adjacent to the council-

chamber; a window-lighted closet connects with this room, where books and school supplies may be kept under lock.

The committee-room, connecting with the council-chamber, can be used as a mayor's office if desirable. The city engineer's office is convenient of access and well lighted.

The lower floor of the hall should have its ceiling fourteen feet high; the upper floor may be the same if additional height can be had in the roof over the council-chamber—the ceiling of the chamber should be fifteen feet high. If the ceiling of the lower floor is made fourteen feet high, that of the hose-carriage room will be about sixteen feet. There is no economy in making ceilings very high: they do not afford any better facilities for ventilation than of moderate height; besides, more expense is incurred in heating rooms with lofty ceilings. Ventilation for the council-chamber may be had through walls and roof, if provided for in the plans.

The extreme dimensions of the hall are 54×60 feet. The rear addition is 16×60 feet if we include the court. The building is presumed to stand at a street corner, detached from other structures.

The ground area occupied by the building includes 4328 square feet. It can be built for about $12,000, which includes heating apparatus, plumbing, and sewer connections.

It is designed to be of brick, with stone door and window sills, water table, and porch columns. Roof to

be slated. Hardwood floors in hallway and entry; stairs of the same material. Provide ventilation for the vaults by means of iron pipes, about three inches in diameter, which may be removed when the vaults have dried out and the openings then filled with good concrete. It is almost impossible to make a vault (such as are shown in the plan, for the clerk and treasurer) dry out in a year's time so that it can be used, unless ventilation is provided.

CLEANLINESS AND PUBLIC HEALTH.

WE of this generation are lectured more on the subject of cleanliness as conducive to public health than on almost any other matter which relates to public affairs. Yet our towns and cities are not kept in a cleanly condition; indeed, there are few municipalities which do not put forth supreme efforts, annually, to eradicate or abate some epidemic that is increasing the death-rate of the community above the average, and the cause of this increased mortality can in most cases be traced directly to a neglect of proper sanitation.

The cleanliness of cities is an enforced, not a voluntary, condition. Every city has upon record laws and ordinances sufficient, which if properly enforced, would leave nothing to be said or written upon this subject; but filthy conditions exist because such laws are not enforced, and only in our larger cities is any serious attempt made to make people cleanly according to the requirements of sanitary laws and regulations.

The cleanliness of a city, if made clean at all, must be obtained through the efforts of a board of health, a body of medical men appointed specially for the purpose of enforcing such sanitary laws and regulations as are by charter provided; but if these medical

men, in the exercise of their duties as health officers, attempt to carry out the sanitary requirements of the law, involving an expense to the individual and the city, they will surely draw upon themselves a great deal of censure and personal dislike. The average individual seems to consider personal conditions as personal prerogatives, and therefore resents most emphatically any insinuations regarding the filthiness of his person or premises. If by the filthiness of his premises sickness is caused in his household, he will not hesitate to call a physician to meet the patient; but if that physician, as a health officer, have previously called upon the householder and warned him to remove the existing cause of the illness, the probabilities are that the physician will be unceremoniously ordered off the premises, nor will he afterwards be called to treat the patient. This should not be considered an exceptional instance, for every bureau officer connected with a city government knows how far he can go in the discharge of his duties and retain his popularity; when this is gone his displacement is sure to follow.

The general public are apt to confound hygienic regulations with sumptuary laws and do not clearly note the difference; hence the unpopularity of an officer which oftentimes results from the enforcement of sanitary laws.

Some years ago it was a mooted question among scientists whether disease is produced by filth alone or by filth and some particular poison. Of late years

Liebermeister's opinion is gaining ground: that filth is the favorable nest (*nidus*) for disease to find conditions favorable to a rapid development, and a potent auxiliary to filth in the spreading of disease is dampness. The Massachusetts Board of Health says, in one of its reports: "The most widespread evil in our State brought out by these investigations is dampness of soil arising from incomplete drainage." This conclusion was arrived at after a series of long-continued and exhaustive investigations to find and locate causes which led to the outbreak of typhoid fever and other diseases.

We need no better sanitary laws and regulations than now exist in nearly all cities, but they do need a more efficient and intelligent recognition from the individual, and the general public through its representatives, the common council. If such laws were enforced one half as rigidly as the same laws are in the forts and encampments of the army, there would be much less to complain of in this matter of municipal cleanliness. There is no good reason why a city should not be as cleanly as the ground occupied by troops where the need of it is equally as great, if not greater; for a city has a large population of the young and the helpless to protect and care for. The Union troops which occupied the city of New Orleans during the civil war made that city so clean that no epidemics occurred there until after the government of the city reverted to its civil rulers.

It is undoubtedly true that the uncleanness of

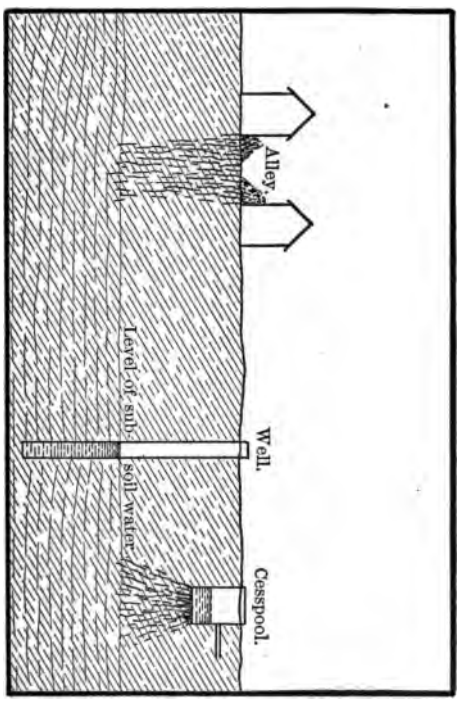
Alley.
Level of sub-soil water.
Well.
Cesspool.

towns and cities is the cause of most of the diseases which prevail within them. The diseases prevalent from this cause are small-pox, measles, scarlet fever, diphtheria, croup, typhoid fever, diarrhœa, cholera morbus and dysentery, consumption and pneumonia. The detailed causes of the appearance of such diseases are: bad or no ventilation, overcrowded habitations, a polluted surface and subsoil, bad drainage or none at all, neglect of vaccination, of isolation and disinfection, the presence of filth and the use of impure water in the household.

The purity of the water used has much to do with the healthfulness of a community, and the greatest care should be exercised to obtain a wholesome water which should be proven so by analysis. All water obtained from wells located within a municipality should be rejected for use in the household and the wells filled up, for very few will bear the test of purity. True, the average citizen will almost always defend the purity of the water from the well located upon his premises; he may say that he has drunk that water for twenty or perhaps forty years and he is quite certain of its purity. At the same time he forgets that the population about him has in the meantime increased perhaps an hundred-fold, and the now inhabited watershed which supplies that well with water is not the cleanly slope it was—all those years the population has steadily contributed to its pollution.

The water in such a well may be clear, sparkling, and palatable. The sparkle is due largely to the presence

of carbonic acid gas; and if some of the water is put into a bottle and placed where it will be warm, it will soon indicate its bad qualities by a putrid condition and offensive smell.

The vaults of all privies within towns and cities should be built water-tight. It is better that they should always be built so, whether in the city or country, for the farmer is not always particular regarding the juxtaposition of privy and well.

Where sewerage is provided the outdoor privy is generally dispensed with, but where it remains in use the vault should be built as previously stated, because it is essential to the healthfulness of a community that the area of ground upon which it lives and exists should be undefiled, that causes for its pollution should not be allowed to exist. In wet seasons, when cellars are made damp or are flooded with storm-water surcharged more or less with the pollution of the soil through which it percolates into the cellar, the future danger from disease in the household has its beginning. It does not follow that because the cellar has a connection with the street sewer to drain off the inflow, there will be an exemption from illness in the household; it is quite the reverse. For the sewer-drain removes only the flowing water and leaves the cellar damp, retaining all the impurities of the soil brought into it by the influx of the water. If storm-water is allowed to stand in puddles on the street, it will surely find its way into adjacent cellars if the soil is at all porous.

Parents are often inclined to charge the public school with the cause of illness of their children. Inferentially they are correct in doing so, for the public schools assist in the dissemination of diseases, but it is rarely that a disease originates within them. More often the disease which has an outbreak in the school comes from some household wherein the sanitary conditions are bad, and the children have carried its results into the school-room.

During the late war, after a regiment had encamped upon a plot of ground for several weeks, its commander would remove the regiment elsewhere, and the camp would then be made upon new and fresher ground, because the old camp-ground had become uncleanly and in a condition which made it a menace to the health of the troops encamped upon it. Yet there are hundreds of towns and small cities in this country which have been camping-grounds for the denizens thereof for a great many years, and they have neither moved to more cleanly and fresher sites nor have they done anything to make existing conditions more cleanly and healthful. The truth plainly told is that the average citizen of the smaller towns and cities has rather a contemptuous opinion of sanitation in all its branches, and is also inclined to consider the relations between filth and disease as being something mythological.

The occasional cholera "scares" which sweep this country are the best incentives to municipal and private cleanliness that we have. One scare such as we

had in 1892 did more to alarm and awaken the public to the needs of general sanitation, and cause immediate and active efforts towards cleanliness, than all the lectures and publications which have been uttered upon this question during the past quarter of a century.

If we are inclined to believe that the particular city in which we live is a cleanly one, all we have to do to prove or to disprove the fact is to make an exploration of the alleys and back-yards within it. It is not necessary to relate what sorts of filth may be found, nor speak of the general condition of the alleys and back-yards thus explored, but it is quite safe to say that few of us can make such an investigation and afterwards say that we live in a city which is thoroughly clean.

The writer was told more than once that a heap of manure which remained piled in an alley some length of time was not at all detrimental to healthful conditions, because, it was said, it contained so little moisture—never enough to make a rill, however small; yet directly above the heap was the eave of a barn, without a gutter; and all the rainfall from that slope of the roof fell on and about the heap, carrying with it into the earth its share towards the pollution of the soil of the city. In many places it is hardly thought worth the while to grade alleys and provide them with gutters, because they are so little travelled; consequently the rainfall, instead of washing its surface clean, makes pools of water in all the de-

pressions, and its subsequent absorption carries all the impurities into the earth with it.

Garbage should always be deposited in water-tight receptacles and thence regularly emptied and the contents carted away. Manure, carcasses of dead animals, small as well as large, dead poultry and all such refuse should be removed daily from the precincts of a city and either buried or burned; the dumping of such matter into living waters should be prohibited by a general law.

The piles of boxes, barrels, refuse timber, and other such material generally found in back-yards are not conducive to healthful surroundings; they not only retain dampness and become affected with partial decay, but they cover the ground and keep it damp, when every foot of unoccupied ground about the premises should be exposed to all the air and sunshine that can favor it. Decaying vegetable matter in back yards will produce miasmatic conditions as well as if it were in a swamp, with a partial advantage in favor of the swamp during those seasons of the year when it is overflowed with water, the decay being arrested by the submergence. Casting kitchen slops upon the premises should never be allowed by a householder. They contain a great deal of objectionable matter and is one of the most difficult fluids to dispose of by earth absorption that we have, and one of the most difficult to cleanse of its impurities. Few persons can conceive, without examination, how very foul a plot of earth will become that has been the dumping-place for

kitchen slops for a considerable length of time. If the soil is at all porous, this sort of pollution will affect the earth many feet below the surface.

It is difficult to prevent the use of cesspools on private grounds, but every cesspool in use contributes to the unhealthfulness of a community, inasmuch as it contributes to the general pollution of the subsoil.

Individual effort employed at intervals will not keep a city clean; the combined efforts of all are required: if one man keeps his premises clean and his neighbor does not, both are likely to suffer from the latter's neglect. Perhaps no other condition in life in which man is placed exemplifies so well the old adage "that one man is another man's keeper" as in this one question of municipal cleanliness, when a neighbor having filthy premises may cause disease and death in one's household.

The statistics of the cholera epidemic which prevailed in London in 1854 show that where people used water conveyed through pipes from a pure supply the deaths were 37 to 10,000, and among those who used water from wells and cisterns the deaths were 130 to 10,000. Sixty-six per cent greater mortality among those who drank impure water! This is cited to show how thoroughly the subsoil of a city can become polluted and the inhabitants not realize to what extent the danger exists.

Ice will contain germs of disease if taken from waters affected by the decomposition of vegetation; this is often done under the belief that the water from

which the ice was formed is strictly pure. Freezing water does not destroy the germs of disease it may contain, although freezing may cause them to be inoperative, as it were, until placed in warmer conditions when used in the household. Therefore a city should, as a part of its hygienic duties, exercise some oversight regarding the source of the ice supplied to its inhabitants.

In all towns and cities there exist people who are not cleanly either of person or premises; a great many who have come here from abroad are not cleanly either by training or instinct, and their number is so large and they congregate under such unwholesome conditions in our cities that they should receive special attention until they become habituated to a cleaner life. There are others also who are uncleanly in their person and surroundings who do not live in poverty nor in overcrowded tenement-houses. Squalor and poverty are terms generally used to describe the poor of cities, yet there are many poor people who are as neat and cleanly in all respects as can be found: squalor and laziness are more often the conditions which go together, and where found the sanitary laws should be rigorously applied, for it is from such people that epidemics spread among our schools.

The health officer cannot very well compel cleanliness in a household, nor can he investigate the condition of private cellars previous to the outbreak of a disease. We can only surmise from external appearances that filthy conditions exist there, and we must

await results before an inspection of the premises will be tolerated. But we can compel cleanliness of clothes and person of the children sent to school from such habitations, and this is a matter which should be rigidly observed by all school boards. Some of them have already taken hold of this question of cleanliness of pupils and in a commendable manner, and public opinion should strengthen the hands of the school commissioner in this work, by giving him an unqualified support. As a hygienic writer has truly said, rear the children to habits of cleanliness and the result is a greater self-respect and a higher view of man's general condition, which leads them to revolt against filth and disease as they become older.

Sewage disposal is another important question which the denizens of all cities, not already having done so, will be called upon to solve. The great increase of population of this country during the past twenty-five years is shown quite conclusively, if in no other way, by the general adoption of sewerage systems even by incorporated villages as well as cities. Ten years hence the sewer connections in these towns and cities will be quite extensively made, and all those modern appurtenances of the household which collect and convey filth to the public sewer will be in almost general use, and the daily outpouring of sewage will then be so great that the question of sewage disposal will of itself arise,—and it can be *downed* only in one way, and that way must lead to a purifying process of some kind. Those cities located remote from tide-water

will be the first to care for their sewage which has been for years polluting some river, lake, or pond. We are quite content, as a general rule, to turn our sewage into such living waters, and excuse ourselves with the plea that it is but temporary; yet it is a fact that we do not abate the nuisance until an outside (outside the corporate limits) influence and pressure compels such abatement; and it is this outside pressure of public opinion which will sooner or later compel a majority of our cities to take care of their sewage in a manner that will not be offensive nor objectionable to the residents of adjoining towns.

Man is naturally gregarious, and what with "booms," bonuses to manufacturing plants, and the construction of suburban motor lines of railway, he is forcing this natural instinct to a greater development than was ever known before. By this means our cities are growing larger in area, and the populations becoming more condensed, and the question of sanitation follows closely at the heels of this rapid material development. The population is on the ground, its work of pollution has begun; for how long a community will fight against diphtheria, scarlet fever, and other zymotic diseases before it will, as a body, act to remove the causes, will depend largely upon the mortality within it.

The safe requirements for a community to observe and enforce to promote its healthfulness are: clean streets, alleys, and private grounds; a well-drained subsoil and dry cellars; the daily removal of all garbage; a water supply of known purity; good ventila-

tion in schools, halls of assemblage, and in its homes, and the observance of personal cleanliness in all conditions of life. We may not all be inclined to believe that these conditions are strictly essential to the general good health of a community, but we might give them the benefit of the doubt, and take care that the truth does not come to us through bitter experience.

PUBLIC CEMETERIES.

WHEN the selection of land is to be made for a cemetery, there are two essentials to be observed which should receive special attention from those who are to make the selection. These essentials are: a tract of land having a porous, sandy soil, and a water-supply readily available.

A heavy clay soil should be avoided, because every grave dug therein becomes a veritable cistern. Drainage-pipe laid in such ground does not help the wet condition of the soil to any material extent, because water cannot filter through the compact clay to reach the drains. The writer expended about $3000 in an attempt to drain the subsoil of a certain cemetery which was of heavy clay. When the work was done he saw with much dissatisfaction the subsoil water standing two feet deep on the bottom of a newly-dug grave located within a rod of the main drain.

A coarse gravel subsoil containing small bowlders is also an undesirable location. Such material is unfit for refilling graves; and it does not retain sufficient moisture to promote the growth of grass and shrubbery. A rolling, upland tract of land, contiguous to a living stream, pond, or lake, makes a desirable location

for a cemetery if the soil is more sandy than otherwise.

A cemetery should not be located too near the confines of a city or town, nor where there is a remote possibility that the site will some day become desirable and valuable for commercial purposes, for its removal is sure to follow when it does become so. There are numerous instances in this country where commercial needs have been the immediate cause for removal of a cemetery.

Some consideration should also be given to the character of the highway which funeral trains must travel *en route* from the city to the cemetery. Avoid if possible a highway which traverses steep hills, because it is always difficult for a long line of carriages to descend a continuous steep grade without accident. The quick movement or spring of a restive horse is liable to send the pole of a carriage into the rear of the one next ahead; or a sudden stop of the train might cause the same accident, with results quite serious to the occupants, and the driver be entirely blameless for the injury done. As funerals are daily occurrences, some consideration should always be given to the suburban highways they must travel over, and steep grades are one of the most objectionable features.

An abundant supply of water is necessary if we desire to preserve the vernal freshness and beauty of the cemetery through the dry and heated summer months. A lack of water is too often the cause of a

wilted-appearing, badly kept, dusty cemetery. With suitable facilities for supplying the lot-owners with an abundance of fresh, clean water, they are encouraged to keep their individual property freshly green and attractive all through the heated, dry season of summer, and they will not feel that their labors are wasted with every recurring drought.

If a natural supply is readily available, an elevated tank, a small pump, and a few hundred feet of cast-iron pipe will furnish the initial water-works system at a moderate cost, and the smaller pipe for supplying the grounds can be laid from time to time in such localities and lengths as are desirable. A tank 12 feet high and 12 feet in diameter contains 10,000 gallons. If placed upon a tower 20 feet high, locating the tower upon the highest ground available, there will be sufficient head to supply all parts of the cemetery with water, and all that is needed for grass, shrubbery, and sprinkling the driveways.

The pump-house should be located at the source of water-supply and connect the pump and tank with a cast-iron pipe not less than 4 inches in diameter, which costs about fifty cents per foot laid in the ground. The pump should be a duplex, with a capacity of about 100 gallons per minute. The pipe for supplying the grounds can be $2\frac{1}{2}$ and 3 inches in diameter, stocked with self-closing faucets or hydrants, from which the lot-owners take the water they need. Avoid laying pipe beneath the driveways wherever possible, to prevent digging into them when connections are to

be made. When the tank is once filled, a half-hour's pumping three times daily will about supply the demand for water, excepting perhaps on Saturdays and Sundays in hot weather, when more pumping may be necessary because of the larger number of visitors upon those days. A water-works system of this description can be built for about $1400, and is sufficient to supply all the water that may be wanted in a cemetery of 100 acres. The cost of the system, as stated, is for a wood tank, tower, and pump-house. If permanency of construction is desired, the tower can be built of brick or stone, the tank of iron, and a brick pump-house and chimney, and all of some architectural pretensions; but this kind of construction will cost a great deal more than the sum mentioned for wood construction. In either case the tank and hydrants should be so made that when cold weather comes they can be drained of water.

The ground selected for a cemetery should not, as a whole tract, require subsoil drainage; but if there are low places, which if drained are thus made available for burial-lots, care should be taken to place the drain-pipe well below the usual depth of a grave, and do not cross the lots with the pipe, if possible to avoid it.

Perhaps a word here regarding the kinds of trees which should be planted in a cemetery is appropriate —at least in connection with the subject of drain-laying. There is something to be fittingly said concerning those kinds which destroy the utility of drains by filling them with roots: these are the cottonwoods,

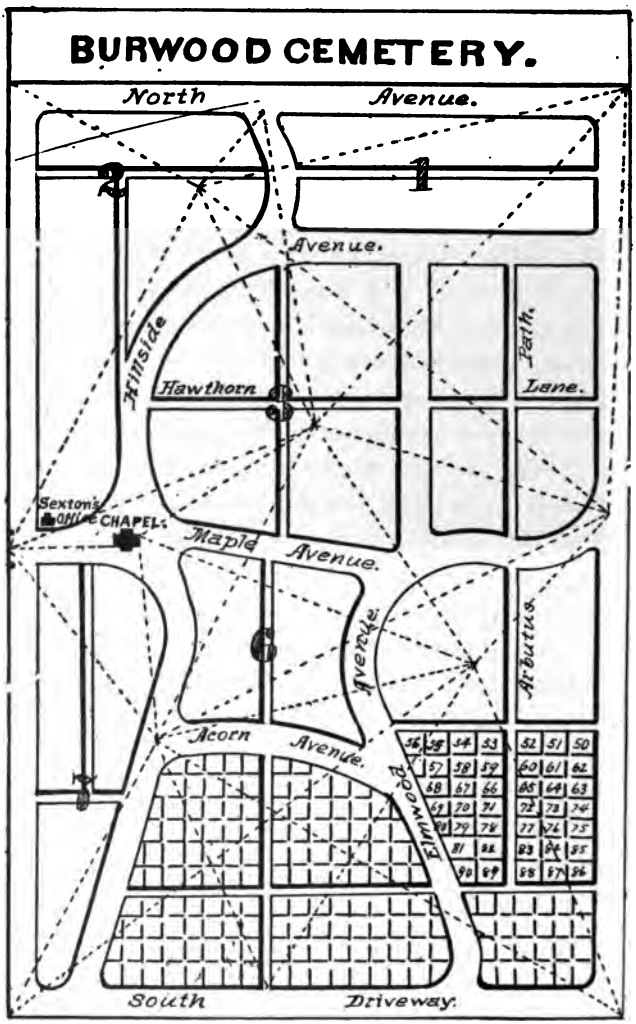

LAYING OUT A CEMETERY.

elms, silver-leaf and other poplars. The poplars not only injure the drains with their roots, but they upset monuments and injure masonry walls, and should be entirely excluded from a cemetery.

When laying out a cemetery, its entire area should be encompassed by a driveway about 20 feet wide. This driveway places a safe distance between the fence which encloses the grounds and the outer lots and blocks. When lots are plotted next to the enclosure fence they are generally unsalable, because undesirable, and sooner or later they become the potter's field of the cemeter ; and as such graves are most usually neglected, they add little to the neatness and beauty of the grounds. The potter's field, if used at all, should be located at the end of the cemetery the farthest from main entrance.

The cemetery plat shown on page 134 is an example of lot and block subdivisions commonly used. The topographical features of the ground have much to do with the course or direction of the driveways and main paths. Unless the surface is very uneven and hilly, the driveways can be located so as to reduce the grades to a moderate steepness; and no excavations need be made that will make undesirable lots and blocks because of excessive cuts or fills. The map shows the driveways to be 20 feet wide; the main paths are 7 feet wide; the narrow paths separating the lots (not shown) are $2\frac{1}{2}$ feet wide; and the lots, where full size, are 9×18 feet. When grading a cemetery, excavate the driveways and main paths solely for

drainage, leaving the entire area of the blocks an even surface. It is bad practice to excavate the narrow paths below the lot-level, because they fill with water and ice, and are difficult to drain.

The driveway gutters on hill-slopes should be paved to prevent gullying; and where the driveway crosses swales, valleys, and ravines, suitable drainage should be provided to permit the ready escape of surface or storm water beneath the driveway. Although there may be no indication that any considerable quantity of water ever flowed along these depressions, yet the driveway may act as a dam and collect the water, to its injury.

The lots and blocks are numbered and the driveways are named respectively, as are the main paths, thus affording an excellent basis for accurate registration not only of the sale of lots, but of interments. A correct registration of burials is something almost unknown in the public cemeteries in this country. When the cemetery is surveyed and platted, several copies should be made from it, one for the city, another for the sexton, and a third should be filed in the county-register's office.

The survey of Burwood Cemetery was made by first locating the driveways, taking advantage of the ground elevations in such manner as to secure easy grades and light excavations and embankments. The levelling instrument and chain only were used in this first location; there was no attempt made to follow any particular course or direction; the level practically defined the courses. If the location of the driveways made

the blocks rather large in area, this could be corrected either by changing the course of a driveway, or the 7-foot paths could be made more frequently. When the driveways were staked out, their location was determined by triangulation; then the plat was made, and the driveways and main paths were drawn in pencil. The paths were then staked out, and the exact measurements of the blocks were obtained and then platted, and the lots were all drawn in pencil on the map. Finally, the lot stakes were set, and then the map was corrected, to conform to the actual survey, and drawn in ink, which completed the work. Iron bolts ½ inch in diameter and 16 inches long were driven at all points of triangulation and at the intersection of all cross-lines and at angles. Oak stakes 2 × 2 inches, 12 inches long, which had previously been dipped into white paint, were driven at lot-corners and where iron bolts had not been used.

The dotted lines shown on the map are those of triangulation, and will enable the surveyor to better understand how the survey was made, and it can be readily retraced whenever necessary; but the lot and block survey is so well staked, that it is doubtful if the triangulations will ever again be used.

The lots can be more permanently defined when cast-iron posts are used having a flat, circular head upon which the lot-numbers are cast; these are driven into the ground at a corner of the lot. The posts should be about 12 inches long, their cross-section shaped +, and the circular head about 2½ inches in

diameter. They taper from the head to the point. Before they are set in the ground they should be coated when hot with black varnish, to preserve them.

To grade the driveways properly, all sod and earth to a depth of 6 inches at the centre of the driveways and 12 inches at their edges should be removed, and the surface then evenly crowned and rolled; afterwards it should be covered with screened gravel or finely broken stone to a depth of 4 inches at the crown and 9 inches at the edges or gutters, thus leaving the blocks about 3 inches above the gutter-level, and trimming the sodded edges of the block at an abrupt incline to the edge of the driveway. The main paths should be treated in the same manner. Unless the surface covering of drives and paths is removed, it will be extremely difficult to prevent grass and weeds from springing up from beneath the roadway covering; besides, it is necessary to sink the drives and paths below the normal level of the blocks to secure their drainage.

The public cemetery should have a substantial, well-built brick or stone vault, divided into two or more compartments, each about 8×14 feet area, and a separate iron door to each compartment. The structure should have suitable ventilation and drainage, and a cement floor. A receiving-vault of this kind is very often of great convenience to residents of a city who have had a death occur in the family, and who have not yet become lot-owners in the cemetery. When serious epidemics occur its use is frequent and neces-

sary. It is also a source of revenue to the cemetery fund.

Too much care cannot be exercised in keeping the record of interments in a cemetery; and in this respect

BURWOOD CEMETERY, CITY OF PITTSFIELD.

Record of Interments, 189..

...., *Sexton.*

Name of Lot-owner.	Location.			Interments.				Remarks.
	Lot.	Block.	Drive or Path.	Name.	Sex.	Age.	Date.	

Reduced size of one page of Record-book.

the cemeteries owned by private companies have better kept and more accurate records than those of public cemeteries.

A few years ago the writer was employed to make a resurvey and map of a cemetery which had been in existence about fifty years; and when the work was done he was also employed to rewrite and correct the record of sales of lots and interments. About eighty errors were found in the records, and many of them were corrected, while many others must remain as recorded, for no one can tell where certain interments were actually made. The evidence was conclusive that they did not occur in the same lots mentioned in the records.

The office of sexton of this cemetery is now and has been for years a political office (by appointment); and during the existence of the cemetery fully a dozen different sextons have been placed in charge of it. Some were competent to hold the position, and some were not. This explanation should be sufficient to account for the existence of such grievous errors.

A form for an Interment Book is given on page 139, and perhaps sufficiently explains itself without further comment.

HIGHWAY-BRIDGE MASONRY.

As a rule, there is not sufficient attention given by the members of a council or board to the details for the masonry of a highway bridge. They seem to lack the information necessary to secure good and stable abutments and piers for supporting safely the steel structures which they are designed to carry. The common practice is for the bridge-builder to submit to a council or board plans and specifications of his own making, and the council or board choose from a dozen or more of such plans submitted to them the one they prefer.

In what manner or by what process of reasoning their conclusions are determined no one but themselves can say; the lowest bidder is generally awarded the contract, while the intrinsic value of the bridge and the masonry as expressed in any one of the plans cuts no figure in the deliberations of the council or board. Where a competent engineer is employed to make the selection, then it is another matter, and the possibilities of getting a better bridge and masonry for the money invested are somewhat enhanced. The best bridge structures are obtained when an engineer is employed to make the plans and specifications, and then invite proposals for the erection. The council

may then depend upon getting the sort of structure desired, as well as value received for the outlay.

While it would be quite impracticable to give suitable information here in these pages which would enable a tyro to purchase a good steel bridge of any kind, yet it is possible to convey certain useful hints and information that will enable an intelligent man to determine from the plans submitted the kind and quality of masonry that is proposed to carry the structure, whether or not the abutments and piers are to be built in a manner that is stable and enduring, and that certain details are embodied within the plans and specifications which will ensure these desirable results.

It is presumed from the beginning that the foundation soil is stable beyond question; that the bottom of the pit in which the abutment is to be built is either of clay, gravel, or solid rock.

Where the river-current is at all rapid and the banks and bottom are liable to scour, the foundation of the abutment should be carried to a depth equal to the greatest depth of the channel, that the scour may not undermine it. The distance between the face of the two abutments should be as great as the extreme width of the river; otherwise a contracted opening between the abutments will occasion a gorge in flood seasons, causing backwater and overflow above the bridge, and carrying ice, logs, and driftwood at such a high elevation beneath it as to threaten the safety of the bridge-span itself.

The banks of rivers generally indicate the true distance which should be observed between the abutments, and rarely, if ever, should these indications be disregarded.

When the bottom of the trench is of clay or gravel, and a concrete foundation is desired, then two courses of 3-inch plank should first be laid—one transversely with the other. If heavy, large footing-stones are used, then the plank is not really necessary.

All cement used in masonry foundations should be of a kind that is well known to set permanently under water. Few American cements will do this. It is always better to use the English, Portland, or German cements in masonry foundations, especially where there is excessive moisture or great exposure to water. These cements cost $3.50 per barrel on the work, and the American cements cost less than one dollar per barrel. If thirty barrels are necessary to build the foundation, the difference in cost will be $75 more for the foreign than for the domestic cements,—a difference of cost too trivial to bar the use of the better cement from such important work as a bridge abutment.

There is an empirical rule whereby to determine the breadth of a revetment-wall at its base. The rule is: multiply the height of the wall by 0.40. Thus a wall 16 feet high, when multiplied by 0.40, gives a breadth of base of $6\frac{4}{10}$ feet. This rule can be safely followed where the conditions of foundation are as safe and firm as those which we assumed at the beginning. An

abutment is a revetment-wall provided with a bridge-seat, upon which a bridge is to rest. The bridge-seat *B* should not be less than 2 feet 6 inches in width, and the back wall *A* which retains the earth roadway should be 1 foot 6 inches in width, making a total width at the top of the pier of 4 feet. This is a measurement which should be adhered to for all bridges of 200 feet span or less. To save an unnecessary thickness of masonry at the top of the abutment, the offsets *CC* can be made. By adding the batter of the face of the wall—½ inch per vertical foot—to the four feet width at the top, and then deducting the total sum from the breadth of base, we will have the width of the offsets *CC*. The foundation for the abutment, whether of concrete or heavy stonework, should be built at least 1 foot wider than the base of the abutment, projecting 6 inches upon either side of it.

Wing-walls should be built at either end of the abutment, and long enough to reach the block-lines of the street or highway upon either side of the bridge, and covered with stone coping 6 inches thick. The coping for the bridge-seat should never be less than 12 inches thick. Coping should project 4 inches beyond the face of the wall; coping-joints to be ¼ inch wide.

The following rules and requirements for bridge-masonry construction are so commonly used that they might well be considered maxims:

1. The stone used shall be good and sound, and of established reputation for durability.

2. All stone shall be laid upon their natural bed.

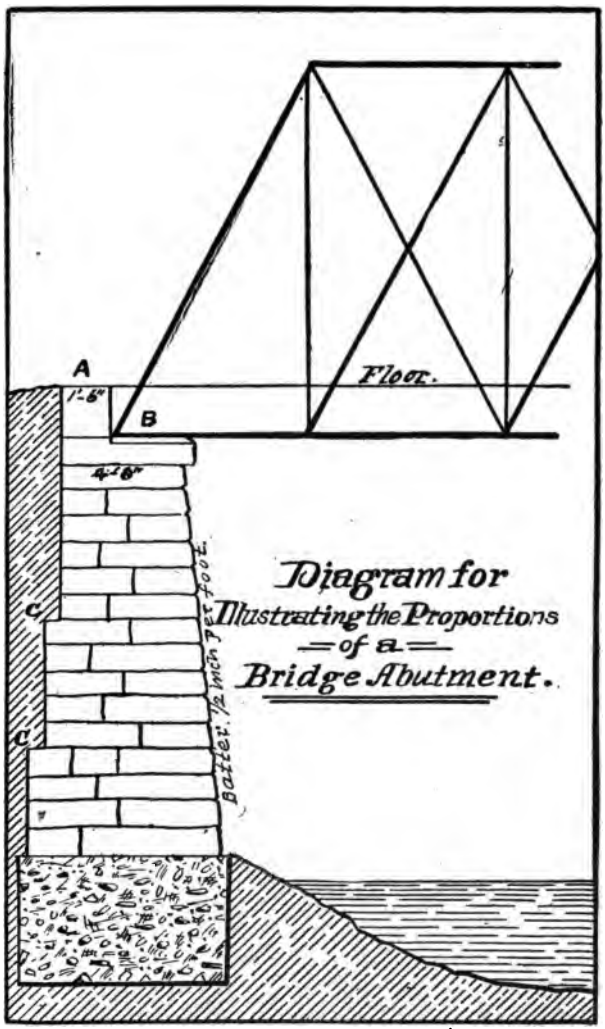
A
1'-8"
B
Floor.
4'-8"
Batter 1/2 inch per foot.
C
C
Diagram for
Illustrating the Proportions
of a
Bridge Abutment.

3. Lay the thicker courses of stone at the bottom of the work, the thinner courses above, grading the thicknesses proportionately.

4. Headers shall extend back into the work two thirds the thickness of the wall.

4. Stretchers shall extend back into the wall not less than 2½ feet.

5. Headers and stretchers shall be used alternately.

6. The back-filling shall be built evenly with the face-courses, solidly and compactly, filling all interstices with spalls and mortar.

7. All stone to be laid upon a full mortar-bed.

8. Joints in face-stones to extend back into the wall not less than 12 inches. Face-joints to be not more than ½ inch wide, well filled with mortar, and pointed.

9. Handling stone on the wall with bar and rollers will not be allowed. A derrick must be used whereby to handle the larger stone.

10. Follow the plans in lines, measurements, and elevations.

11. Perform the work in a workmanlike, satisfactory manner.

If American cement be used, the proportions should be: Cement one part, clean bank-sand one part.

If foreign cement be used, the proportions should be: Cement one part, clean bank-sand two parts.

Mix sand and cement together when dry, and moisten for use as required.

If a pump is used to keep the foundation-trench free from water, cease pumping the water down to a

level below the finished work, because the current caused by the draught of the pump will wash the fine cement from the mortar.

When the work is completed, it is better to leave the crib or sheeting of the trench in place, as it will protect the green masonry (from the scour of the river) until it becomes thoroughly indurated. Fill behind the abutment, closely to it, with all the broken stone, chips, and such débris which have accumulated on the work. It protects the masonry from frost by permitting the escape of the water which an earth-filling would retain.

Retain fully 20 per cent of the price of the contract until the work is actually completed, and accepted by the proper authorities.

PUBLIC PARKS.

THERE are several kinds of public parks, using the term in a generic sense, and each is designed or intended for different purpose. Although the ulterior object for creating a park may be the same, its subsequent uses sometimes grossly violate the original intention.

Some public parks are located in the heart of a city, and are but small tracts of land of one block or square, its area being given to grass and trees and broad gravelled walks, with a few seats scattered throughout, and perhaps a small ornamental fountain. This describes the ordinary city park, which is sometimes termed a "breathing-space," wherein mothers, nurses, and children seek sunshine and fresh air within the confines of a crowded city.

There is, perhaps, in the same city another park of large area, located on the outskirts, contiguous to some pond, river, or lake, traversed with numerous walks, avenues, or drives, which are thronged on pleasant summer evenings with handsome equipages, where there are lagoons, ponds, rustic bridges, and boats; also dens and enclosures for wild animals, with the usual embellishments of grass, shrubbery, and trees, a monument or two, and statuary and beds of gorgeous

flowers and foliage plants. This is the park for pleasure and sight-seeing, not for rest and the quiet contemplation of the rural aspect in nature.

There are also other parks, called "botanical gardens," wherein trees and shrubbery are grown and greenhouses are erected in which plants and flowers foreign to the locality are propagated; also arboreums, devoted to the culture of trees and shrubbery only. Both are interesting places to visit, especially so for the youthful student in botany.

But there is still another kind of a park, different from any previously mentioned, which we know as the rustic or rural park; and the better we know it the more we love it, for it is the most enjoyable and beautiful of them all. This is the park which invites one who seeks fresh air and sunshine, healthful exercise, or quiet, needful rest and that invigoration of mind and body so beneficial to the wearied artisan or business man of a city, which only a contemplation of beautiful natural scenery affords.

When a municipality is about to locate or establish a park, the various sites which may be offered for the purpose should be well considered, not only as to the eligibility of the ground itself, but as to its environment, present and prospective. Do not make the extravagant mistake of choosing a tract of land that will in the future prove a costly holding—one that obstructs the commercial growth of a city.

When the land is finally selected, then determine the sort of a park you will have; and when doing so,

consider Charles Eliot's definition of a park. He says: "Lands intended and appropriated for the recreation of the people, by means of their rural and natural scenery and character." If this definition is continuously held in view, the park will always be for the people, and fully appreciated by the people.

It has been found by those who have had charge of public parks that no urban park is safe from spoliation by permitting the grounds to be used for purposes utterly foreign to the original design and intention, until a community is educated to the controlling idea of a park in all its essential features; that if we would maintain mental, moral, and physical health in large cities, we must have a breathing-space which is not only attractive to the masses, but is also easily accessible.

To preserve and maintain a rural park of quiet, sylvan beauty, we must exclude town-like things,—omit from them decorative gardening, monuments, and statuary; rigidly exclude all catchpenny devices, trivial amusements, and not afford opportunities that can be found at a county fair for spending money. Make it a place for recreation or rest; furnish good facilities for drinking-water, a reasonable number of seats, boats on the pond, if there be one, and a place for rendering good music, and the public will supply all other needfuls which are necessary for their enjoyment. Even speed-roads are objectionable in a public park, because of the crowd they gather, not to enjoy the park, but to see the driving and to bet upon the horses driven; the

youth who frequent the park are thus brought into contact with the manners and language of the race-track. The drivers of the horses may be prominent citizens, very true, but not public-spirited ones, or they would not sanction the use of a park drive for such a purpose. All that they care for is the driving and the opportunity to exhibit their thoroughbreds; they do not seek the park with the same intention or purpose that the business man does who takes an evening drive therein with his family, or the man who goes there with his wife and children for a pleasant stroll.

While it is better to keep all buildings out of a park that is possible, yet in parks of large area—fifty acres or more—it is quite necessary that there be a pavilion or two, under which visitors may seek shelter when sudden rainfalls occur; and there should be one substantial building—of low roof, cottage design—for the convenience of women and children. All other buildings are unnecessary.

There is no particular rule or guide by which it can be determined how large a park should be or how many acres of land are necessary to accommodate a city of a certain size or population. By an examination of the United States census reports it is found that park areas and the population of cities are not relatively connected, as will be seen by a perusal of the table given on the next page.

A comparison made from the census of 1890 would perhaps show less acreage per population and less disproportion between the larger and smaller cities, but

it would not show as well with the newer or younger cities the relative proportion of population to acreage when the park territory was acquired.

Therefore it seems that the amount of land a city should purchase for park uses is purely a matter of local consideration, in which the site, the growth of the city, and the amount of money available to make the

Parks in Cities.—Census of 1880.

City.	Acres.	Pop. per Acre.
Macon, Ga	720	18
Council Bluffs, Ia	794	22
Lawrence, Kan	73	116
Binghamton, N. Y	96	182
Chicago, Ill	1690	281
San Antonio, Tex	50	410
Savannah, Ga	53	584
Indianapolis, Ind	90	833
Fall River, Mass	54	907
New York City	862	1400

purchase are the governing factors, and the proposed site is the most important of the three.

The site chosen should not be low, wet land; for it must be drained, and is expensive to make attractive. High, rolling land, rugged in places, traversed by a deep ravine or a hill-torrent, is far more desirable; or a tract of land which will embrace both characteristics can be made into a park which is first-class in every respect. The ravine or torrent can be readily bridged, and a pond can be excavated on the low land, which

will serve to drain the remaining portion of it. An unfailing source of water is so very essential to the beauty of a park that this feature should not be lost sight of for a moment when the site or sites are under consideration. Water can be supplied to the grounds for necessary purposes in the same manner as described in the chapter of this book devoted to Public Cemeteries.

A park should always be perfected according to its natural features and conditions,—not imitating an English park, with its grass and trees; nor should we give it that neat prettiness of the grounds about a villa. Be as original in the design of the park, so far as it relates to the landscape, as we are in the design of buildings and the improvements of our cities. Originality of design is what has made the noted parks of the world famous. Cultivate those trees and shrubbery which are indigenous to the land itself, adding such as grow well in that particular latitude. We should not attempt to create hills where they exist; and avoid the practice of levelling grounds. Use the spare earth to increase the height of undulations, and let the depressions exist. The moisture which they collect will give growth to certain kinds of trees and shrubbery which would not exist without it. John Ruskin said: "The simple, uncombined landscape, if wrought out with due attention to the ideal beauty of the features it includes, will always be most gratifying in its appeal to the heart."

Another writer, and a good authority on park de-

sign, has said: "An urban park is useful in proportion as it is rural. Subordinate everything to the controlling idea of rural repose, which space alone can give. The easiest way to injure a park in the eyes of the people is to destroy its rural character by making openings in its borders so that outside objects can be seen from within." An alderman of a certain city, whose residence overlooked an adjacent public park, rather objected to this exclusion of the outside world, particularly so because the view across the park was interrupted by the trees and shrubbery: so he had an opening cut through the foliage to improve the view from his bay-window.

Perhaps no other city on this continent has a better system of parks and boulevards than has the city of Chicago, and its system of park jurisdiction and administration is most excellent, which has much to do with the beauty and good taste shown in that extensive park and boulevard development. The park system of that city is controlled and supervised by a board of commissioners appointed by the State, the city itself having no voice in the matter, excepting that the board is composed of residents of Chicago. This experience in park management has developed the fact that it is better that all public parks should be managed by a local board, working and existing independently of the municipal administration of the city. An alderman has too many petty cares and annoyances already without assuming those of a park commissioner; and as he receives no salary for his

services, he will be inclined to give attention to only those matters in which his constituency are directly interested; hence he is pretty sure to neglect the park duties which may fall upon him. Furthermore, the *personnel* of the council changes every year, and under these circumstances it is a vain expectation to believe that any park plan will be carried out as originally designed without changes one way or the other, more or less detrimental, occurring every year. A local board of park commissioners would, in all probability, be composed of citizens who were inclined to serve thereon because of their fondness and inclination for the work, and who could afford to devote some little time to the duties and labors required, which in most instances has proven to be the case. Undoubtedly this management is the best for the growth and development of a park system.

When a tract of land has been chosen for a park, the first and wisest thing to do is to consult a professional landscape engineer, and allow him to make a survey and study of the land and its characteristics, furnishing the park board a complete map (topographical), with the system delineated, and then work and build to that design persistently whenever the means and opportunity permit. In a few years, if a fair amount of work has been done upon the land, the public will begin to see and appreciate the labors of the board, and from that time forward the board will not lack the hearty support of the public in their undertaking.

A PUBLIC LIBRARY.

THE average town library is quite a simple affair, generally comprising one room only, in which is contained all the books and papers, and where all the library business is transacted in whispered voices, that the readers within the room may not be disturbed.

Such an institution is comparatively inexpensive to maintain, and suffices the wants of the people it serves for many years. This is a fairly correct description of the primitive library found in many towns, and even in some cities having a population of from 25,000 to 40,000. Could the people from one of those cities have the opportunity to patronize for a while a large, well arranged and conducted library, they would more fully understand and appreciate the usefulness and pleasure which a good library management bestows upon a community. In our larger cities the public library is a recognized institution of considerable importance; it is highly appreciated, exceedingly well patronized, and spoken of with pride by the community it serves. The item of cost for rebinding books to any of our great municipal libraries is no mean evidence of their usefulness and popularity. As long as the library retains its primitive arrangement and service, there can be little incentive to better its

condition or to enlarge its usefulness. Perhaps there is a moderate increase in the number of volumes from year to year, and a steady accumulation of periodicals; beyond this slow growth there is very little done for its betterment. A library building, once erected, becomes both a depository and a Mecca for books, papers, maps, etc., donated by public-spirited citizens. Without such a building there is no inducement for making gifts of rare books, pictures, and works of art, because there can be no assurance given that such things will be properly or safely preserved, nor can they even be advantageously exhibited. A city library, when arranged and conducted in an able and satisfactory manner, begets the esteem and good-will of the people it serves, and becomes through them a valued repository for many papers, historical and otherwise, which relate to interesting and important events connected with the origin and growth of their city,—papers which rarely ever find their way into the offices of the register of deeds or the city clerk. Their owner would never think of placing them in these offices, preferring that they should remain in his possession, unseen and unknown,—perhaps boxed within the garret of his house, to be eventually destroyed by fire.

A public library, to be sought for and well patronized, should offer something more than a book circulation. In addition, it should have one room, at least, devoted exclusively to reading and reference study, where the visitor and student can spend an hour or

more quietly among the books without being subjected to annoyance from the business talk going on within the room. The book-room should also be independent of the reading-room, because the public must be served with books, and the business of the library cannot be checked; nor is it pleasant for the attendants to be perpetually constrained in voice for fear of disturbing the readers, as would be the case where the primitive arrangement of a public library is maintained.

A building erected solely for library uses is necessarily a costly structure, for it should be built fireproof and enduring, of the best materials, and of a pleasing architectural appearance. It must be centrally located, and that involves the purchase of valuable land in the heart of the city, although it need not be located in its business centre. Perhaps it is because of these expensive conditions of land and construction that so few cities have really good library buildings; but these expensive conditions do not deter the erection of handsome and commodious court-houses, jails, public schools, fire-engine houses, and city halls. Is not the library building as useful and important a structure, in a moral sense, as either of those structures mentioned? Certainly it gives occupation and pleasure to a large portion of a community that has no business directly with any of them.

When considering the erection of a library building, its internal arrangement and conveniences are first determined,—what rooms are needed for certain pur-

poses; how many altogether; their areas and their general arrangement; and, finally, the cost of the structure. Then follows the consideration of ways and means.

Five thousand dollars is sufficient to build a fairly good library building, suitable for a city having a population of 10,000; but this sum so limits its dimensions that it leaves no opportunity for a future extension, should the growth of the city require it. A city that can afford to spend as many dollars on its library building as it has individuals in its population can erect one that is every way desirable.

The floor-plan shown on page 160 is intended to give the general arrangement of a small library building suitable for a city of about 10,000 population or less.

At the right hand, after entering the building, is the librarian's office, separated from the public business room by the book counter, at which the books are issued and received. Here in this room are the newspapers on file, a table for catalogues and ready-reference work, and ranged about the walls are bookcases *CC*. This room has windows in the walls upon two sides only.

Two doorways—one from the office, the other from the business-room—give direct access to the reading-room, located in the rear of the building. Bookcases *CC* are ranged against the side and partition walls, while the bookcases at the rear wall stand perpendicularly against it, separated by aisles three feet wide. By this arrangement more shelf-room is obtained to

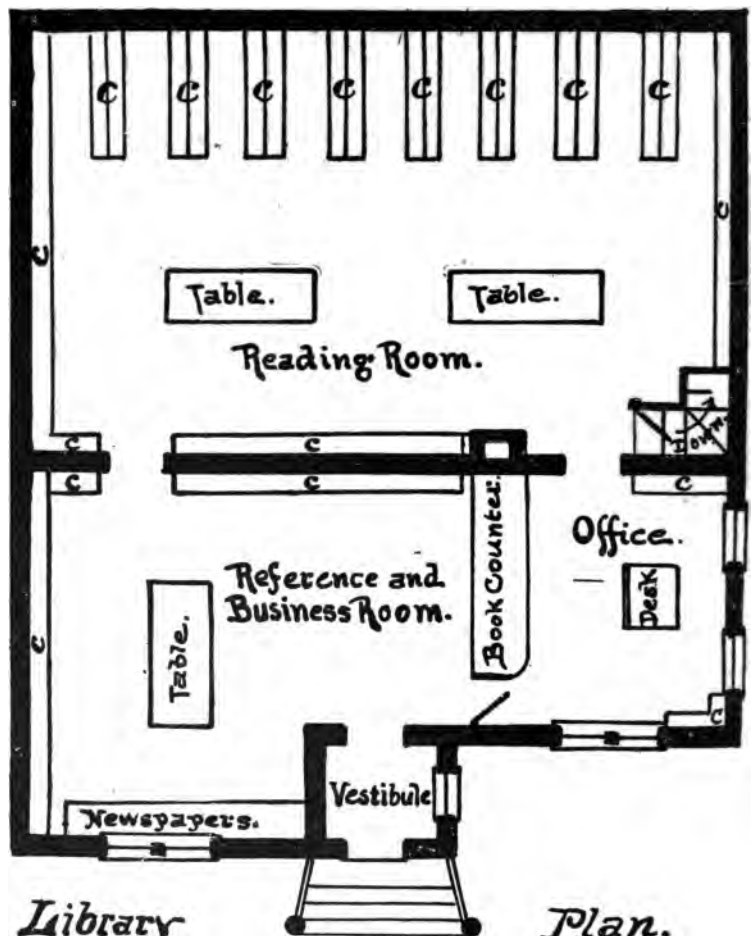

Library Plan.

Capacity: 14,000. Volumes.

Floor Area: 1550. Sq. feet.

the least floor-space. The cases are made double, to receive books upon both sides, and should be about 7 feet long,—not longer,—with middle partitions to prevent the shelves from sagging. Seven shelves high will make the case about 7 feet high; their width should be sufficient to receive the class of books for which they are intended. Book-shelves 16 inches wide are unusually wide; yet it is sometimes necessary to make them 18 inches wide. A clear distance of 12 inches in the width of a shelf is actually wider than is necessary to receive nine tenths of the books published.

Each case of seven double shelves (each 7 feet long) gives 98 lineal feet of shelf-room per case. If 8 books per lineal foot of shelf be allowed, then the capacity of each case is 784 books. This is according to the usual computation made for shelf-room in libraries.

It is designed to light the reading and reference-rooms from above with skylights, which permits the entire wall area above the cases to be used for pictures, portraits, etc. An overhead light is certainly the best for these rooms; besides, it is the only natural light that will show oil-paintings to advantage. An oil-painting always reflects side-lights.

If side windows are preferred for lighting, their sills should be placed 7 feet above the floor, because the windows, if placed lower, will interfere with the shelf arrangement, and also render the books liable to injury from exposure to a strong sunlight. This does not imply that the windows shown in the front (business)

room and office should be placed higher than they usually are in any office-building.

Bookcases and shelves should not be made higher than 7 feet, for various reasons,—and quite good ones they are. One reason is, that 7 feet is about the limit in height at which a person standing on the floor can read a book title. Another is: no step-ladder is required to obtain a book. A third reason is: the books are not exposed to the greatest heat of the room, which is nearest the ceiling. Besides, the cases will not be high enough to prevent the hanging of pictures, etc., upon the walls.

The heating apparatus of a library building should be either a furnace or steam-coils—preferably the latter; and the boiler or furnace, the closets, lavatory, and other conveniences can be located in the basement, to which access is provided by the stairway shown in one corner of the reading-room. But one exit from the building is shown, which is also the entrance; and all persons entering and leaving must walk in plain sight of the office, thus enabling the librarian or assistants to keep a watchful eye for book-thieves.

If it is desired to build a large and expensive library building, much more so than the accompanying plan outlines or provides, then the following list of rooms and their uses, which in combination constitute the well appointed and conducted public library, will enable the reader to determine the size and character of the building desired:

One or more large book-rooms, say 50,000 volumes per room;

Public delivery-room;

Librarian's cataloguing-room;

Public catalogue-room;

Newspaper reading-room;

Reference-room, with small rooms connected thereto for students;

Reading-room for children;

Trustees' room;

Librarian's main office, for clerks;

Librarian's private office, convenient to a vault;

Work-room, where books are prepared for circulation;

Bindery;

Unpacking-room, with book-lifts;

Lecture-room, with a seating capacity of 300 persons, more or less.

There should also be special rooms for patents, both native and foreign;

For the storage of bound volumes of newspapers;

For an art collection, drawings, etc., with conveniences for copying the same.

A moderate-sized room or hall, with ante-rooms, should be provided on one of the upper floors, in which societies can meet and maintain a permanent organization,—societies which are purely of a technical character, and whose work is a benefit to mankind. One ante-room can be assigned to each society for the use of its secretary.

Besides the necessary stairways, elevators, and book-lifts, the lavatories, closets, dressing-rooms, etc. The building should be fire-proof, and all floors deadened against noise. The cost of a complete library building of this description may be safely placed at a sum fully as large as a numerous and wealthy community will care to provide.

A MORGUE.

A MORGUE seems to be one of those public structures which is not considered a necessary adjunct to municipal belongings until a calamitous loss of life occurs, and public sense is grievously shocked at the seemingly unnecessary exposure of the bodies during the preparation for identification and burial; yet had the city owned a morgue at the time the calamity occurred, much that was painful and repulsive to behold would have been spared the public sense. Liable as all communities are to distressing accidents and epidemics which cause a sudden and unusual number of deaths, and with murder and suicide a common occurrence, the necessity of the morgue does sooner or later impress itself upon the public mind, and the larger the city, the more is this necessity daily emphasized.

Those who have had to serve upon a coroner's jury in a large city know, perhaps, something of the uses as well as the necessities of a well-arranged and properly conducted morgue; they also learn that such a building must have certain conveniences and arrangements for caring for the unfortunates who are brought to its door for identification and burial; that until the body is bathed and otherwise cared for it would be

almost unrecognizable to the most intimate friend of the deceased. Hence the necessity of erecting a morgue that can be suitably maintained in a cleanly, healthful condition ; not a pest-house, that is repulsive in its internal conditions to those who must visit it when in quest of lost friends. Besides, it must be a healthful tenement, not only for public sanitary reasons, but thoroughly so for those who have it in charge, and who are required to be within its walls during many hours both day and night. Grewsome the structure may be, but its uses are humanizing.

The plan of a morgue shown on page 167 indicates something of the requirements of a building devoted to such uses. Its front is 30 feet wide ; its rear is 39 feet wide. The extreme length of the building is 62 feet. The dimensions given are perhaps sufficiently large for a morgue in most American cities, excepting of course the very largest.

The visitors' room, coroner's office, and jury-room are lighted with windows in the side-walls ; the passages and those rooms in the rear of the building which are properly the morgue are designed to be lighted from above with skylights. There should be no window-openings in the walls of the morgue wherein the bodies are kept. Above the row of slabs and tanks should be provided a storage place for ice, which can be filled from the outside of the building, and accessible from the identification-room, from which ice may be taken whenever required.

It is designed to warm the three front rooms of the

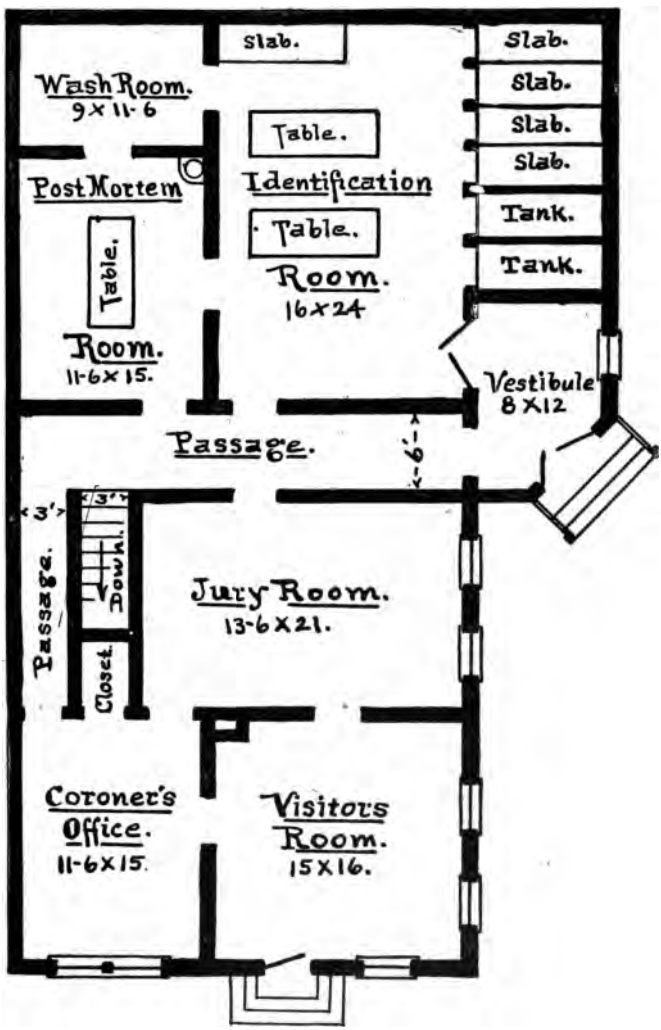

Morgue – Floor Plan.

building with either furnace or steam heat, providing a duct or pipe leading to the identification-room, to maintain a temperature above freezing in extreme cold weather.

A stairway is provided leading to the cellar, where the heating apparatus, water-closet, and other such necessaries may be located.

A passageway 6 feet wide separates the morgue from the habitable (front) rooms of the building, with closed doors provided to exclude offensive smells from these rooms. All rooms upon both sides of the passageway are directly accessible from the coroner's office. The jury-room is connected with the coroner's office by a doorway, and a door opening into the passage permits the jury to go directly either into the identification or post-mortem room, as their duties may require. Should visitors call when a jury is sitting, they may be taken to the morgue through the coroner's office *via* the narrow passage.

A corpse, when brought to the morgue, is taken into the building through the vestibule, and is carried directly to the wash-room. After it is bathed it is then placed upon one of the slabs. There are two tiers of slabs; each moves upon rollers, that a body may be easily shown for identification when a visitor calls. The dimensions of each slab compartment are 30 inches wide and 7 feet long, and as they are built in two tiers, they will receive a total of eight bodies. These compartments are practically refrigerators; their

doors should be of iron, and made to close tightly, to exclude the air.

The tanks should be made of iron, and well varnished or enamelled, to prevent rust. They are designed to be filled with water, to receive that class of bodies called "floaters," or those that have been found after floating a long time in water, of which it is said they will keep but a short time unless placed again in water. The table-tops and slabs should be alike, so as to be interchangeable, making the table support an iron frame mounted on rollers.

The floor of the morgue should be built substantially with I-beams, with brick arches between, and the surface then laid with a cement or asphalt floor, inclining the surface slightly, that it may be drained of water.

The walls enclosing the morgue proper should be built with an air-space within them, for there is much dampness in these rooms, and nothing to dispel it but the air and sunshine from without. Provide good drainage and ventilation.

In the construction of the building use brick, stone, and iron; exclude wood for all purposes where possible within the morgue or rear half of the building. The interior walls should be covered with a preparation of Portland cement and silicon, or other hard-finishing material.

In some morgues a room is provided for the undertaker's use, which is a desirable adjunct to the establishment; for there are other bodies received at a

morgue besides those of friendless paupers, and friends often desire more privacy and better preparation for burial than the establishment usually provides.

Sometimes an ice compartment is made directly over the identification-room, to be filled with ice in case it should become necessary to convert this room into a cool receptacle for an unusual number of bodies which are brought to the morgue from the scene of a sudden calamity. Should an ice storage be provided for such a contingency, then the identification-room must be lighted either with gas or electricity, because the ice compartment above would prevent the use of skylights.

In the larger cities a morgue is generally provided with its own stable and ambulance corps; but this can be dispensed with when the city has police patrol-wagons and hospital ambulances, in which bodies when found may be conveyed to the morgue.

The plan shows no attendants' room; but they can occupy the jury-room in their leisure-moments when a jury is not sitting. A cot may be placed therein for the night attendant without any inconvenience.

The cost of a building of the size and description given is about $10,000.

ELEVATED TRAFFIC vs. SUBWAYS.

THE building of the elevated street railways in our larger cities, monstrous and unsightly as they are, was the beginning of a practical solution of the vexatious problem to relieve the congested conditions of street traffic; but the work has stopped short of its utilitarian completeness because other things belonging thereto were not raised to the same level at the same time.

The elevated railways have added much to the din and roar of city streets which seems to be on the increase. Wherever built they make dark and dismal rooms on the ground floor, on either side of the street, necessitating the constant use of artificial light in such places; yet they have undoubtedly come to stay, for they truly answer the great purpose for which they were designed and built; furthermore, they are possibly the beginning of a method of street occupancy and usage that will develop a better condition of urban travel in the near future.

But why raise this convenient method of passenger transportation only in a city? Why not lift other things to the same level? The lighter retail business of a city which helps largely to maintain the elevated railway should have been raised also and allow the heavier traffic to occupy unrestrictedly the normal surface of the street.

The professional and a large share of the business population have in part attained lodgment as high as the eighteenth and even the twentieth floor above the street level, and no good reason exists why more of the lighter trade or business should not ascend higher—to the second story at least, thus bringing quite all of the "down-town" patronage of the elevated roads to the same level, where it can be much better served, with greater convenience to the public generally.

Furthermore, in every city are blocks of buildings of which the rooms on the street floor are occupied by storekeepers, and the floors of the second story above make habitations for many people. Here are already accepted and existing conditions awaiting the coming of the *two-story* street, and it is safe to premise that this combination of store and dwelling, as well as store and office, may, in the future, be largely improved and augmented when the whole system is developed as it might and should be. The two-story street in its best development can be arranged so that all wholesale trade and the retail trade in staples and wares of common use, together with provision stores of every kind, with all horses and horse vehicles, be confined to the lower street; while the lighter retail trade, such as jewelry, confectionery, drug, book, dry-goods, clothing, and shoe stores, and all street cars, become occupants of the upper street, allowing no horses to travel the upper street excepting those which haul fire-department machinery, which should of course have the right of way on either street at all times, and fire-engine houses could be built to conform to the dou-

ble street arrangement, maintaining a fire engine on the lower street and hose carts on the upper street. By this divisional arrangement of trade and traffic the upper street will be cleaner, freer from mud and dust, fewer flies will enter habitations, because animals and provision stores, which largely produce such, are on the lower street; there will be less noise to disturb the inmates of buildings, because the noisiest element of the street is below, where the roar of travel will be smothered by the floor of the upper street, thus making the occupation of "down-town" buildings more pleasant, when conversation can be had without unduly straining voice and ear.

The two-story street will allow the commercial interests of a city the entire freedom of its lower street at the same level that its business is now handled. Its wagons can back up to the curb to receive or deliver merchandise without being warned to "hurry up" by the clanging gong of a street car. The grocer, baker, butcher, and milkman can deliver orders at hotels, restaurants, and residences at the same street level as formerly.

The pedestrian will of course walk the sidewalk on either street as business or pleasure may dictate, yet the upper street will be the thoroughfare for the thronging crowd of sightseers, shoppers, and those who walk for health and exercise. There will be the sunlight, the clear air, the attractive shops, without the clatter and roar of moving vehicles, and where the mother and child can leave or seek a car without danger of being run down

by the spirited or unmanageable horse, or by the reckless driver of a delivery wagon.

Access to either upper or lower street can be had by means of the covered stairways, located at the middle of the block, as we now use them, providing two flights ascending in either direction so as to give ample accommodation to the public when the rush to and from the cars is the greatest.

The street cars should stop at the middle of a block to discharge and receive passengers. This should be the rule even under present conditions, because at this place of stoppage there is less danger to passengers getting on or off a car than at street intersections, where cars come and go from either direction and a surging, waiting crowd heedlessly rush for seats before the cars are stopped. A passing car on a cross track is a menace to passengers when seeking or leaving a standing car upon another track, and this danger is avoided by making the middle of the block a station; besides, if the cars should be thus operated there would be a saving of time in the movement of cars, and passengers would be able to reach one more quickly. If the stairs are placed at the middle of a block, and cars should make this place a station, it will be the means of dispersing the crowds that daily gather at street corners awaiting them, which is a dangerous aggregation in itself. A combined arrangement of this kind would relieve congested conditions of city travel and reduce its danger to a minimum. The modern pavement practically abolishes a fixed location for street crossings. There is no necessity for stopping cars ex-

clusively at street intersections because of mud or dust. The street surface at the middle of the block should and can be kept as cleanly as at the intersections, and access to cars made as agreeable there as elsewhere.

Comparatively the advantages apparent in the improvement are: cheaper, lighter, and more rapid construction; less cost of maintenance; less tearing out of old foundations of buildings to be replaced with new and heavier foundations; less delay and danger to the pedestrian; allowing a more rapid movement of teams engaged in the commerce of the street; besides permitting the use of the entire width of the street to the needs of commerce. *These* are advantages which the excavated subway does not afford in a single instance.

At present street basements when used as places for business must be artificially lighted; the rooms on the lower street will likewise require such lighting. With the adoption of the two-story street system the present basements would be abandoned as places of business for the rooms on the street floor, and acceptably so, for they are dryer and more airy, therefore more healthful for occupants.

A street improvement of this kind would undoubtedly require much rebuilding of adjacent houses; foundations would not be so much disturbed, the work necessary being more in the nature of the renovation of buildings to conform to the requirements of the (two) street levels or elevations. Such rebuilding cannot be as expensive as that necessary to the construction of an excavated subway.

The cost of the work demanded by either system—elevated or subway—is no hindrance, for it is plainly evident that we must rebuild the streets in our larger cities in a manner that will better conform to the urgent demands of traffic and business and relieve congested conditions of street travel.

The superstructure of the upper street may cost but a little more than the preparatory work for an excavated subway, taking into account the renewal and strengthening of building foundations, the renewal of sewers and pipes, and in view of other extraneous work connected with subway construction which cannot be ignored either in plans or estimates.

It is no more expensive nor is it a greater hardship for a house-owner to conform to the two-story street than it is to conform to the grade of a viaduct, which is of common erection nowadays. These viaducts further exemplify the adaptability of the two-story street to the pressing needs of a large city.

The excavated subway is expensive construction in the extreme, because it involves so much collateral construction and rebuilding. It endangers the foundations of adjacent buildings, and these must be rebuilt or strengthened.

The excavation and hauling away the material is costly. It requires the tearing out of water and gas pipe, sewers and other conduits, and the additional cost of relaying them to a greater depth, which often is impracticable because of the existence of subsoil water and quicksands, and in most instances will destroy the gravity flow

through the pipes owing to the greatly increased depth to which they must be laid, when a pumping plant must be erected to insure drainage, not only of sewers but of the subway itself. Briefly stated: It is cheaper to build up than to build down. If the subway is open, uncovered, then there is no street; it has ceased to exist as a street, and the improvement gives but one floor upon which the public can travel; the two-story street gives two floors, and each takes its share of travel.

If the subway is covered, then the street can remain in use to the public, and the subway becomes a dark, gruesome, ill-ventilated tunnel, fit only for swiftly moving suburban trains. The two-story street may be built to include all streets—main and cross streets—in the business area of a city, and is readily capable of extension with the growth of the business district. The passage of a river need not bar its extension, for the modern bridge-builder can meet the scheme with his structural steel as handily as the framing of a twenty-story building.

By placing the street cars on the surface of the upper street the multitude are not compelled to descend into the damp and dismal depths of a subway to take a "home" car at evening. The lower street, by retaining its normal surface for the exclusive commercial interests of a city, does away with the necessity of excavations for any purpose excepting for foundations. Of course foundations for buildings and other structures must be carried to a safe depth in every instance, so the question of foundation is not here considered, being as it were a local matter.

The plan of the two-story street does not require, when adopted, the disturbance of any pipe, sewer or other conduit that may be in present use below the normal surface of a street, but it would require the laying of new conduits of this kind to conform to the plan proposed, while existing sewers and their outlets could remain in continued use, the new sewers connecting therewith wherever practicable or necessary.

For more than half a century we have been persistently burying pipe of all kinds beneath the street surface, and for the same period of time have we been equally persistent in destroying costly pavements to get at these pipes. This seesaw game will go on forever, or we must abandon either the pipe and its uses or the pavement. Why not take the pipe out of the street altogether and lay it where it is easily accessible? We began laying the sewer in the middle of the street so as to make one line of sewer accommodate both sides of a street. This plan savors of economy. In reality two lines of sewers, one on either side of the street, would have saved millions of dollars in our larger cities in the past twenty-five years in the matter of repaving and street repairs alone. Gas- and water-pipe and other conduits come under this censure.

By placing sewers below the sidewalk they are easily accessible to house connections without making an excavation or disturbing the sidewalk surface in the least.

There is no good reason for not using sidewalk areas, i.e., the excavated areas beneath sidewalks, for muni-

cipal purposes and uses, and in these all street conduits of every kind should have been laid at the beginning.

These areas are as much the property of the city as are the streets or street areas, and their use for the purposes suggested—for the good of the many—will be a saving of untold expense to cities. Chicago authorities have awakened to the fact that the city has an ownership in sidewalk areas by levying an annual tax or rental upon abutting owners for their use.

The superstructure, which is essentially the upper street surface and its support, can be built clear and free from all the unsightliness which now disfigures our streets. Beneath this superstructure all electrical wires can be strung and conduits placed in which to carry wires for car propulsion, thus placing the "trolley pole" beneath the car, where it rightfully belongs. All wires, poles, frames, etc., can be banished, leaving the upper street free from such unsightly and dangerous contrivances, and the expense of maintaining such electrical lines will thereby be greatly reduced. Under these conditions electrical companies could be assessed a rental for the use of the superstructure for carrying the wires.

All municipal work is expensive, and necessarily so, because it demands, first of all, brains and experience and the best of labor and materials. It is usually broad in conception, affecting large areas of valuable and inhabited property, and is far-reaching in its beneficial results; therefore it would seem that the wisest and most economical methods of improvement are those which offer the least disturbance in their execution to existing

improvements, and the sooner that methods of this kind are devised and adopted the better will it be for ourselves physically and mentally, for the uninterrupted use of our streets and their improved appearance, and for the municipal treasury.

CIVIL-SERVICE APPOINTMENTS.

APPOINTMENTS of municipal employees through civil-service examinations have developed some queer phases of judgment in such matters. So true is this in many instances that the onlooker is inclined to wonder at times what was the ruling motive which made a certain man a municipal employee; but this question does not arise unless the practical fitness of the appointee is in doubt. Unquestionably the rule of appointments through civil-service examination has come to stay, and has taken root firmly in all our larger cities, although at present it seems to be badly choked with the older and stronger growth of weeds of partisan spoils; besides there is evidence of ambiguity regarding the true intent and ultimate purpose of the employment of persons by civil-service rules.

Manufacturers, merchants, engineers, and others who have sole responsibilities, when employing persons invariably ask the applicant a few, pithy questions which, when answered, very quickly place the applicant within or without the pale of employment so far as that particular establishment is concerned. Of the greater accomplishments or deficiencies of the applicant the employer is content to learn later, but it is indispensable that the ap-

plicant must be able to fulfil the duties or perform the labor for which he was directly employed at the outset.

The manufacturer does not ask a lot of extraneous questions of general information, that are in nine cases out of ten outside of the line of thought, study, and work of the applicant, and quite often far above his intellectual attainments, which civil-service procedure requires in numberless instances.

The fault of this probably lies in the fact that not all civil-service lists of questions to be submitted to applicants are drawn by those who are themselves versed in the trade or occupation in which employment is desired; or perhaps the framers of such questions are more scholarly than practical, which is more often the case.

Within an experience of over thirty years the writer has seldom met with a man employed on public work, below the position of foreman, who possessed much general information outside of his regular calling; to meet such a person who had special outside information upon any useful art or calling was indeed a rarity: and well that it is so, for such men, excellent artisans though they may be, are not weakened, nor are their abilities impaired, by the "curse of versatility," and civil-service rules should be drawn invariably to meet the understanding and abilities of such men, for it is skill and experience that is desired from them, not lore. Specialists are common with all branches of industry, in all occupations, among the educated and uneducated, and the skilled artisan nowadays is a specialist of a pronounced type. Gather together fifty carpenters and give to each one the

same problem on the tensile strength of timber, and it is quite likely that not more than five of them can produce the result properly stated and calculated. Neither can the average mason give the thickness of a revetment wall of a stated height, to retain certain kinds of material, either dry, damp, or in a semi-fluid condition. Nor is it necessary that the carpenter or mason should know these things, unless he is an applicant to make the design of the structure employing the use of the timber, or of the revetment wall that is to be built. To ignore his ability to make such calculations is oftentimes to lose the services of a skilled carpenter or mason. His responsibility is limited to his own labor; the responsibility for the excellence and strength of the structure devolves upon the designer and no one else. Of course, it goes without saying that if the mechanic is proficient in such technical calculations he is the better workman, for thereby he will have something to sustain his judgment at critical times, when he himself is solely responsible for the excellence of the work in hand. A certain city once asked for applications under civil-service rules for the position of inspector of masonry on a piece of work quite important and which would require one full season of time for completion. The position was won by a tailor who had evidently been coached for the job.

An experienced mason whom the tailor had defeated was heard to say: "Now, if the city wants an inspector of uniforms for the police force, I am an applicant for the position."

If experience and fitness for the position had been the

essence of the civil-service rules submitted to these two men, undoubtedly the mason would have been the winner.

Perhaps this tailor was a mechanical genius; if so, he is exempt from criticism, for geniuses are rare mortals and cannot always be judged from ordinary standpoints.

The draft of rules for civil-service examinations should unquestionably begin with, first, fitness; second, experience, to follow with other desirable information concerning the character, habits, etc., of the applicant, who should at least be a man versed in an occupation kindred to that solicited, if not in the business itself.

To go higher than this in educational advantages or in general information, we shall be apt to lose the services of practical men and obtain theorists instead.

Perhaps with a more extended experience in the form and application of civil-service examinations we shall ultimately meet practice with practice, asking practical questions of practical men, and not either unwittingly or unjustly separate one from the other.

MUNICIPAL OWNERSHIP.

MUNICIPAL or "Public ownership in its complete form is the ownership of a business by the people, and its operation by their agents in their interest."

Whenever there is published an instance of success or failure of municipal management of a public utility, the result is widely debated by those interested one way or the other in municipal ownership, and it is noticeable that the advocates of the policy continue to laud its theories without drawing public attention to the failures or the causes which produce them.

In the larger cities it has not, as a rule, proved successful, while its advocates hold up to view statements of flattering successes it has met with in smaller cities. Usually these statements are at such variance with results obtained from private ownership under similar conditions and better management that one is inclined to suspend judgment until comparative statements of the two forms of management are exhibited.

It is an indisputable fact that in this country consumers pay less for gas and water when supplied by a company than when furnished by the municipality.

It is also an indisputable fact that with very few ex-

ceptions the street railways owned by European municipalities are leased for operation to private companies.

Glasgow, Scotland, is often cited as an instance of successful municipal control and operation of street railways, yet Americans who have visited Glasgow and have studied the workings and patronage of its car lines claim that the service rendered there is such that no city in America would tolerate it for one week; that it is inferior and inadequate for an American city of 25,000 people.

Street railways in Continental Europe are admittedly not a success, and one reason why they are not so is that street traffic is much lighter there than here. One writer says: "The habit of riding on street cars prevails nowhere in Europe to the great extent it does in America. In Glasgow a man with a stout pair of legs deems it not only effeminate but extravagant to pay five cents to ride a mile, no matter what the weather might be."

The European considers money saved as tangible wealth, and the time consumed in walking of no value; hence he walks to his place of business, while the American, who considers time as money, rides to and from his work. The overcrowded car so commonly seen in every American city demonstrates conclusively the firm hold the street-car "habit" has upon our people.

The United States Post-office Department is often mentioned as a good example of successful government control of a public utility, and we cannot help admiring

its very efficient management. Yet we should remember that the government mail service is subsidiary, that it receives and delivers the mail at the railway stations, that its rapid and efficient transportation is done by private management through corporation ownership.

When the Spanish war broke out troops and supplies were rushed to Tampa, Florida, by rail, creating no end of delay and confusion at that port, owing to the inability of the government to promptly handle and care for the train-loads of men and supplies brought there *on time*, on lines of railway operated by private management.

The same troublesome conditions occurred in England and in South Africa on the breaking out of the Boer war. There was no complaint in either instance against the private management of the railways, which was as prompt in the discharge of its duties as anything of that nature could be, while the condemnation of the government's inability to meet its corresponding duties was long and loud. Had the failure been on the part of the railways and not with the government, the question of government control of public utilities would have become so urgent in the minds of the people that its realization would have been immediately demanded, for at that time an excited public chafed at every obstruction to the onward movement to Cuba.

All large manufacturing concerns, also railway and steamship lines, are operated under strict disciplinary conditions. The rigid discipline enforced by the mod-

ern railway officer has made possible the realization of "speed, comfort, and safety" to the traveller by rail.

There cannot be much discipline in any municipal department where the employees are numerous and the work is varied unless stricter supervision be exercised than a private corporation would deem necessary.

Compare the number of assistants, foremen, and inspectors placed over a large number of city employees with those placed over an equal number of men in a manufactory where the work is vastly more difficult, where inferior workmanship and mistakes mean a loss in trade. The tenets of political partyism do not recognize arbitrary autocratic management in municipal affairs as essential to success, yet a strict discipline, when properly exercised, protects competency against incompetency.

In private management there is neither religion nor politics to affect the status of workmen. A good workman or faithful employee usually holds his position within his own grasp—when he serves well the purpose for which he was hired. Election-day has no terrors for him, nor is he compelled to neglect his duties as a workman to serve as a politician whereby he may retain the place he holds. Neither does he resent the strict government exercised over him and others, for he well knows that it is exactness in all the details of the concern that insures a financial success and consequently his continued employment. He is infused, as it were, with an *esprit de corps* in common with his fellow work-

men, founded upon the excellence of their productions —a spirit that is wanting and impossible to create and maintain among a body of men who know that their tenure of office or position may or may not extend beyond the next election. This is a serious defect in the efficient and economical management of public utilities, and its remedy seems to lie in civil-service employment —when the faithful performance becomes as a rock, against which partisanship will beat and break in futile purpose.

There is much in evidence of the dearth of business ability in municipal management. What can we promise in the way of an able management of a gas plant or a street railway when our cities and towns are mulcted annually of large sums of money because of defective sidewalks, badly kept street surfaces, and weak bridges? Yet suits of this kind have been in our courts since the beginning of things in America, and as yet no general earnest effort has been made to abate them.

What promise of success in municipal management is there from a municipality that has shovelled up and hauled away $50,000 worth of asphalt pavement, broken and cracked, because the city council would not pay $200 to an expert who offered his services for this sum to teach the workmen how to prepare and lay this pavement?

Could there be a greater failure in municipal management than is shown in the case of the Dock Department of New York City? Twenty-eight years ago all

wharves, piers, docks, etc., owned and which might be acquired by the city were placed under commissioners who were to lease, develop, extend, and improve the dock system for the benefit of the public. The department was made independent in action, and was given the use of the city's credit for the issuance of bonds under certain restrictions; it made its own collections and disbursements. In spite of an unexceptionable waterfront, excellent terminal facilities, and improvements made by the general government in the interest of navigation between the Great Lakes—with which New York has all-water communication—the department management from the beginning has proven to be an utter failure. A New York paper says of it:

"In no private business, conducted on a free capital of perhaps $25,000,000, exempt from taxation and all ordinary expenses, would a resultant loss after twenty-eight years of $16,000,000 be considered a success, and in the case of New York the growth of the city's commerce has broken all precedents. Contrast this showing of the Dock Department with the advances made in the same period in transportation, illumination, and other semi-public industries controlled by private enterprise! The business men of New York regard the Dock Department as a wretched failure, and at the various conventions and gatherings of the commercial societies the view uniformly taken is that the present condition of the department is the inevitable result of the principle of municipal ownership and control. All real

incentive to progress and effort is removed by the system."

The closing sentence of the above quotation seems to sound the key-note of municipal failure in the management of utilities. Other instances of failure in municipal management have occurred in Boston, Massachusetts, one of the best governed cities in America.

A few years ago the authorities of Boston established a city printing department, an ice manufactory, a general repair shop, and an electrical construction division, with the belief that these several departments would effect great savings in behalf of the taxpayers. The results do not warrant such a belief by any means. When the market price of ice was $3 per ton it cost the city $6 per ton, furnished by its own plant; the printing done by the city printing department, equal in quality and style to the customary contract work, cost from 20 to 50 per cent. more.

The management of the electrical and repair departments was on a par with the others. A contractor submitted a guaranteed estimate of $40 for a certain piece of work which was done by the city bureau at a cost of $300. These failures in municipal management come from the inevitable tendency to treat public offices as political spoils.

The heads of the different departments were not allowed to discharge men for incompetency, as any private management would do. Even had they been allowed to

do so, the discharged persons would, through political influence, return to the service again.

Commenting on this condition of affairs, a Boston paper says:

"There are worse defects than these to be remedied before we can make successful headway in municipal control, and one of them is the lack on the part of the heads of bureaus themselves to practise constantly that necessary economy which the private employer must enforce if he would meet successfully the sharp competition existing nowadays in all classes of business, for what he succeeds in saving is his principal profit. Human nature being what it is, makes municipal ownership a failure, for what is everybody's business is nobody's business."

The plea is set up that municipal plants need not be run for profit, such as private ownership expects and strives for; that they should be operated for public service at cost only. Such an idea is neither valid nor businesslike. A municipal plant, like all other business concerns, must either yield a profit or run behind in expenses. It should be operated to yield a marginal revenue, however small, for therein lies financial safety.

Paris, France, is a large stockholder in the gas-works that supplies that city with gas, but the plant is owned and operated by a private company, paying the city annually a handsome dividend on its stock. This has proved to be a judicious investment for the city. It gets its streets lighted at a minimum cost, and receives a large

dividend from the gas company besides. The city wisely stopped at the threshold of municipal control, and accepted the profitable results of a management better than it could itself provide.

The taxpayers in our larger cities are not generally inclined to favor municipal ownership. While a great many of them may be investors or stockholders in numerous private enterprises, scarcely one of them could be induced to invest in a municipal enterprise were he asked to do so. The dreaded result of political interference with its management would deter him from making such an investment, if no other adverse reason existed.

An illustration of the unpopularity of municipal ownership was pointedly shown in a recent election held in one of the largest cities in the Northwest, where the people were asked to vote on the question of city ownership of an electric-lighting plant. Out of 75,000 votes cast at the general spring election there were 15,000 for the plant and 1400 against it. In two wards the question was ignored entirely, not a vote being cast either way.

It may safely be said that the 15,000 affirmative votes represent the total number of advocates of municipal ownership residing in that particular city.

There can exist no great objection to municipal ownership so far as it controls water-works and electric lighting, provided the taxpayers have no objection to footing the bills for maintenance and operation, whether

it be much or little; but no municipality of large area and population can pump water or furnish electric lighting as cheaply as a private company could were it to occupy the same territory, nor will it ever do so until it follows the same business methods which are the basis of success in all private management.

When a municipality has acquired its own water-works and electric-lighting plant there should be a sharp line drawn against further acquisition, lest it engage in street-railway traffic and the manufacture and supply of gas—two kinds of business which the modern city is utterly incompetent to handle.

Unquestionably a city should own and control absolutely its streets, bridges, and viaducts, and easements therein should not be granted to a private corporation without adequate compensation. For their use of the streets water companies should pay in water delivered from the city hydrants, and gas companies in gas for the street lamps. Street-railway companies should pay an annual sum for the maintenance of the bridges and viaducts that carry their tracks and cars, and they should fully bear their portion of the cost of paving and street repairs, besides a proportionate share of the cost of street sprinkling, and in our larger cities they should pay something more, commensurate with the business done.

We are continually crying aloud against the monopolies which we have created because of our short-sightedness and lack of business methods in municipal

transactions where private companies are concerned. If our franchises are worth seeking, they must be worth selling. Yet we invariably give them away, and afterwards rail at monopolies instead of condemning our own foolishness.

There is plenty of experience and precedent extant nowadays bearing upon all the important questions of municipal control and management, which affords a safe guidance if we will but heed their teachings.

SHORT-TITLE CATALOGUE

OF THE

PUBLICATIONS

OF

JOHN WILEY & SONS,

NEW YORK.

LONDON: CHAPMAN & HALL, LIMITED.

ARRANGED UNDER SUBJECTS.

Descriptive circulars sent on application. Books marked with an asterisk (*) are sold at *net* prices only, a double asterisk (**) books sold under the rules of the American Publishers' Association at *net* prices subject to an extra charge for postage. All books are bound in cloth unless otherwise stated.

AGRICULTURE.

Armsby's Manual of Cattle-feeding.....12mo, $1 75
Principles of Animal Nutrition.....8vo, 4 00
Budd and Hansen's American Horticultural Manual:
Part I. Propagation, Culture, and Improvement.....12mo, 1 50
Part II. Systematic Pomology.....12mo, 1 50
Downing's Fruits and Fruit-trees of America.....8vo, 5 00
Elliott's Engineering for Land Drainage.....12mo, 1 50
Practical Farm Drainage.....12mo, 1 00
Graves's Forest Mensuration.....8vo, 4 00
Green's Principles of American Forestry.....12mo, 1 50
Grotenfelt's Principles of Modern Dairy Practice. (Woll.).....12mo, 2 00
Kemp's Landscape Gardening.....12mo, 2 50
Maynard's Landscape Gardening as Applied to Home Decoration.....12mo, 1 50
* McKay and Larsen's Principles and Practice of Butter-making.....8vo, 1 50
Sanderson's Insects Injurious to Staple Crops.....12mo, 1 50
Insects Injurious to Garden Crops. (In preparation.)
Insects Injuring Fruits. (In preparation.)
Stockbridge's Rocks and Soils.....8vo, 2 50
Winton's Microscopy of Vegetable Foods.....8vo, 7 50
Woll's Handbook for Farmers and Dairymen.....16mo, 1 50

ARCHITECTURE.

Baldwin's Steam Heating for Buildings.....12mo, 2 50
Bashore's Sanitation of a Country House.....12mo, 1 00
Berg's Buildings and Structures of American Railroads.....4to, 5 00
Birkmire's Planning and Construction of American Theatres.....8vo, 3 00
Architectural Iron and Steel.....8vo, 3 50
Compound Riveted Girders as Applied in Buildings.....8vo, 2 00
Planning and Construction of High Office Buildings.....8vo, 3 50
Skeleton Construction in Buildings.....8vo, 3 00
Brigg's Modern American School Buildings.....8vo, 4 00

Carpenter's Heating and Ventilating of Buildings. 8vo, 4 00
Freitag's Architectural Engineering. 8vo, 3 50
Fireproofing of Steel Buildings. 8vo, 2 50
French and Ives's Stereotomy. 8vo, 2 50
Gerhard's Guide to Sanitary House-inspection. 16mo, 1 00
Theatre Fires and Panics. 12mo, 1 50
*Greene's Structural Mechanics 8vo, 2 50
Holly's Carpenters' and Joiners' Handbook. 18mo, 75
Johnson's Statics by Algebraic and Graphic Methods. 8vo, 2 00
Kidder's Architects' and Builders' Pocket-book. Rewritten Edition. 16mo, mor., 5 00
Merrill's Stones for Building and Decoration. 8vo, 5 00
Non-metallic Minerals: Their Occurrence and Uses. 8vo, 4 00
Monckton's Stair-building. 4to, 4 00
Patton's Practical Treatise on Foundations. 8vo, 5 00
Peabody's Naval Architecture. 8vo, 7 50
Rice's Concrete-block Manufacture 8vo, 2 00
Richey's Handbook for Superintendents of Construction. . . . . 16mo, mor., 4 00
* Building Mechanics' Ready Reference Book. Carpenters' and Wood-workers' Edition. . . . . 16mo, morocco, 1 50
Sabin's Industrial and Artistic Technology of Paints and Varnish. 8vo, 3 00
Siebert and Biggin's Modern Stone-cutting and Masonry. 8vo, 1 50
Snow's Principal Species of Wood. 8vo, 3 50
Sondericker's Graphic Statics with Applications to Trusses, Beams, and Arches. 8vo, 2 00
Towne's Locks and Builders' Hardware. . . . . 18mo, morocco, 3 00
Wait's Engineering and Architectural Jurisprudence 8vo, 6 00
Sheep, 6 50
Law of Operations Preliminary to Construction in Engineering and Architecture. 8vo, 5 00
Sheep, 5 50
Law of Contracts. 8vo, 3 00
Wood's Rustless Coatings: Corrosion and Electrolysis of Iron and Steel. . 8vo, 4 00
Worcester and Atkinson's Small Hospitals, Establishment and Maintenance, Suggestions for Hospital Architecture, with Plans for a Small Hospital. 12mo, 1 25
The World's Columbian Exposition of 1893. . . . . Large 4to, 1 00

ARMY AND NAVY.

Bernadou's Smokeless Powder, Nitro-cellulose, and the Theory of the Cellulose Molecule. 12mo, 2 50
* Bruff's Text-book Ordnance and Gunnery. 8vo, 6 00
Chase's Screw Propellers and Marine Propulsion. 8vo, 3 00
Cloke's Gunner's Examiner. 8vo, 1 50
Craig's Azimuth. 4to, 3 50
Crehore and Squier's Polarizing Photo-chronograph. 8vo, 3 00
* Davis's Elements of Law. 8vo, 2 50
* Treatise on the Military Law of United States. 8vo, 7 00
Sheep, 7 50
De Brack's Cavalry Outposts Duties. (Carr.). . . . . 24mo, morocco, 2 00
Dietz's Soldier's First Aid Handbook. . . . . 16mo, morocco, 1 25
* Dredge's Modern French Artillery. . . . . 4to, half morocco, 15 00
Durand's Resistance and Propulsion of Ships. 8vo, 5 00
* Dyer's Handbook of Light Artillery. 12mo, 3 00
Eissler's Modern High Explosives. 8vo, 4 00
* Fiebeger's Text-book on Field Fortification. . . . . Small 8vo, 2 00
Hamilton's The Gunner's Catechism 18mo, 1 00
* *Hoff's* Elementary Naval Tactics. 8vo, 1 50

Ingalls's Handbook of Problems in Direct Fire.....8vo, 4 00
* Ballistic Tables.....8vo, 1 50
* Lyons's Treatise on Electromagnetic Phenomena. Vols. I. and II..8vo, each, 6 00
* Mahan's Permanent Fortifications. (Mercur.).....8vo, half morocco, 7 50
Manual for Courts-martial.....16mo, morocco, 1 50
* Mercur's Attack of Fortified Places.....12mo, 2 00
* Elements of the Art of War.....8vo, 4 00
Metcalf's Cost of Manufactures—And the Administration of Workshops..8vo, 5 00
* Ordnance and Gunnery. 2 vols.....12mo, 5 00
Murray's Infantry Drill Regulations.....18mo, paper, 10
Nixon's Adjutants' Manual.....24mo, 1 00
Peabody's Naval Architecture.....8vo, 7 50
* Phelps's Practical Marine Surveying.....8vo, 2 50
Powell's Army Officer's Examiner.....12mo, 4 00
Sharpe's Art of Subsisting Armies in War.....18mo, morocco, 1 50
* Tupes and Poole's Manual of Bayonet Exercises and Musketry Fencing. 24mo, leather, 50
* Walke's Lectures on Explosives.....8vo, 4 00
Weaver's Military Explosives.....8vo, 3 00
* Wheeler's Siege Operations and Military Mining.....8vo, 2 00
Winthrop's Abridgment of Military Law.....12mo, 2 50
Woodhull's Notes on Military Hygiene.....16mo, 1 50
Young's Simple Elements of Navigation.....16mo, morocco, 2 00

ASSAYING.

Fletcher's Practical Instructions in Quantitative Assaying with the Blowpipe. 12mo, morocco, 1 50
Furman's Manual of Practical Assaying.....8vo, 3 00
Lodge's Notes on Assaying and Metallurgical Laboratory Experiments....8vo, 3 00
Low's Technical Methods of Ore Analysis.....8vo, 3 00
Miller's Manual of Assaying.....12mo, 1 00
Cyanide Process.....12mo, 1 00
Minet's Production of Aluminum and its Industrial Use. (Waldo.).....12mo, 2 50
O'Driscoll's Notes on the Treatment of Gold Ores.....8vo, 2 00
Ricketts and Miller's Notes on Assaying.....8vo, 3 00
Robine and Lenglen's Cyanide Industry. (Le Clerc.).....8vo, 4 00
Ulke's Modern Electrolytic Copper Refining.....8vo, 3 00
Wilson's Cyanide Processes.....12mo, 1 50
Chlorination Process.....12mo, 1 50

ASTRONOMY.

Comstock's Field Astronomy for Engineers.....8vo, 2 50
Craig's Azimuth.....4to, 3 50
Doolittle's Treatise on Practical Astronomy.....8vo, 4 00
Gore's Elements of Geodesy.....8vo, 2 50
Hayford's Text-book of Geodetic Astronomy.....8vo, 3 00
Merriman's Elements of Precise Surveying and Geodesy.....8vo, 2 50
* Michie and Harlow's Practical Astronomy.....8vo, 3 00
* White's Elements of Theoretical and Descriptive Astronomy.....12mo, 2 00

BOTANY.

Davenport's Statistical Methods, with Special Reference to Biological Variation. 16mo, morocco, 1 25
Thomé and Bennett's Structural and Physiological Botany.....16mo, 2 25
Westermaier's Compendium of General Botany. (Schneider.).....8vo, 2 00

CHEMISTRY.

Adriance's Laboratory Calculations and Specific Gravity Tables.....12mo, 1 25
Alexeyeff's General Principles of Organic Synthesis. (Matthews.).....8vo, 3 00
Allen's Tables for Iron Analysis.....8vo, 3 00
Arnold's Compendium of Chemistry. (Mandel.).....Small 8vo, 3 50
Austen's Notes for Chemical Students.....12mo, 1 50
Bernadou's Smokeless Powder.—Nitro-cellulose, and Theory of the Cellulose Molecule.....12mo, 2 50
* Browning's Introduction to the Rarer Elements.....8vo, 1 50
Brush and Penfield's Manual of Determinative Mineralogy.....8vo, 4 00
Claassen's Beet-sugar Manufacture. (Hall and Rolfe.).....8vo, 3 00
Classen's Quantitative Chemical Analysis by Electrolysis. (Boltwood.).8vo, 3 00
Cohn's Indicators and Test-papers.....12mo, 2 00
Tests and Reagents.....8vo, 3 00
Crafts's Short Course in Qualitative Chemical Analysis. (Schaeffer.)...12mo, 1 50
Dolezalek's Theory of the Lead Accumulator (Storage Battery). (Von Ende.).....12mo, 2 50
Drechsel's Chemical Reactions. (Merrill.).....12mo, 1 25
Duhem's Thermodynamics and Chemistry. (Burgess.).....8vo, 4 00
Eissler's Modern High Explosives.....8vo, 4 00
Effront's Enzymes and their Applications. (Prescott.).....8vo, 3 00
Erdmann's Introduction to Chemical Preparations. (Dunlap.).....12mo, 1 25
Fletcher's Practical Instructions in Quantitative Assaying with the Blowpipe. 12mo, morocco, 1 50
Fowler's Sewage Works Analyses.....12mo, 2 00
Fresenius's Manual of Qualitative Chemical Analysis. (Wells.).....8vo, 5 00
Manual of Qualitative Chemical Analysis. Part I. Descriptive. (Wells.) 8vo, 3 00
System of Instruction in Quantitative Chemical Analysis. (Cohn.) 2 vols.....8vo, 12 50
Fuertes's Water and Public Health.....12mo, 1 50
Furman's Manual of Practical Assaying.....8vo, 3 00
* Getman's Exercises in Physical Chemistry.....12mo, 2 00
Gill's Gas and Fuel Analysis for Engineers.....12mo, 1 25
Grotenfelt's Principles of Modern Dairy Practice. (Woll.).....12mo, 2 00
Groth's Introduction to Chemical Crystallography (Marshall).....12mo, 1 25
Hammarsten's Text-book of Physiological Chemistry. (Mandel.).....8vo, 4 00
Helm's Principles of Mathematical Chemistry. (Morgan.).....12mo, 1 50
Hering's Ready Reference Tables (Conversion Factors).....16mo, morocco, 2 50
Hind's Inorganic Chemistry.....8vo, 3 00
* Laboratory Manual for Students.....12mo, 1 00
Holleman's Text-book of Inorganic Chemistry. (Cooper.).....8vo, 2 50
Text-book of Organic Chemistry. (Walker and Mott.).....8vo, 2 50
* Laboratory Manual of Organic Chemistry. (Walker.).....12mo, 1 00
Hopkins's Oil-chemists' Handbook.....8vo, 3 00
Jackson's Directions for Laboratory Work in Physiological Chemistry..8vo, 1 25
Keep's Cast Iron.....8vo, 2 50
Ladd's Manual of Quantitative Chemical Analysis.....12mo, 1 00
Landauer's Spectrum Analysis. (Tingle.).....8vo, 3 00
* Langworthy and Austen. The Occurrence of Aluminium in Vegetable Products, Animal Products, and Natural Waters.....8vo, 2 00
Lassar-Cohn's Practical Urinary Analysis. (Lorenz.).....12mo, 1 00
Application of Some General Reactions to Investigations in Organic Chemistry. (Tingle.).....12mo, 1 00
Leach's The Inspection and Analysis of Food with Special Reference to State Control.....8vo, 7 50
Löb's Electrochemistry of Organic Compounds. (Lorenz.).....8vo, 3 00
Lodge's Notes on Assaying and Metallurgical Laboratory Experiments.....8vo, 3 00
Low's Technical Method of Ore Analysis.....8vo, 3 00
Lunge's Techno-chemical Analysis. (Cohn.).....12mo, 1 00

* McKay and Larsen's Principles and Practice of Butter-making 8vo 1 50
Mandel's Handbook for Bio-chemical Laboratory 12mo, 1 50
* Martin's Laboratory Guide to Qualitative Analysis with the Blowpipe .. 12mo, 60
Mason's Water-supply. (Considered Principally from a Sanitary Standpoint.) 3d Edition, Rewritten 8vo, 4 00
Examination of Water. (Chemical and Bacteriological.) 12mo, 1 25
Matthew's The Textile Fibres 8vo, 3 50
Meyer's Determination of Radicles in Carbon Compounds. (Tingle.) .. 12mo, 1 00
Miller's Manual of Assaying 12mo, 1 00
Cyanide Process 12mo, 1 00
Minet's Production of Aluminum and its Industrial Use. (Waldo.) 12mo, 2 50
Mixter's Elementary Text-book of Chemistry 12mo, 1 50
Morgan's An Outline of the Theory of Solutions and its Results 12mo, 1 00
Elements of Physical Chemistry 12mo, 3 00
* Physical Chemistry for Electrical Engineers 12mo, 1 50
Morse's Calculations used in Cane-sugar Factories ..... 16mo, morocco, 1 50
Mulliken's General Method for the Identification of Pure Organic Compounds. Vol. I. ..... Large 8vo, 5 00
O'Brine's Laboratory Guide in Chemical Analysis 8vo, 2 00
O'Driscoll's Notes on the Treatment of Gold Ores 8vo, 2 00
Ostwald's Conversations on Chemistry. Part One. (Ramsey.) 12mo, 1 50
" " " " Part Two. (Turnbull.) 12mo, 2 00
* Penfield's Notes on Determinative Mineralogy and Record of Mineral Tests. 8vo, paper, 50
Pictet's The Alkaloids and their Chemical Constitution. (Biddle.) 8vo, 5 00
Pinner's Introduction to Organic Chemistry. (Austen.) 12mo, 1 50
Poole's Calorific Power of Fuels 8vo, 3 00
Prescott and Winslow's Elements of Water Bacteriology, with Special Reference to Sanitary Water Analysis 12mo, 1 25
* Reisig's Guide to Piece-dyeing 8vo, 25 00
Richards and Woodman's Air, Water, and Food from a Sanitary Standpoint .. 8vo, 2 00
Ricketts and Russell's Skeleton Notes upon Inorganic Chemistry. (Part I. Non-metallic Elements.) ..... 8vo, morocco, 75
Ricketts and Miller's Notes on Assaying 8vo, 3 00
Rideal's Sewage and the Bacterial Purification of Sewage 8vo, 3 50
Disinfection and the Preservation of Food 8vo, 4 00
Riggs's Elementary Manual for the Chemical Laboratory 8vo, 1 25
Robine and Lenglen's Cyanide Industry. (Le Clerc.) 8vo, 4 00
Rostoski's Serum Diagnosis. (Bolduan.) 12mo, 1 00
Ruddiman's Incompatibilities in Prescriptions 8vo, 2 00
* Whys in Pharmacy 12mo, 1 00
Sabin's Industrial and Artistic Technology of Paints and Varnish 8vo, 3 00
Salkowski's Physiological and Pathological Chemistry. (Orndorff.) 8vo, 2 50
Schimpf's Text-book of Volumetric Analysis 12mo, 2 50
Essentials of Volumetric Analysis 12mo, 1 25
* Qualitative Chemical Analysis 8vo, 1 25
Smith's Lecture Notes on Chemistry for Dental Students 8vo, 2 50
Spencer's Handbook for Chemists of Beet-sugar Houses ..... 16mo, morocco, 3 00
Handbook for Cane Sugar Manufacturers ..... 16mo, morocco, 3 00
Stockbridge's Rocks and Soils 8vo, 2 50
* Tillman's Elementary Lessons in Heat 8vo, 1 50
* Descriptive General Chemistry 8vo, 3 00
Treadwell's Qualitative Analysis. (Hall.) 8vo, 3 00
Quantitative Analysis. (Hall.) 8vo, 4 00
Turneaure and Russell's Public Water-supplies 8vo, 5 00
Van Deventer's Physical Chemistry for Beginners. (Boltwood.) 12mo, 1 50
* Walke's Lectures on Explosives 8vo, 4 00
Ware's Beet-sugar Manufacture and Refining ..... Small 8vo, cloth, 4 00
Washington's Manual of the Chemical Analysis of Rocks 8vo, 2 00

Wassermann's Immune Sera: Hæmolysins, Cytotoxins, and Precipitins. (Bolduan.) 12mo, 1 00
Weaver's Military Explosives 8vo, 3 00
Wehrenfennig's Analysis and Softening of Boiler Feed-Water 8vo, 4 00
Wells's Laboratory Guide in Qualitative Chemical Analysis 8vo, 1 50
Short Course in Inorganic Qualitative Chemical Analysis for Engineering Students 12mo, 1 50
Text-book of Chemical Arithmetic 12mo, 1 25
Whipple's Microscopy of Drinking-water 8vo, 3 50
Wilson's Cyanide Processes 12mo, 1 50
Chlorination Process 12mo, 1 50
Winton's Microscopy of Vegetable Foods 8vo, 7 50
Wulling's Elementary Course in Inorganic, Pharmaceutical, and Medical Chemistry 12mo, 2 00

CIVIL ENGINEERING.

BRIDGES AND ROOFS. HYDRAULICS. MATERIALS OF ENGINEERING. RAILWAY ENGINEERING.

Baker's Engineers' Surveying Instruments 12mo, 3 00
Bixby's Graphical Computing Table ..... Paper 19¼ × 24¼ inches. 25
** **Burr's Ancient and Modern Engineering and the Isthmian Canal** (Postage, 27 cents additional.) 8vo, 3 50
Comstock's Field Astronomy for Engineers 8vo, 2 50
Davis's Elevation and Stadia Tables 8vo, 1 00
Elliott's Engineering for Land Drainage 12mo, 1 50
Practical Farm Drainage 12mo, 1 00
***Fiebeger's Treatise on Civil Engineering** 8vo, 5 00
Flemer's Phototopographic Methods and Instruments 8vo, 5 00
Folwell's Sewerage. (Designing and Maintenance.) 8vo, 3 00
Freitag's Architectural Engineering. 2d Edition, Rewritten 8vo, 3 50
French and Ives's Stereotomy 8vo, 2 50
Goodhue's Municipal Improvements 12mo, 1 75
Goodrich's Economic Disposal of Towns' Refuse 8vo, 3 50
Gore's Elements of Geodesy 8vo, 2 50
Hayford's Text-book of Geodetic Astronomy 8vo, 3 00
Hering's Ready Reference Tables (Conversion Factors) ..... 16mo, morocco, 2 50
Howe's Retaining Walls for Earth 12mo, 1 25
* **Ives's Adjustments of the Engineer's Transit and Level** ..... 16mo, Bds. 25
Ives and Hilts's Problems in Surveying ..... 16mo, morocco, 1 50
Johnson's (J. B.) Theory and Practice of Surveying ..... Small 8vo, 4 00
Johnson's (L. J.) Statics by Algebraic and Graphic Methods 8vo, 2 00
Laplace's Philosophical Essay on Probabilities. (Truscott and Emory.) 12mo, 2 00
Mahan's Treatise on Civil Engineering. (1873.) (Wood.) 8vo, 5 00
* Descriptive Geometry 8vo, 1 50
Merriman's Elements of Precise Surveying and Geodesy 8vo, 2 50
Merriman and Brooks's Handbook for Surveyors ..... 16mo, morocco, 2 00
Nugent's Plane Surveying 8vo, 3 50
Ogden's Sewer Design 12mo, 2 00
Parsons's Disposal of Municipal Refuse 8vo, 2 00
Patton's Treatise on Civil Engineering ..... 8vo half leather, 7 50
Reed's Topographical Drawing and Sketching 4to, 5 00
Rideal's Sewage and the Bacterial Purification of Sewage 8vo, 3 50
Siebert and Biggin's Modern Stone-cutting and Masonry 8vo, 1 50
***Smith's Manual* of Topographical Drawing.** (McMillan.) 8vo, 2 50
***Sondericker's* Graphic Statics, with Applications to Trusses, Beams, and Arches** 8vo, 2 00

Taylor and Thompson's Treatise on Concrete, Plain and Reinforced.....8vo, 5 00
* Trautwine's Civil Engineer's Pocket-book.....16mo, morocco, 5 00
Venable's Garbage Crematories in America.....8vo, 2 00
Wait's Engineering and Architectural Jurisprudence.....8vo, 6 00
Sheep, 6 50
Law of Operations Preliminary to Construction in Engineering and Architecture.....8vo, 5 00
Sheep, 5 50
Law of Contracts.....8vo, 3 00
Warren's Stereotomy—Problems in Stone-cutting.....8vo, 2 50
Webb's Problems in the Use and Adjustment of Engineering Instruments. 16mo, morocco, 1 25
Wilson's Topographic Surveying.....8vo, 3 50

BRIDGES AND ROOFS.

Boller's Practical Treatise on the Construction of Iron Highway Bridges..8vo, 2 00
* Thames River Bridge.....4to, paper, 5 00
Burr's Course on the Stresses in Bridges and Roof Trusses, Arched Ribs, and Suspension Bridges.....8vo, 3 50
Burr and Falk's Influence Lines for Bridge and Roof Computations.....8vo, 3 00
Design and Construction of Metallic Bridges.....8vo, 5 00
Du Bois's Mechanics of Engineering. Vol. II.....Small 4to, 10 00
Foster's Treatise on Wooden Trestle Bridges.....4to, 5 00
Fowler's Ordinary Foundations.....8vo, 3 50
Greene's Roof Trusses.....8vo, 1 25
Bridge Trusses.....8vo, 2 50
Arches in Wood, Iron, and Stone.....8vo, 2 50
Howe's Treatise on Arches.....8vo, 4 00
Design of Simple Roof-trusses in Wood and Steel.....8vo, 2 00
Symmetrical Masonry Arches.....8vo, 2 50
Johnson, Bryan, and Turneaure's Theory and Practice in the Designing of Modern Framed Structures.....Small 4to, 10 00
Merriman and Jacoby's Text-book on Roofs and Bridges:
Part I. Stresses in Simple Trusses.....8vo, 2 50
Part II. Graphic Statics.....8vo, 2 50
Part III. Bridge Design.....8vo, 2 50
Part IV. Higher Structures.....8vo, 2 50
Morison's Memphis Bridge.....4to, 10 00
Waddell's De Pontibus, a Pocket-book for Bridge Engineers..16mo, morocco, 2 00
* Specifications for Steel Bridges.....12mo, 50
Wright's Designing of Draw-spans. Two parts in one volume.....8vo, 3 50

HYDRAULICS.

Barnes's Ice Formation.....8vo, 3 00
Bazin's Experiments upon the Contraction of the Liquid Vein Issuing from an Orifice. (Trautwine.).....8vo, 2 00
Bovey's Treatise on Hydraulics.....8vo, 5 00
Church's Mechanics of Engineering.....8vo, 6 00
Diagrams of Mean Velocity of Water in Open Channels.....paper, 1 50
Hydraulic Motors.....8vo, 2 00
Coffin's Graphical Solution of Hydraulic Problems.....16mo, morocco, 2 50
Flather's Dynamometers, and the Measurement of Power.....12mo, 3 00
Folwell's Water-supply Engineering.....8vo, 4 00
Frizell's Water-power.....8vo, 5 00

Fuertes's Water and Public Health.....12mo, 1 50
Water-filtration Works.....12mo, 2 50
Ganguillet and Kutter's General Formula for the Uniform Flow of Water in Rivers and Other Channels. (Hering and Trautwine.).....8vo, 4 00
Hazen's Filtration of Public Water-supply.....8vo, 3 00
Hazlehurst's Towers and Tanks for Water-works.....8vo, 2 50
Herschel's 115 Experiments on the Carrying Capacity of Large, Riveted, Metal Conduits.....8vo, 2 00
Mason's Water-supply. (Considered Principally from a Sanitary Standpoint.) 8vo, 4 00
Merriman's Treatise on Hydraulics.....8vo, 5 00
* Michie's Elements of Analytical Mechanics.....8vo, 4 00
Schuyler's Reservoirs for Irrigation, Water-power, and Domestic Water-supply.....Large 8vo, 5 00
** Thomas and Watt's Improvement of Rivers (Post., 44c. additional.) 4to, 6 00
Turneaure and Russell's Public Water-supplies.....8vo, 5 00
Wegmann's Design and Construction of Dams.....4to, 5 00
Water-supply of the City of New York from 1658 to 1895.....4to, 10 00
Williams and Hazen's Hydraulic Tables.....8vo, 1 50
Wilson's Irrigation Engineering.....Small 8vo, 4 00
Wolff's Windmill as a Prime Mover.....8vo, 3 00
Wood's Turbines.....8vo, 2 50
Elements of Analytical Mechanics.....8vo, 3 00

MATERIALS OF ENGINEERING.

Baker's Treatise on Masonry Construction.....8vo, 5 00
Roads and Pavements.....8vo, 5 00
Black's United States Public Works.....Oblong 4to, 5 00
* Bovey's Strength of Materials and Theory of Structures.....8vo, 7 50
Burr's Elasticity and Resistance of the Materials of Engineering.....8vo, 7 50
Byrne's Highway Construction.....8vo, 5 00
Inspection of the Materials and Workmanship Employed in Construction. 16mo, 3 00
Church's Mechanics of Engineering.....8vo, 6 00
Du Bois's Mechanics of Engineering. Vol. I.....Small 4to, 7 50
*Eckel's Cements, Limes, and Plasters.....8vo, 6 00
Johnson's Materials of Construction.....Large 8vo, 6 00
Fowler's Ordinary Foundations.....8vo, 3 50
Graves's Forest Mensuration.....8vo, 4 00
* Greene's Structural Mechanics.....8vo, 2 50
Keep's Cast Iron.....8vo, 2 50
Lanza's Applied Mechanics.....8vo, 7 50
Marten's Handbook on Testing Materials. (Henning.) 2 vols.....8vo, 7 50
Maurer's Technical Mechanics.....8vo, 4 00
Merrill's Stones for Building and Decoration.....8vo, 5 00
Merriman's Mechanics of Materials.....8vo, 5 00
Strength of Materials.....12mo, 1 00
Metcalf's Steel. A Manual for Steel-users.....12mo, 2 00
Patton's Practical Treatise on Foundations.....8vo, 5 00
Richardson's Modern Asphalt Pavements.....8vo, 3 00
Richey's Handbook for Superintendents of Construction.....16mo, mor., 4 00
* Ries's Clays: Their Occurrence, Properties, and Uses.....8vo, 5 00
Rockwell's Roads and Pavements in France.....12mo, 1 25
Sabin's Industrial and Artistic Technology of Paints and Varnish.....8vo, 3 00
Smith's Materials of Machines.....12mo, 1 00
Snow's Principal Species of Wood.....8vo, 3 50

Spalding's Hydraulic Cement.....12mo, 2 00
Text-book on Roads and Pavements.....12mo, 2 00
Taylor and Thompson's Treatise on Concrete. Plain and Reinforced.....8vo, 5 00
Thurston's Materials of Engineering. 3 Parts.....8vo, 8 00
Part I. Non-metallic Materials of Engineering and Metallurgy.....8vo, 2 00
Part II Iron and Steel.....8vo, 3 50
Part III. A Treatise on Brasses, Bronzes, and Other Alloys and their Constituents.....8vo, 2 50
Thurston's Text-book of the Materials of Construction.....8vo, 5 00
Tillson's Street Pavements and Paving Materials.....8vo, 4 00
Waddell's De Pontibus (A Pocket-book for Bridge Engineers.)..16mo, mor., 2 00
Specifications for Steel Bridges.....12mo, 1 25
Wood's (De V.) Treatise on the Resistance of Materials, and an Appendix on the Preservation of Timber.....8vo, 2 00
Wood's (De V.) Elements of Analytical Mechanics.....8vo, 3 00
Wood's (M. P.) Rustless Coatings: Corrosion and Electrolysis of Iron and Steel.....8vo, 4 00

RAILWAY ENGINEERING.

Andrew's Handbook for Street Railway Engineers.....3x5 inches, morocco, 1 25
Berg's Buildings and Structures of American Railroads.....4to, 5 00
Brook's Handbook of Street Railroad Location.....16mo, morocco, 1 50
Butt's Civil Engineer's Field-book.....16mo, morocco, 2 50
Crandall's Transition Curve.....16mo, morocco, 1 50
Railway and Other Earthwork Tables.....8vo, 1 50
Dawson's "Engineering" and Electric Traction Pocket-book..16mo, morocco, 5 00
Dredge's History of the Pennsylvania Railroad: (1879).....Paper, 5 00
* Drinker's Tunnelling, Explosive Compounds, and Rock Drills..4to, half mor., 25 00
Fisher's Table of Cubic Yards.....Cardboard, 25
Godwin's Railroad Engineers' Field-book and Explorers' Guide...16mo, mor., 2 50
Howard's Transition Curve Field-book.....16mo, morocco, 1 50
Hudson's Tables for Calculating the Cubic Contents of Excavations and Embankments.....8vo, 1 00
Molitor and Beard's Manual for Resident Engineers.....16mo, 1 00
Nagle's Field Manual for Railroad Engineers.....16mo, morocco, 3 00
Philbrick's Field Manual for Engineers.....16mo, morocco, 3 00
Searles's Field Engineering.....16mo, morocco, 3 00
Railroad Spiral.....16mo, morocco, 1 50
Taylor's Prismoidal Formulæ and Earthwork.....8vo, 1 50
* Trautwine's Method of Calculating the Cube Contents of Excavations and Embankments by the Aid of Diagrams.....8vo, 2 00
The Field Practice of Laying Out Circular Curves for Railroads.
12mo, morocco, 2 50
Cross-section Sheet.....Paper, 25
Webb's Railroad Construction.....16mo, morocco, 5 00
Economics of Railroad Construction.....Large 12mo, 2 50
Wellington's Economic Theory of the Location of Railways.....Small 8vo. 5 00

DRAWING.

Barr's Kinematics of Machinery.....8vo 2 50
* Bartlett's Mechanical Drawing.....8vo, 3 00
* " " " Abridged Ed.....8vo, 1 50
Coolidge's Manual of Drawing.....8vo, paper, 1 00

Coolidge and Freeman's Elements of General Drafting for Mechanical Engineers. Oblong 4to, 2 50
Durley's Kinematics of Machines. 8vo, 4 00
Emch's Introduction to Projective Geometry and its Applications. 8vo, 2 50
Hill's Text-book on Shades and Shadows, and Perspective. 8vo, 2 00
Jamison's Elements of Mechanical Drawing. 8vo, 2 50
Advanced Mechanical Drawing. 8vo, 2 00
Jones's Machine Design:
Part I. Kinematics of Machinery. 8vo, 1 50
Part II. Form, Strength, and Proportions of Parts. 8vo, 3 00
MacCord's Elements of Descriptive Geometry. 8vo, 3 00
Kinematics; or, Practical Mechanism. 8vo, 5 00
Mechanical Drawing. 4to, 4 00
Velocity Diagrams. 8vo, 1 50
MacLeod's Descriptive Geometry. Small 8vo, 1 50
* Mahan's Descriptive Geometry and Stone-cutting. 8vo, 1 50
Industrial Drawing. (Thompson.) 8vo, 3 50
Moyer's Descriptive Geometry. 8vo, 2 00
Reed's Topographical Drawing and Sketching. 4to, 5 00
Reid's Course in Mechanical Drawing. 8vo, 2 00
Text-book of Mechanical Drawing and Elementary Machine Design. 8vo, 3 00
Robinson's Principles of Mechanism. 8vo, 3 00
Schwamb and Merrill's Elements of Mechanism. 8vo, 3 00
Smith's (R. S.) Manual of Topographical Drawing. (McMillan.) 8vo, 2 50
Smith (A. W.) and Marx's Machine Design. 8vo, 3 00
* Titsworth's Elements of Mechanical Drawing. Oblong 8vo, 1 25
Warren's Elements of Plane and Solid Free-hand Geometrical Drawing. 12mo, 1 00
Drafting Instruments and Operations. 12mo, 1 25
Manual of Elementary Projection Drawing. 12mo, 1 50
Manual of Elementary Problems in the Linear Perspective of Form and Shadow. 12mo, 1 00
Plane Problems in Elementary Geometry. 12mo, 1 25
Primary Geometry. 12mo, 75
Elements of Descriptive Geometry, Shadows, and Perspective. 8vo, 3 50
General Problems of Shades and Shadows. 8vo, 3 00
Elements of Machine Construction and Drawing. 8vo, 7 50
Problems, Theorems, and Examples in Descriptive Geometry. 8vo, 2 50
Weisbach's Kinematics and Power of Transmission. (Hermann and Klein.) 8vo, 5 00
Whelpley's Practical Instruction in the Art of Letter Engraving. 12mo, 2 00
Wilson's (H. M.) Topographic Surveying. 8vo, 3 50
Wilson's (V. T.) Free-hand Perspective. 8vo, 2 50
Wilson's (V. T.) Free-hand Lettering. 8vo, 1 00
Woolf's Elementary Course in Descriptive Geometry. Large 8vo, 3 00

ELECTRICITY AND PHYSICS.

Anthony and Brackett's Text-book of Physics. (Magie.) Small 8vo, 3 00
Anthony's Lecture-notes on the Theory of Electrical Measurements. 12mo, 1 00
Benjamin's History of Electricity. 8vo, 3 00
Voltaic Cell. 8vo, 3 00
Classen's Quantitative Chemical Analysis by Electrolysis. (Boltwood.) 8vo, 3 00
* Collins's Manual of Wireless Telegraphy. 12mo, 1 50
Morocco, 2 00
Crehore and Squier's Polarizing Photo-chronograph. 8vo, 3 00
Dawson's "Engineering" and Electric Traction Pocket-book. 16mo, morocco, 5 00

Dolezalek's Theory of the Lead Accumulator (Storage Battery). (Von Ende.) 12mo, 2 50
Duhem's Thermodynamics and Chemistry. (Burgess.) 8vo, 4 00
Flather's Dynamometers, and the Measurement of Power 12mo, 3 00
Gilbert's De Magnete. (Mottelay.) 8vo, 2 50
Hanchett's Alternating Currents Explained 12mo, 1 00
Hering's Ready Reference Tables (Conversion Factors) ..... 16mo, morocco, 2 50
Holman's Precision of Measurements 8vo, 2 00
Telescopic Mirror-scale Method, Adjustments, and Tests ..... Large 8vo, 75
Kinzbrunner's Testing of Continuous-current Machines 8vo, 2 00
Landauer's Spectrum Analysis. (Tingle.) 8vo, 3 00
Le Chatelier's High-temperature Measurements. (Boudouard—Burgess.) 12mo, 3 00
Löb's Electrochemistry of Organic Compounds. (Lorenz.) 8vo, 3 00
* Lyons's Treatise on Electromagnetic Phenomena. Vols. I. and II. 8vo, each, 6 00
* Michie's Elements of Wave Motion Relating to Sound and Light 8vo, 4 00
Niaudet's Elementary Treatise on Electric Batteries. (Fishback.) 12mo, 2 50
* Parshall and Hobart's Electric Machine Design ..... 4to, half morocco, 12 50
* Rosenberg's Electrical Engineering. (Haldane Gee—Kinzbrunner.) 8vo, 1 50
Ryan, Norris, and Hoxie's Electrical Machinery. Vol. I 8vo, 2 50
Thurston's Stationary Steam-engines 8vo, 2 50
* Tillman's Elementary Lessons in Heat 8vo, 1 50
Tory and Pitcher's Manual of Laboratory Physics ..... Small 8vo, 2 00
Ulke's Modern Electrolytic Copper Refining 8vo, 3 00

LAW.

* Davis's Elements of Law 8vo, 2 50
* Treatise on the Military Law of United States 8vo, 7 00
* Sheep, 7 50
Manual for Courts-martial ..... 16mo, morocco, 1 50
Wait's Engineering and Architectural Jurisprudence 8vo, 6 00
Sheep, 6 50
Law of Operations Preliminary to Construction in Engineering and Architecture 8vo, 5 00
Sheep, 5 50
Law of Contracts 8vo, 3 00
Winthrop's Abridgment of Military Law 12mo, 2 50

MANUFACTURES.

Bernadou's Smokeless Powder—Nitro-cellulose and Theory of the Cellulose Molecule 12mo, 2 50
Bolland's Iron Founder 12mo, 2 50
The Iron Founder," Supplement 12mo, 2 50
Encyclopedia of Founding and Dictionary of Foundry Terms Used in the Practice of Moulding 12mo, 3 00
Claassen's Beet-sugar Manufacture. (Hall and Rolfe.) 8vo, 3 00
* Eckel's Cements, Limes, and Plasters 8vo, 6 00
Eissler's Modern High Explosives 8vo, 4 00
Effront's Enzymes and their Applications. (Prescott.) 8vo, 3 00
Fitzgerald's Boston Machinist 12mo, 1 00
Ford's Boiler Making for Boiler Makers 18mo, 1 00
Hopkin's *Oil-chemists' Handbook* 8vo, 3 00
Keep's Cast Iron 8vo, 2 50

Leach's The Inspection and Analysis of Food with Special Reference to State Control. . . . . Large 8vo, 7 50
* McKay and Larsen's Principles and Practice of Butter-making. 8vo, 1 50
Matthews's The Textile Fibres. 8vo, 3 50
Metcalf's Steel. A Manual for Steel-users. 12mo, 2 00
Metcalfe's Cost of Manufactures—And the Administration of Workshops. 8vo, 5 00
Meyer's Modern Locomotive Construction. 4to, 10 00
Morse's Calculations used in Cane-sugar Factories. . . . . 16mo, morocco, 1 50
* Reisig's Guide to Piece-dyeing. 8vo, 25 00
Rice's Concrete-block Manufacture. 8vo, 2 00
Sabin's Industrial and Artistic Technology of Paints and Varnish. 8vo, 3 00
Smith's Press-working of Metals. 8vo, 3 00
Spalding's Hydraulic Cement. 12mo, 2 00
Spencer's Handbook for Chemists of Beet-sugar Houses. . . . . 16mo, morocco, 3 00
Handbook for Cane Sugar Manufacturers. . . . . 16mo, morocco, 3 00
Taylor and Thompson's Treatise on Concrete, Plain and Reinforced. 8vo, 5 00
Thurston's Manual of Steam-boilers, their Designs, Construction and Operation. 8vo, 5 00
* Walke's Lectures on Explosives. 8vo, 4 00
Ware's Beet-sugar Manufacture and Refining. . . . . Small 8vo, 4 00
Weaver's Military Explosives. 8vo, 3 00
West's American Foundry Practice. 12mo, 2 50
Moulder's Text-book. 12mo, 2 50
Wolff's Windmill as a Prime Mover 8vo, 3 00
Wood's Rustless Coatings: Corrosion and Electrolysis of Iron and Steel. . 8vo, 4 00

MATHEMATICS.

Baker's Elliptic Functions. 8vo, 1 50
* Bass's Elements of Differential Calculus. 12mo, 4 00
Briggs's Elements of Plane Analytic Geometry. 12mo, 1 00
Compton's Manual of Logarithmic Computations. 12mo, 1 50
Davis's Introduction to the Logic of Algebra. 8vo, 1 50
* Dickson's College Algebra. . . . . Large 12mo, 1 50
* Introduction to the Theory of Algebraic Equations. . . . . Large 12mo, 1 25
Emch's Introduction to Projective Geometry and its Applications. 8vo, 2 50
Halsted's Elements of Geometry. 8vo, 1 75
Elementary Synthetic Geometry. 8vo, 1 50
Rational Geometry. 12mo, 1 75
* Johnson's (J. B.) Three-place Logarithmic Tables: Vest-pocket size. paper, 15
100 copies for 5 00
* Mounted on heavy cardboard, 8 × 10 inches, 25
10 copies for 2 00
Johnson's (W. W.) Elementary Treatise on Differential Calculus. . Small 8vo, 3 00
Elementary Treatise on the Integral Calculus . . . . . Small 8vo, 1 50
Johnson's (W. W.) Curve Tracing in Cartesian Co-ordinates. 12mo, 1 00
Johnson's (W. W.) Treatise on Ordinary and Partial Differential Equations. Small 8vo, 3 50
Johnson's (W. W.) Theory of Errors and the Method of Least Squares. 12mo, 1 50
* Johnson's (W. W.) Theoretical Mechanics 12mo, 3 00
Laplace's Philosophical Essay on Probabilities. (Truscott and Emory.). 12mo, 2 00
* Ludlow and Bass. Elements of Trigonometry and Logarithmic and Other Tables. 8vo, 3 00
Trigonometry and Tables published separately. . . . . Each, 2 00
* *Ludlow's* Logarithmic and Trigonometric Tables. 8vo. 1 00
Manning's Irrational Numbers and their Representation by Sequences and Series 12mo 1 25

Mathematical Monographs. Edited by Mansfield Merriman and Robert S. Woodward. ..... Octavo, each 1 00

No. 1. History of Modern Mathematics, by David Eugene Smith. No. 2. Synthetic Projective Geometry, by George Bruce Halsted. No. 3. Determinants, by Laenas Gifford Weld. No. 4. Hyperbolic Functions, by James McMahon. No. 5. Harmonic Functions, by William E. Byerly. No. 6. Grassmann's Space Analysis, by Edward W. Hyde. No. 7. Probability and Theory of Errors, by Robert S. Woodward. No. 8. Vector Analysis and Quaternions, by Alexander Macfarlane. No. 9. Differential Equations, by William Woolsey Johnson. No. 10. The Solution of Equations, by Mansfield Merriman. No. 11. Functions of a Complex Variable, by Thomas S. Fiske.

Maurer's Technical Mechanics. 8vo, 4 00
Merriman's Method of Least Squares. 8vo, 2 00
Rice and Johnson's Elementary Treatise on the Differential Calculus. Sm. 8vo, 3 00
Differential and Integral Calculus. 2 vols. in one. ..... Small 8vo, 2 50
Wood's Elements of Co-ordinate Geometry. 8vo, 2 00
Trigonometry: Analytical, Plane, and Spherical 12mo, 1 00

MECHANICAL ENGINEERING.

MATERIALS OF ENGINEERING, STEAM-ENGINES AND BOILERS.

Bacon's Forge Practice. 12mo, 1 50
Baldwin's Steam Heating for Buildings. 12mo, 2 50
Barr's Kinematics of Machinery. 8vo, 2 50
* Bartlett's Mechanical Drawing. 8vo, 3 00
* " " " Abridged Ed. 8vo, 1 50
Benjamin's Wrinkles and Recipes. 12mo, 2 00
Carpenter's Experimental Engineering. 8vo, 6 00
Heating and Ventilating Buildings. 8vo, 4 00
Cary's Smoke Suppression in Plants using Bituminous Coal. (In Preparation.)
Clerk's Gas and Oil Engine. ..... Small 8vo, 4 00
Coolidge's Manual of Drawing. ..... 8vo, paper, 1 00
Coolidge and Freeman's Elements of General Drafting for Mechanical Engineers ..... Oblong 4to, 2 50
Cromwell's Treatise on Toothed Gearing 12mo, 1 50
Treatise on Belts and Pulleys. 12mo, 1 50
Durley's Kinematics of Machines. 8vo, 4 00
Flather's Dynamometers and the Measurement of Power. 12mo, 3 00
Rope Driving. 12mo, 2 00
Gill's Gas and Fuel Analysis for Engineers. 12mo, 1 25
Hall's Car Lubrication. 12mo, 1 00
Hering's Ready Reference Tables (Conversion Factors). ..... 16mo, morocco, 2 50
Hutton's The Gas Engine. 8vo, 5 00
Jamison's Mechanical Drawing. 8vo, 2 50
Jones's Machine Design:
Part I. Kinematics of Machinery. 8vo, 1 50
Part II. Form, Strength, and Proportions of Parts. 8vo, 3 00
Kent's Mechanical Engineers' Pocket-book. ..... 16mo, morocco, 5 00
Kerr's Power and Power Transmission. 8vo, 2 00
Leonard's Machine Shop, Tools, and Methods. 8vo, 4 00
* Lorenz's Modern Refrigerating Machinery. (Pope, Haven, and Dean.) 8vo, 4 00
MacCord's Kinematics; or Practical Mechanism. 8vo, 5 00
Mechanical Drawing. 4to, 4 00
Velocity Diagrams. 8vo, 1 50

MacFarland's Standard Reduction Factors for Gases. 8vo, 1 50
Mahan's Industrial Drawing. (Thompson.) 8vo, 3 50
Poole's Calorific Power of Fuels. 8vo, 3 00
Reid's Course in Mechanical Drawing. 8vo, 2 00
Text-book of Mechanical Drawing and Elementary Machine Design. 8vo, 3 00
Richard's Compressed Air 12mo, 1 50
Robinson's Principles of Mechanism. 8vo, 3 00
Schwamb and Merrill's Elements of Mechanism. 8vo, 3 00
Smith's (O.) Press-working of Metals. 8vo, 3 00
Smith (A. W.) and Marx's Machine Design. 8vo, 3 00
Thurston's Treatise on Friction and Lost Work in Machinery and Mill Work. 8vo, 3 00
Animal as a Machine and Prime Motor, and the Laws of Energetics. 12mo, 1 00
Warren's Elements of Machine Construction and Drawing. 8vo, 7 50
Weisbach's Kinematics and the Power of Transmission. (Herrmann—Klein.). 8vo, 5 00
Machinery of Transmission and Governors. (Herrmann—Klein.). 8vo, 5 00
Wolff's Windmill as a Prime Mover. 8vo, 3 00
Wood's Turbines. 8vo, 2 50

MATERIALS OF ENGINEERING.

* Bovey's Strength of Materials and Theory of Structures. 8vo, 7 50
Burr's Elasticity and Resistance of the Materials of Engineering. 6th Edition. Reset. 8vo, 7 50
Church's Mechanics of Engineering. 8vo, 6 00
* Greene's Structural Mechanics 8vo, 2 50
Johnson's Materials of Construction. 8vo, 6 00
Keep's Cast Iron. 8vo, 2 50
Lanza's Applied Mechanics. 8vo, 7 50
Martens's Handbook on Testing Materials. (Henning.) 8vo, 7 50
Maurer's Technical Mechanics. 8vo, 4 00
Merriman's Mechanics of Materials. 8vo, 5 00
Strength of Materials 12mo, 1 00
Metcalf's Steel. A manual for Steel-users. 12mo, 2 00
Sabin's Industrial and Artistic Technology of Paints and Varnish. 8vo, 3 00
Smith's Materials of Machines. 12mo, 1 00
Thurston's Materials of Engineering. . . . . 3 vols., 8vo, 8 00
Part II. Iron and Steel. 8vo, 3 50
Part III. A Treatise on Brasses, Bronzes, and Other Alloys and their Constituents. 8vo, 2 50
Text-book of the Materials of Construction. 8vo, 5 00
Wood's (De V.) Treatise on the Resistance of Materials and an Appendix on the Preservation of Timber. 8vo, 2 00
Elements of Analytical Mechanics. 8vo, 3 00
Wood's (M. P.) Rustless Coatings: Corrosion and Electrolysis of Iron and Steel. 8vo, 4 00

STEAM-ENGINES AND BOILERS.

Berry's Temperature-entropy Diagram. 12mo, 1 25
Carnot's Reflections on the Motive Power of Heat. (Thurston.). . . . 12mo, 1 50
Dawson's "Engineering" and Electric Traction Pocket-book. . . . 16mo mor., 5 00
Ford's Boiler Making for Boiler Makers. 18mo, 1 00
*Goss's Loco*motive Sparks. 8vo, 2 00
Hemenway's Indicator Practice and Steam-engine Economy 12mo, 2 00

Hutton's Mechanical Engineering of Power Plants 8vo, 5 00
Heat and Heat-engines..... 8vo, 5 00
Kent's Steam boiler Economy..... 8vo, 4 00
Kneass's Practice and Theory of the Injector..... 8vo, 1 50
MacCord's Slide-valves..... 8vo, 2 00
Meyer's Modern Locomotive Construction..... 4to, 10 00
Peabody's Manual of the Steam-engine Indicator..... 12mo, 1 50
Tables of the Properties of Saturated Steam and Other Vapors 8vo, 1 00
Thermodynamics of the Steam-engine and Other Heat-engines..... 8vo, 5 00
Valve-gears for Steam-engines..... 8vo, 2 50
Peabody and Miller's Steam-boilers..... 8vo, 4 00
Pray's Twenty Years with the Indicator..... Large 8vo, 2 50
Pupin's Thermodynamics of Reversible Cycles in Gases and Saturated Vapors. (Osterberg.)..... 12mo, 1 25
Reagan's Locomotives Simple Compound, and Electric..... 12mo, 2 50
Rontgen's Principles of Thermodynamics. (Du Bois.)..... 8vo, 5 00
Sinclair's Locomotive Engine Running and Management..... 12mo, 2 00
Smart's Handbook of Engineering Laboratory Practice..... 12mo, 2 50
Snow's Steam-boiler Practice..... 8vo, 3 00
Spangler's Valve-gears..... 8vo, 2 50
Notes on Thermodynamics..... 12mo, 1 00
Spangler, Greene, and Marshall's Elements of Steam-engineering 8vo, 3 00
Thomas's Steam-turbines..... 8vo, 3 50
Thurston's Handy Tables..... 8vo, 1 50
Manual of the Steam-engine..... 2 vols., 8vo, 10 00
Part I. History, Structure, and Theory..... 8vo, 6 00
Part II. Design, Construction, and Operation..... 8vo, 6 00
Handbook of Engine and Boiler Trials, and the Use of the Indicator and the Prony Brake..... 8vo, 5 00
Stationary Steam-engines..... 8vo, 2 50
Steam-boiler Explosions in Theory and in Practice 12mo, 1 50
Manual of Steam-boilers, their Designs, Construction, and Operation..... 8vo, 5 00
Wehrenfenning's Analysis and Softening of Boiler Feed-water (Patterson) 8vo, 4 00
Weisbach's Heat, Steam, and Steam-engines. (Du Bois.)..... 8vo, 5 00
Whitham's Steam-engine Design..... 8vo, 5 00
Wood's Thermodynamics, Heat Motors, and Refrigerating Machines... 8vo, 4 00

MECHANICS AND MACHINERY.

Barr's Kinematics of Machinery..... 8vo, 2 50
* Bovey's Strength of Materials and Theory of Structures 8vo, 7 50
Chase's The Art of Pattern-making..... 12mo, 2 50
Church's Mechanics of Engineering..... 8vo, 6 00
Notes and Examples in Mechanics..... 8vo, 2 00
Compton's First Lessons in Metal-working..... 12mo, 1 50
Compton and De Groodt's The Speed Lathe..... 12mo, 1 50
Cromwell's Treatise on Toothed Gearing..... 12mo, 1 50
Treatise on Belts and Pulleys..... 12mo, 1 50
Dana's Text-book of Elementary Mechanics for Colleges and Schools.. 12mo, 1 50
Dingey's Machinery Pattern Making 12mo, 2 00
Dredge's Record of the Transportation Exhibits Building of the World's Columbian Exposition of 1893..... 4to half morocco, 5 00
du Bois's Elementary Principles of Mechanics:
Vol. I. Kinematics..... 8vo, 3 50
Vol. II. Statics..... 8vo, 4 00
Mechanics of Engineering. Vol. I..... Small 4to, 7 50
Vol. II..... Small 4to, 10 00
Durley's Kinematics of Machines..... 8vo, 4 00

Fitzgerald's Boston Machinist. 16mo, 1 00
Flather's Dynamometers, and the Measurement of Power. 12mo, 3 00
Rope Driving. 12mo, 2 00
Goss's Locomotive Sparks. 8vo, 2 00
* Greene's Structural Mechanics. 8vo, 2 50
Hall's Car Lubrication. 12mo, 1 00
Holly's Art of Saw Filing. 18mo, 75
James's Kinematics of a Point and the Rational Mechanics of a Particle. Small 8vo, 2 00
* Johnson's (W. W.) Theoretical Mechanics. 12mo, 3 00
Johnson's (L. J.) Statics by Graphic and Algebraic Methods. 8vo, 2 00
Jones's Machine Design:
Part I. Kinematics of Machinery. 8vo, 1 50
Part II. Form, Strength, and Proportions of Parts. 8vo, 3 00
Kerr's Power and Power Transmission. 8vo, 2 00
Lanza's Applied Mechanics. 8vo, 7 50
Leonard's Machine Shop, Tools, and Methods. 8vo, 4 00
* Lorenz's Modern Refrigerating Machinery. (Pope, Haven, and Dean.) 8vo, 4 00
MacCord's Kinematics; or, Practical Mechanism. 8vo, 5 00
Velocity Diagrams. 8vo, 1 50
* Martin's Text Book on Mechanics, Vol. I, Statics. 12mo, 1 25
Maurer's Technical Mechanics. 8vo, 4 00
Merriman's Mechanics of Materials. 8vo, 5 00
* Elements of Mechanics. 12mo, 1 00
* Michie's Elements of Analytical Mechanics. 8vo, 4 00
* Parshall and Hobart's Electric Machine Design. . . . . 4to, half morocco, 12 50
Reagan's Locomotives: Simple, Compound, and Electric. 12mo, 2 50
Reid's Course in Mechanical Drawing. 8vo, 2 00
Text-book of Mechanical Drawing and Elementary Machine Design. 8vo, 3 00
Richards's Compressed Air. 12mo, 1 50
Robinson's Principles of Mechanism. 8vo, 3 00
Ryan, Norris, and Hoxie's Electrical Machinery. Vol. I. 8vo, 2 50
Sanborn's Mechanics: Problems. . . . . Large 12mo, 1 50
Schwamb and Merrill's Elements of Mechanism. 8vo, 3 00
Sinclair's Locomotive-engine Running and Management. 12mo, 2 00
Smith's (O.) Press-working of Metals. 8vo, 3 00
Smith's (A. W.) Materials of Machines. 12mo, 1 00
Smith (A. W.) and Marx's Machine Design. 8vo, 3 00
Spangler, Greene, and Marshall's Elements of Steam-engineering. 8vo, 3 00
Thurston's Treatise on Friction and Lost Work in Machinery and Mill Work. 8vo, 3 00
Animal as a Machine and Prime Motor, and the Laws of Energetics. 12mo, 1 00
Warren's Elements of Machine Construction and Drawing. 8vo, 7 50
Weisbach's Kinematics and Power of Transmission. (Herrmann—Klein.) 8vo, 5 00
Machinery of Transmission and Governors. (Herrmann—Klein.) 8vo, 5 00
Wood's Elements of Analytical Mechanics. 8vo, 3 00
Principles of Elementary Mechanics. 12mo, 1 25
Turbines. 8vo, 2 50
The World's Columbian Exposition of 1893 . . . . . 4to, 1 00

METALLURGY.

Egleston's Metallurgy of Silver, Gold, and Mercury:
Vol. I. Silver. 8vo, 7 50
Vol. II. Gold and Mercury. 8vo, 7 50
Goesel's Minerals and Metals: A Reference Book. . . . . 16mo, mor. 3 00
** *Iles's Lead*-smelting. (Postage 9 cents additional.) 12mo, 2 50
Keep's Cast Iron. 8vo, 2 50

Kunhardt's Practice of Ore Dressing in Europe. 8vo, 1 50
Le Chatelier's High-temperature Measurements. (Boudouard—Burgess.) 12mo. 3 00
Metcalf's Steel. A Manual for Steel-users. 12mo, 2 00
Miller's Cyanide Process. 12mo, 1 00
Minet's Production of Aluminum and its Industrial Use. (Waldo.). . . . 12mo, 2 50
Robine and Lenglen's Cyanide Industry. (Le Clerc.). 8vo, 4 00
Smith's Materials of Machines. 12mo, 1 00
Thurston's Materials of Engineering. In Three Parts. 8vo, 8 00
Part II. Iron and Steel. 8vo, 3 50
Part III. A Treatise on Brasses, Bronzes, and Other Alloys and their Constituents. 8vo, 2 50
Ulke's Modern Electrolytic Copper Refining. 8vo, 3 00

MINERALOGY.

Barringer's Description of Minerals of Commercial Value. Oblong, morocco, 2 50
Boyd's Resources of Southwest Virginia. 8vo, 3 00
Map of Southwest Virignia. . . . . Pocket-book form. 2 00
Brush's Manual of Determinative Mineralogy. (Penfield.). 8vo, 4 00
Chester's Catalogue of Minerals. . . . . 8vo, paper, 1 00
Cloth, 1 25
Dictionary of the Names of Minerals. 8vo 3 50
Dana's System of Mineralogy. . . . . Large 8vo, half leather 12 50
First Appendix to Dana's New "System of Mineralogy." . . . . . Large 8vo, 1 00
Text-book of Mineralogy. 8vo, 4 00
Minerals and How to Study Them 12mo, 1 50
Catalogue of American Localities of Minerals. . . . . Large 8vo, 1 00
Manual of Mineralogy and Petrography. 12mo, 2 00
Douglas's Untechnical Addresses on Technical Subjects. 12mo, 1 00
Eakle's Mineral Tables. 8vo, 1 25
Egleston's Catalogue of Minerals and Synonyms. 8vo, 2 50
Goesel's Minerals and Metals: A Reference Book. . . . . 16mo, mor. 3 00
Groth's Introduction to Chemical Crystallography (Marshall). 12mo, 1 25
Hussak's The Determination of Rock-forming Minerals. (Smith.). Small 8vo, 2 00
Merrill's Non-metallic Minerals: Their Occurrence and Uses. 8vo, 4 00
* Penfield's Notes on Determinative Mineralogy and Record of Mineral Tests. 8vo, paper, 50
Rosenbusch's Microscopical Physiography of the Rock-making Minerals. (Iddings.). 8vo, 5 00
* Tillman's Text-book of Important Minerals and Rocks. 8vo, 2 00

MINING.

Beard's Ventilation of Mines. 12mo, 2 50
Boyd's Resources of Southwest Virginia. 8vo, 3 00
Map of Southwest Virginia. . . . . Pocket-book form. 2 00
Douglas's Untechnical Addresses on Technical Subjects. 12mo, 1 00
* Drinker's Tunneling, Explosive Compounds, and Rock Drills. . 4to, hf. mor., 25 00
Eissler's Modern High Explosives. 8vo 4 00
Goesel's Minerals and Metals: A Reference Book. . . . . 16mo, mor. 3 00
Goodyear's Coal-mines of the Western Coast of the United States. 12mo, 2 50
Ihlseng's Manual of Mining. 8vo, 5 00
** Iles's Lead-smelting. (Postage 9c. additional.). 12mo, 2 50
Kunhardt's Practice of Ore Dressing in Europe. 8vo, 1 50
Miller's Cyanide Process. 12mo, 1 00

O'Driscoll's Notes on the Treatment of Gold Ores. 8vo, 2 00
Robine and Lenglen's Cyanide Industry. (Le Clerc.). 8vo, 4 00
* Walke's Lectures on Explosives. 8vo, 4 00
Weaver's Military Explosives. 8vo, 3 00
Wilson's Cyanide Processes. 12mo, 1 50
Chlorination Process. 12mo, 1 50
Hydraulic and Placer Mining. 12mo, 2 00
Treatise on Practical and Theoretical Mine Ventilation. 12mo, 1 25

SANITARY SCIENCE.

Bashore's Sanitation of a Country House 12mo, 1 00
* Outlines of Practical Sanitation 12mo, 1 25
Folwell's Sewerage. (Designing, Construction, and Maintenance.). 8vo, 3 00
Water-supply Engineering. 8vo, 4 00
Fowler's Sewage Works Analyses 12mo, 2 00
Fuertes's Water and Public Health. 12mo, 1 50
Water-filtration Works. 12mo, 2 50
Gerhard's Guide to Sanitary House-inspection 16mo, 1 00
Goodrich's Economic Disposal of Town's Refuse. ..... Demy 8vo, 3 50
Hazen's Filtration of Public Water-supplies. 8vo, 3 00
Leach's The Inspection and Analysis of Food with Special Reference to State Control. 8vo, 7 50
Mason's Water-supply. (Considered principally from a Sanitary Standpoint) 8vo, 4 00
Examination of Water. (Chemical and Bacteriological.). 12mo, 1 25
Ogden's Sewer Design. 12mo, 2 00
Prescott and Winslow's Elements of Water Bacteriology, with Special Reference to Sanitary Water Analysis. 12mo, 1 25
* Price's Handbook on Sanitation. 12mo, 1 50
Richards's Cost of Food. A Study in Dietaries 12mo, 1 00
Cost of Living as Modified by Sanitary Science. 12mo, 1 00
Cost of Shelter 12mo, 1 00
Richards and Woodman's Air, Water, and Food from a Sanitary Standpoint. 8vo, 2 00
* Richards and Williams's The Dietary Computer. 8vo, 1 50
Rideal's Sewage and Bacterial Purification of Sewage. 8vo, 3 50
Turneaure and Russell's Public Water-supplies. 8vo, 5 00
Von Behring's Suppression of Tuberculosis. (Bolduan.). 12mo, 1 00
Whipple's Microscopy of Drinking-water. 8vo, 3 50
Winton's Microscopy of Vegetable Foods. 8vo, 7 50
Woodhull's Notes on Military Hygiene. 16mo, 1 50
* Personal Hygiene. 12mo, 1 00

MISCELLANEOUS.

De Fursac's Manual of Psychiatry. (Rosanoff and Collins.). ..... Large 12mo, 2 50
Ehrlich's Collected Studies on Immunity (Bolduan) 8vo, 6 00
Emmons's Geological Guide-book of the Rocky Mountain Excursion of the International Congress of Geologists. ..... Large 8vo, 1 50
Ferrel's Popular Treatise on the Winds. 8vo, 4 00
Haines's American Railway Management. 12mo, 2 50
Mott's Fallacy of the Present Theory of Sound 16mo, 1 00
Ricketts's History of Rensselaer Polytechnic Institute, 1824–1894. ..... Small 8vo, 3 00
Rostoski's Serum Diagnosis. (Bolduan.). 12mo, 1 00
Rotherham's Emphasized New Testament. ..... Large 8vo, 2 00

Steel's Treatise on the Diseases of the Dog.....8vo, 3 50
The World's Columbian Exposition of 1893.....4to, 1 00
Von Behring's Suppression of Tuberculosis. (Bolduan.).....12mo, 1 00
Winslow's Elements of Applied Microscopy.....12mo, 1 50
Worcester and Atkinson. Small Hospitals, Establishment and Maintenance; Suggestions for Hospital Architecture: Plans for Small Hospital. 12mo, 1 25

HEBREW AND CHALDEE TEXT-BOOKS.

Green's Elementary Hebrew Grammar.....12mo, 1 25
Hebrew Chrestomathy.....8vo, 2 00
Gesenius's Hebrew and Chaldee Lexicon to the Old Testament Scriptures. (Tregelles.).....Small 4to, half morocco, 5 00
Letteris's Hebrew Bible.....8vo, 2 25

NSERVED
COLLEGE